

THANK YOU

Millimeter Wave Systems: 110, 120, 170, and 250 GHz

CAUTION

Proper connector care and connection techniques are critical for accurate and repeatable measurements. Before removing the ESD protective caps from your equipment, refer to the Critical Connector Care document (<https://www.keysight.com/us/en/assets/9018-04357/user-manuals/9018-04357.pdf>).

1. Before beginning the assembly of your millimeter wave system, verify that the PNA is functioning properly using the procedure in the “Installation and Quick Start Guide, for PNA Series Network Analyzers” included with the PNA shipment documentation. (To view this electronically, go to <https://www.keysight.com/us/en/assets/9018-05093/quick-start-guides/9018-05093.pdf>)
2. You must download the millimeter wave system installation guide to assemble the rest of your system. Choose one of the following links:

For the factory-configured N5290A/91A Millimeter Wave Systems, 900 Hz-110/120 GHz, Installation Guide, refer to <https://www.keysight.com/us/en/assets/9018-04581/installation-guides/9018-04581.pdf>, or use the QR code provided here.



For the self-configured Millimeter Wave Systems, 900 Hz-110/120/170/250 GHz, or Banded Millimeter Wave Systems Installation Guide, refer to <https://www.keysight.com/us/en/assets/9018-70036/installation-guides/9018-70036.pdf>, or use the QR code provided here.



www.keysight.com



Find a Manual · Register Your Cal Kit
Browse Application Notes
Request Repair or Calibration
View Discussion Forums · Updates

This information is subject to
change without notice.
© Keysight Technologies 2025
Edition 1, September 2025
N5292-90003