
Keysight i3070 In-Circuit Test Software

Single/Triple-Redundant Network License Server

Notices

© Keysight Technologies 2023-2025

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies as governed by United States and international copyright laws.

Edition

Edition 3, October 2025

Published by:
Keysight Technologies
1400 Fountaingrove Parkway
Santa Rosa, CA 95403-1738
United States

Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT WILL CONTROL.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly, Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at <http://www.keysight.com/find/sweula>. The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) relinquish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software.

Safety Notices

WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

CAUTION

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.


i3070 License Server Setup

Overview	4
License Server Requirements	5
Setting Up a Single License Server	6
Setting Up Triple-Redundant Servers	7
Stopping the License Server	11

Overview

Floating licenses reside on a license server and are checked out for use on individual workstations, then returned when no longer needed so that they can be used on another workstation.

You can have a single license server or a triple server setup. Configuring triple-redundant license servers (three servers on the same network) allows your licensed products to continue to operate even if one of the servers goes down.

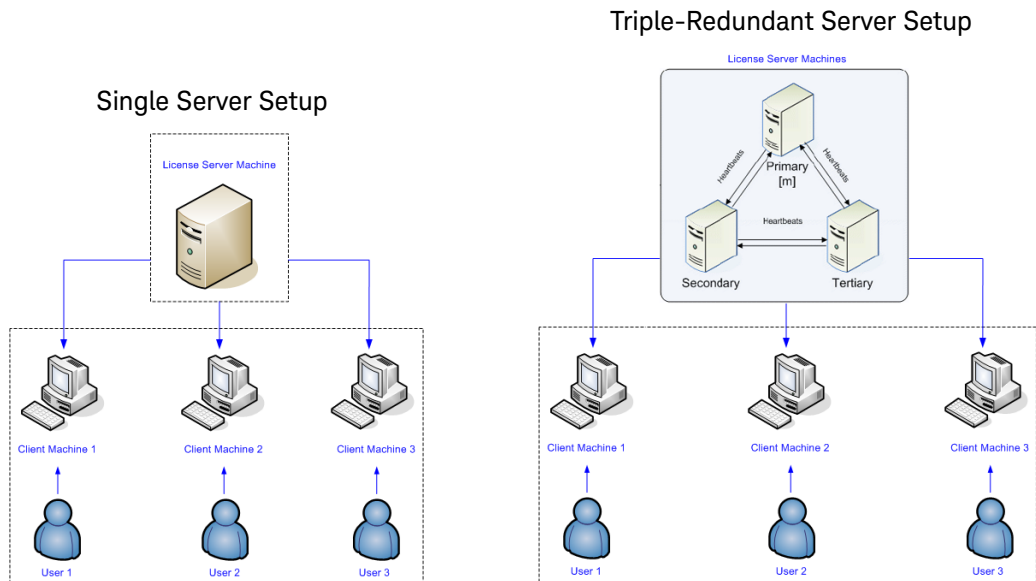

To set up the floating license server(s), you must have the appropriate license files issued for either single server or triple server machines, based on the host IDs that you provided when redeeming the licenses.

Obtaining the Host ID

To obtain the host ID, type `getmac /v /fo list` in a Command Prompt window. The host ID is listed as the Physical Address of the Ethernet network adapter.

```
C:\>getmac /v /fo list
Connection Name: Ethernet
Network Adapter: Intel(R) Ethernet I210-T1 GbE NIC
Physical Address: 68-05-CA-8D-59-2B
Transport Name: \Device\Tcpip_{5A595A44-C6A9-4A79-A9E9-09BF2E4A599D}
```

License Server Requirements

Identify the machine(s) to be set up as network license servers.

- Make sure they are stable.
- Do not use systems that are frequently rebooted or shut down.
- When setting up triple-redundant servers, it is best to obtain host IDs of the same type for all three machines. Issues can arise if different host ID types are used in the license server configuration.

Ensure that the servers can communicate with each other. The setup will fail if machine communication cannot be established. (For example, you may need to check the firewall settings.)

Hardware requirements

- Minimum 4 GB memory
- Minimum 500 GB disk space

Software requirements: Single server

Keysight Software Manager Utility is supported on:

- Windows 11
- Windows 10 (x64), 22H2 or later

Software requirements: Triple servers

Keysight license server software (lmgrd.exe and agileesofd.exe) is supported on:

- Windows 11
- Windows 10 (64-bit, x64)

NOTE

Installation Notes

- Be sure the machine is not already set up as a server machine for any other products. Do not use the same machine as a floating license server for different products.

You can use an existing server machine only if it is a server for other i3070 licenses but not any other products. Determine the version and location of the license server software before you proceed.

- Do not put the license file on a network file server. If you do this, you lose the advantages of having failover protection because the file server becomes a possible single point of failure.
 - The license server manager cannot start vendor daemons from multiple software publishers in a triple-redundant server setup. If any system must run more than one vendor daemon, then the license administrator must run separate instances of the license server to support the other vendor daemons. Make sure that the port numbers do not clash.
-

Setting Up a Single License Server

If any the following software are installed, remove them first:

- Keysight Network License Manager,
- Keysight License Manager 5,
- Keysight License Manager 6, or
- Keysight Floating License Manager.

Then use Keysight Software Manager Utility to set up a single license server.

1 Copy your i3070 license file(s) to a temporary folder on the server machine.

2 Install Keysight Software Manager Utility by running:
KeysightSoftwareManagerUtility-x.x.x-windows


You can find this utility in the **LicenseSoftware** folder on the Keysight i3070 installation disk; **x.x.x** is the version of the i3070 software included in that disk.

3 Launch **Keysight Software Manager Utility** (**Start > Keysight Software Manager Utility**).

4 Click **Add a License File**.

5 Click **Browse** to find and select your license file. Then click **Add Now**.

You should see the following status:

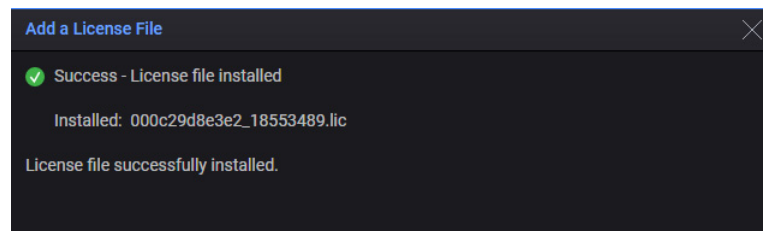

You can view the licenses on the **View Licenses** tab.

Once the server setup is done, set up the client machines which will access the floating licenses. See the *i3070 Software Installation Guide*.

Troubleshooting

If the floating licenses cannot be detected on the client system, follow these steps:

- 1 Check the license server status on the **View Licenses** tab. The status should be **UP**.
- 2 If the status is **NOT STARTED**, click **Repair Windows Service**, and check the status again.
- 3 Restart the server if the problem persists.

Setting Up Triple-Redundant Servers

Determine location of license server software and i3070 licenses, if any

License server software version

If the intended server machine is already running the Keysight license server software, ensure that the software version is 2023.03.23 or later, to be compatible with i3070 In-circuit Software release 11.10p and later.

- 1 Check the current license server software version:
Locate the ReadMe file in **C:\Program Files\Common Files\Keysight\Agileesofd** and look for the **file version** under **Keysight Licensing agileesofd Vendor Daemon**.
- 2 If the Keysight license server software is an earlier version, install the license server **agileesofd_xxx.xx.xx_win64.zip** found under the **LicenseSoftware** folder on the Keysight i3070 installation disk.

Location of license server software and i3070 licenses

Then determine the executable and license file locations on the server machine as described below.

- 1 Run **Task Manager** and look for an **agileesofd** process that is running. It may be listed as **VendorDaemon agileesofd**.
- 2 Right-click the process in Task Manager and select **Properties**. Take note of the full path, shown in the **Location** field.
- 3 In a Command Prompt window, go to that location and run **lmtools.exe**.
 - a In the LMTOOLS window, select the **Config Services** tab and take note of the path to the license file. This is where you should place any new licenses.
 - b Close LMTOOLS.
- 4 In Task Manager, right-click the **agileesofd** process and select **End Task**.

NOTE

Use the existing paths you've found for the executable and license files, instead of the recommended locations in the server setup procedures that follow.

Step 1: Copy license and options files

- 1 Edit each i3070 license file to change the following SERVER line properties:
 - Hostname for the three servers.
 - Port number, which can be changed if needed (between 0 and 64000). However, ensure that the same port number is specified for all three servers.
 - If you have multiple license files for the product, also ensure that they all specify the same port number.

Example:

```
SERVER PrimaryServer 17003456 27009 PRIMARY_IS_MASTER
SERVER SecondaryServer 17004355 27009
SERVER TertiaryServer 17007ea8 27009
```

NOTE

Do not change the host ID as the license file is issued to the server machines based on their host IDs.

- 2 Use a text editor to create an options file named **agileesofd.opt** in the same folder. Enter the following command in the file and save it:
TIMEOUTALL 1800
- 3 Copy the i3070 license files and the agileesofd.opt file to a license folder on each of the three server machines, for example,
C:\ProgramData\Keysight\Licensing\Licenses\Server

Step 2: Install Keysight license server software

The license server software can be found on the Keysight i3070 installation disk: **LicenseSoftware\agileesofd_xxxx.xx.xx_win64.zip** (for 64-bit Windows)

- 1 On the server machine, extract the files to the folder
C:\Program Files\Common Files\Keysight\Licensing\Agileesofd
- 2 Add (or locate) the system environment variable **AGILEESOFD_DEBUG_MODE** a
- 3 nd set its value to **ON**.

Step 3: Configure Windows service to start license server software


Configure a Windows service to automatically start the Keysight license server manager (lmgrd) and Keysight vendor daemon (agileesofd). You must have administrator privileges to configure a Windows service.

However, the service will run under the local system account as the special Local Server user, which does not have special system privileges. Therefore, ensure that:

- The log file is in a location that is writable by all users. Otherwise, the service will immediately exit, and will not indicate any errors even when there are.
- The license files are in a location that is readable by all users. Otherwise the log file will contain an error indicating that the license file could not be found.

Configure the Windows service

- 1 In a Command Prompt window, run `lmtools.exe` from
`C:\Program Files\Common Files\Keysight\Licensing\Agileesofd`
- 2 On the **Service/License File** tab, select **Configuration using Services**.

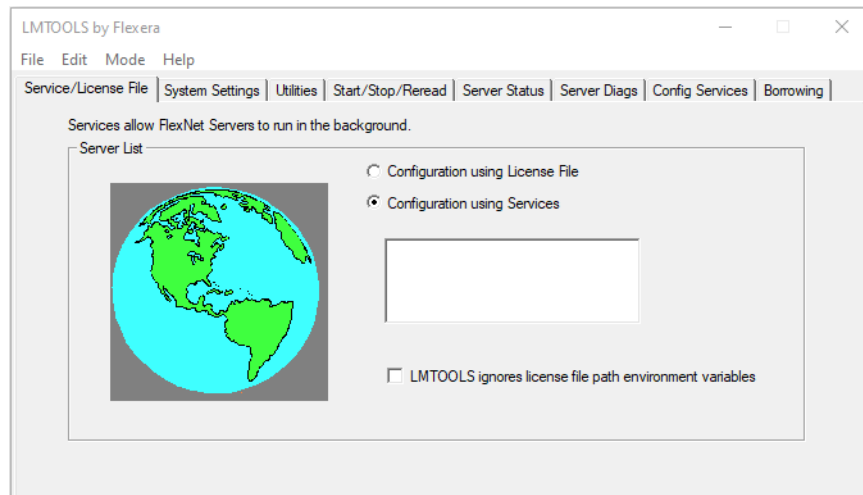

- 3 On the **Config Services** tab:
 - a Select a **Service Name** such as **Keysight License Server**.
 - b Click the **Browse** buttons to specify the paths to the following files.

Example:


lmgrd.exe C:\Program Files\Common Files\Keysight\Licensing\Agileesofd\lmgrd.exe

license file C:\ProgramData\Keysight\Licensing\Licenses\Server\license.lic

If you have license files for multiple Keysight products, include them all.

debug log C:\ProgramData\Keysight\Licensing\Log\i3070LicenseServer.log


- c Also select **Start Server at Power Up** and **Use Services**.
- d Click **Save Service**.

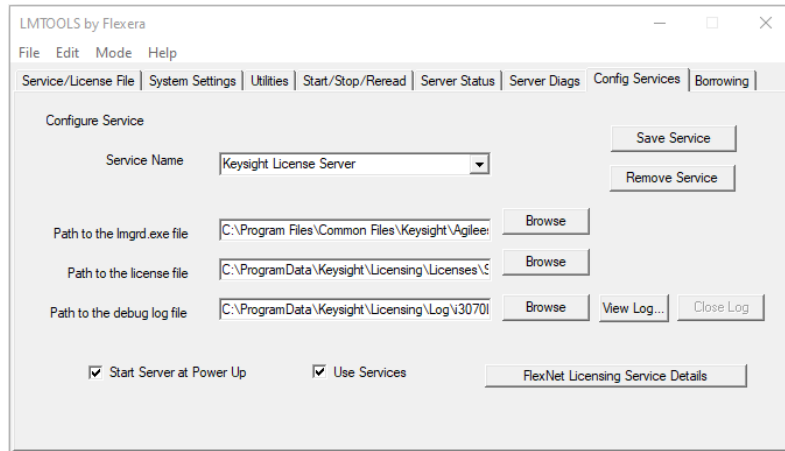

- 4 On the **Start/Stop/Reread** tab, check that the new license service is listed.
- 5 Repeat the above steps to set up the Windows service on the other servers.

Start the license servers

- 1 On the **Start/Stop/Reread** tab, click **Start Server** to start the license servers in the following order: primary, secondary, and then tertiary (follow the order as they appear in the license files). Ensure that you start the designated primary server first.
- 2 To verify that the license server manager and Keysight vendor daemon are running, select the **Config Services** tab again and click **View Log**. The log window will display the status.
- 3 To verify that the licenses have been successfully installed, select the **Server Status** tab. Click **Perform Status Enquiry**.

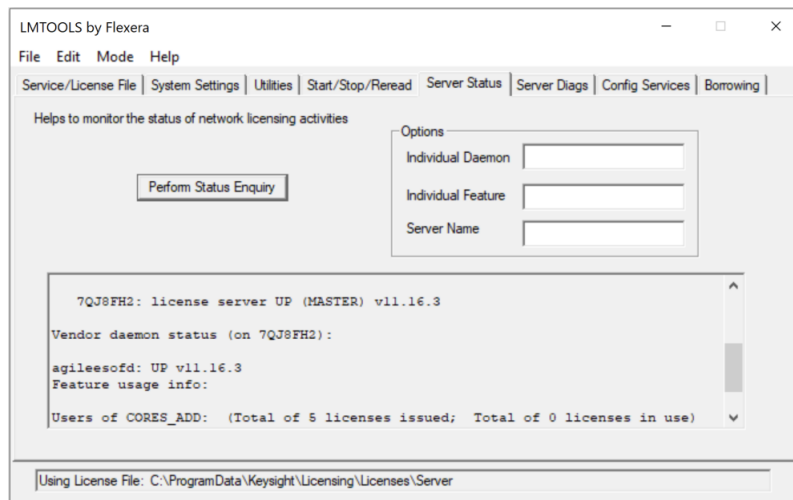

Once the server setup is done, set up the client machines which will access the floating licenses. See the *i3070 Software Installation Guide*.

Stopping the License Server

In a Command Prompt window, run the following command from
C:\Program Files\Common Files\Keysight\Licensing\Agileesofd:
`lmutil lmdown -c <license folder>`

where <license folder> is the location of the license files

For example:

```
lmutil lmdown -c C:\ProgramData\Keysight\Licensing\Licenses\Server
```

