


Prerequisites


1. Empty Floppy Disk - Formatted FAT - 1.44MB – Qty. 1
2. Floppy Disk Drive (FDD) – Qty. 1 (E5061A/ E5062A built in)

Procedure to create E5061A/ E5062A Recovery Disk

1. Click “Floppy Image.exe”.
2. Click “Browse”.

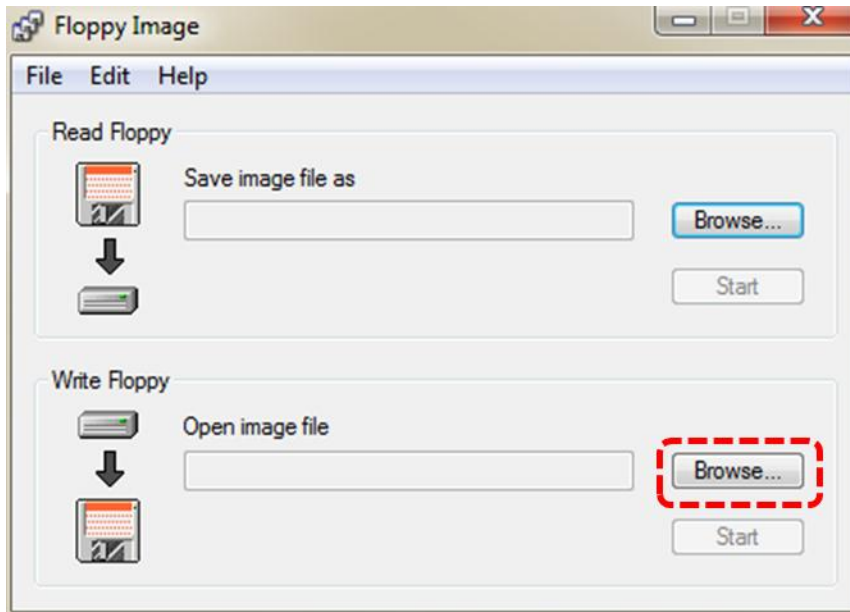

3. Navigate to the selected directory. Identify the “E5061A_62A RECOVERY.imz”. Select file name, then click “Open”.

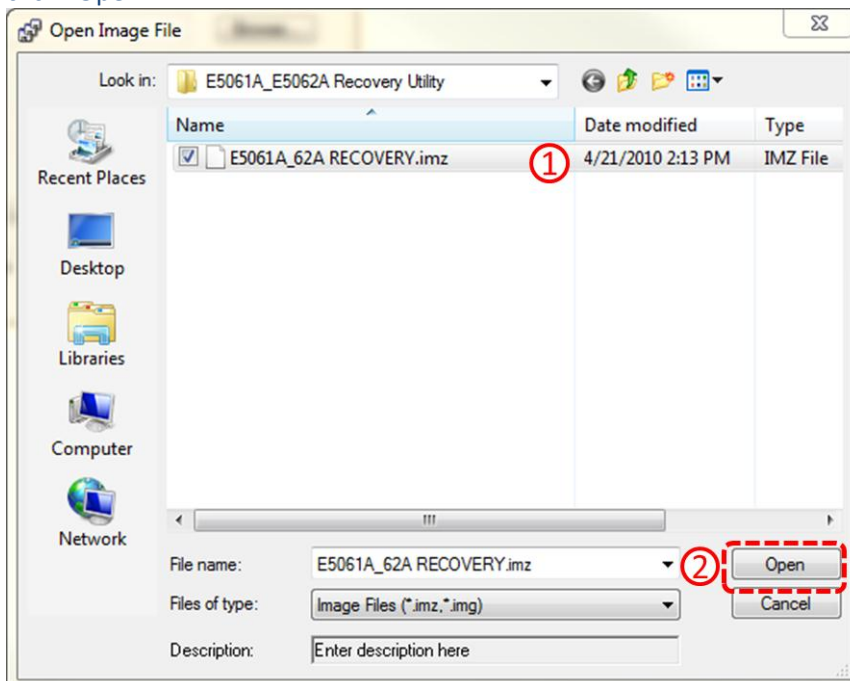

4. Insert a formatted empty diskette into floppy disk drive followed by clicking the “Start” button.

