
D9020USBC USB3.2 Compliance Test Application

Notices

© Keysight Technologies 2025

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies as governed by United States and international copyright laws.

Software Version

3.54.3.0

Edition

August 2025

Keysight Technologies, Inc.
1900 Garden of the Gods Road
Colorado Springs, CO 80907 USA

Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE

TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT WILL CONTROL.

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly, Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at <http://www.keysight.com/find/sweula>. The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinquish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the U.S. government acquires no

greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data.

Safety Notices

CAUTION

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

USB3.2 Test Compliance Application—At a Glance

The Keysight D9020USBC USB3.2 Test Compliance Application helps you verify the USB3.2 device complies to the electrical requirements on the SuperSpeed physical layer as defined in the USB3.2 specification, with the Keysight Infiniium digital storage oscilloscopes. The USB3.2 Test Compliance Application:

- Lets you select individual or multiple tests to run.
- Lets you identify the device being tested and its configuration.
- Shows you how to make oscilloscope connections to the device under test.
- Automatically checks for proper oscilloscope configuration.
- Automatically sets up the oscilloscope for each test.
- Provides detailed information for each test that has been run and lets you specify the thresholds at which marginal or critical warnings appear.
- Creates a printable HTML report of the tests that have been run.

NOTE

The tests performed by the USB3.2 Test Compliance Application are intended to provide a quick check of the electrical health of the DUT. This testing is not a replacement for an exhaustive test validation plan.

For more information, see:

- **Chapter 1**, “Installing the USB3.2 Test Compliance Application,” starting on page 9.
- **Chapter 2**, “Preparing to Take Measurements,” starting on page 15.
- **Chapter 3**, “LFPS Tests,” starting on page 25.
- **Chapter 4**, “5G Tests,” starting on page 33.
- **Chapter 5**, “10G Tests,” starting on page 71.

See Also

Compliance testing measurements are described in the *Universal Serial Bus 3.2 Specification, Revision 1.0*. For more information, see the USB3.2 standards web site at "www.usb.org".

Contents

USB3.2 Test Compliance Application—At a Glance	3
------------------------------------------------	---

1 Installing the USB3.2 Test Compliance Application

Installing the Software	10
Installing the License Key	11
Using Keysight License Manager 5	11
Using Keysight License Manager 6	12

2 Preparing to Take Measurements

Required Equipment and Software	16
Calibrating the Oscilloscope	17
Connecting the USB 3.2 Test Fixture	18
Starting the USB3.2 Test Compliance Application	21
Type-C Controller	23

3 LFPS Tests

Transmitter Low Frequency Periodic Signaling (LFPS) Tests	26
------------------------------------------------------------------	----

4 5G Tests

5G Transmitter SSC Tests	34
Unit Interval (with SSC) Test	36
SSC Deviation Test, SSC Modulation Rate Test, SSC Slew Rate Test	37
5G Transmitter Eye Far End (TP4) Tests	39
5G Far End Random Jitter Test	41
5G Far End Maximum Deterministic Jitter, 5G Far End Total Jitter At BER-12, 5G Far End Template Test, 5G Far End Differential Output Voltage Test	44
5G Far End Maximum Deterministic Jitter and 5G Far End Total Jitter At BER-12 Test	47
5G Far End Template Test and 5G Far End Differential Output Voltage Test	48
5G Transmitter Eye Short Channel (TP2) Tests	49
5G Short Channel Random Jitter Test	51
5G Short Channel Maximum Deterministic Jitter, 5G Short Channel Total Jitter At BER- 12, 5G Short Channel Template Test and 5G Short Channel Differential Output Voltage	54
5G Transmitter Eye Near End (TP1) Tests	57
5G Near End Random Jitter Test	59
5G Near End Maximum Deterministic Jitter and 5G Near End Total Jitter At BER-6 Test	60
5G Near End Template Test and 5G Near End Differential Output Voltage Test	61
5G BLR Clock Switch Test	62

5G Jitter Transfer Function Test	64
5G Transmitter Voltage Level Tests	66

5 10G Tests

10G Skew Measurement for Retimer Test	72
10G SCD and LBPS Tests	75
10G LBPS Tests	76
10G SuperSpeedPlus Capability Declaration (SCD) Tests	78
10G Deemphasis and Preshoot Tests	83
10G Transmitter SSC Tests	88
Unit Interval (with SSC) Test	90
SSC Deviation Test, SSC Modulation Rate Test, SSC df/dt Test	91
10G Eye Measurement Test	95
10G Transmitter Random Jitter Tests	97
10G Random Jitter Test	98
10G Transmitter Eye Far End (TP4) Tests	101
10G Far End Maximum Deterministic Jitter, 10G Far End Total Jitter At BER-6, 10G Far End Template Test, Extrapolated Eye Height, Minimum Eye Width	103
10G Far End Maximum Deterministic Jitter and 10G Far End Total Jitter At BER-6 Test	106
10G Far End Template Test and 10G Far End Differential Output Voltage Test	107
10G Transmitter Eye Short Channel (TP2) Tests	109
10G Short Channel Template Test, 10G Short Channel Differential Output Voltage, 10G Short Channel Extrapolated Eye Height and 10G Short Channel Minimum Eye Width	111
10G Transmitter Eye Near End (TP1) Tests	113
10G Near End Random Jitter Test	115
10G Near End Maximum Deterministic Jitter and 10G Near End Total Jitter At BER-6 Test	115
10G Near End Template Test and 10G Near End Differential Output Voltage Test	117

A Appendix

Test Connection	120
Required fixture for connections	120
Compliance Pattern used in USB3 Tx Tests	121
Compliance Pattern Sequence	127
Mask Template	128
InfiniiSim Setup for 5G	129
InfiniiSim Setup for 10G	130

Index

1 Installing the USB3.2 Test Compliance Application

Installing the Software / 10
Installing the License Key / 11

If you purchased the D9020USBC USB3.2 Test Compliance Application separately from your oscilloscope, you need to install the software and license key.

Installing the Software

- 1 Make sure you have the minimum required version of the Infiniium oscilloscope software.
The compliance test application's release notes file describes the minimum required version.
To check your current version of Infiniium oscilloscope software, choose **Help > About Infiniium...** from the main menu.
- 2 To obtain the USB3.2 Compliance Test Application, please go to Keysight website:
<http://www.keysight.com/find/D9020USBC>
- 3 The link for USB3.2 Compliance Test Application will appear. Double-click it and follow the instructions to download and install the application software.
Be sure to accept the installation of the .NET Framework software; it is required in order to run the USB3.2 Compliance Test Application.

Installing the License Key

To procure a license, you require the Host ID information that is displayed in the Keysight License Manager application installed on the same machine where you wish to install the license.

Using Keysight License Manager 5

To view and copy the Host ID from Keysight License Manager 5:

- 1 Launch Keysight License Manager on your machine, where you wish to run the Test Application and its features.
- 2 Copy the Host ID that appears on the top pane of the application. Note that x indicates numeric values.

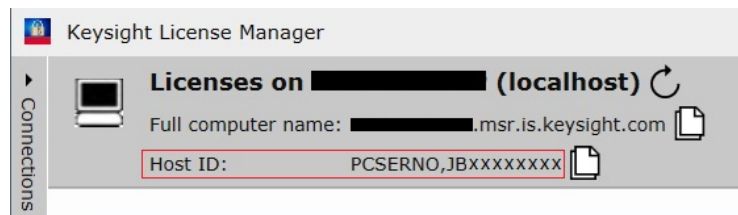


Figure 1 Viewing the Host ID information in Keysight License Manager 5

To install one of the procured licenses using Keysight License Manager 5 application,

- 1 Save the license files on the machine, where you wish to run the Test Application and its features.
- 2 Launch Keysight License Manager.
- 3 From the configuration menu, use one of the options to install each license file.

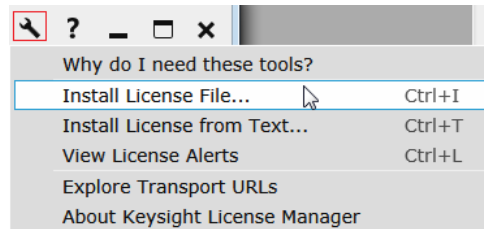


Figure 2 Configuration menu options to install licenses on Keysight License Manager 5

For more information regarding installation of procured licenses on Keysight License Manager 5, refer to [Keysight License Manager 5 Supporting Documentation](#).

Using Keysight License Manager 6

To view and copy the Host ID from Keysight License Manager 6:

- 1 Launch Keysight License Manager 6 on your machine, where you wish to run the Test Application and its features.
- 2 Copy the Host ID, which is the first set of alphanumeric value (as highlighted in [Figure 3](#)) that appears in the Environment tab of the application. Note that x indicates numeric values.

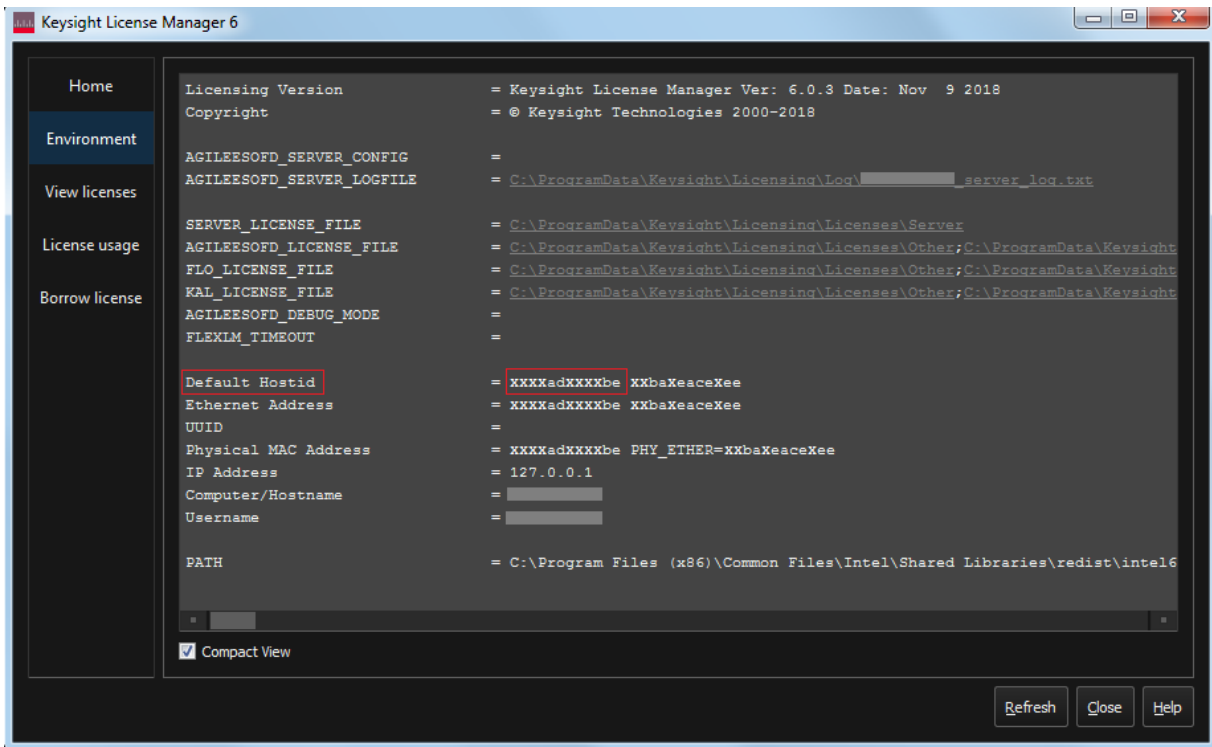


Figure 3 Viewing the Host ID information in Keysight License Manager 6

To install one of the procured licenses using Keysight License Manager 6 application,

- 1 Save the license files on the machine, where you wish to run the Test Application and its features.
- 2 Launch Keysight License Manager 6.
- 3 From the Home tab, use one of the options to install each license file.

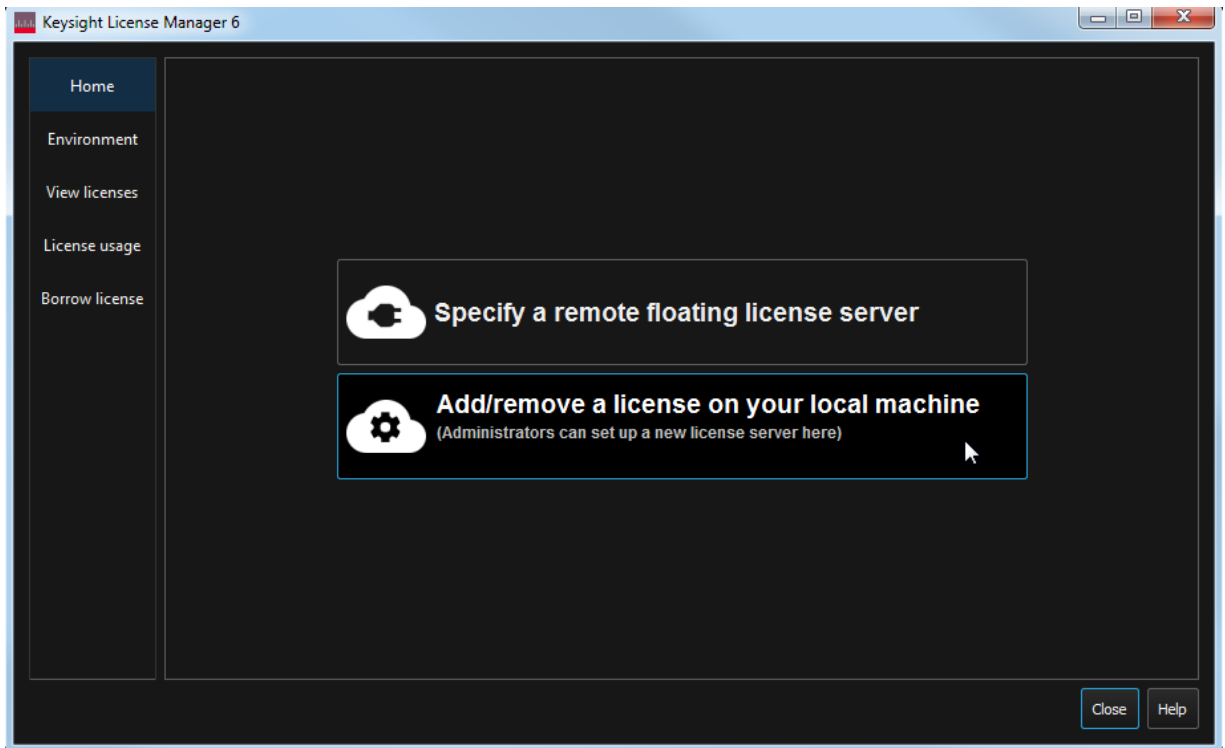


Figure 4 Home menu options to install licenses on Keysight License Manager 6

For more information regarding installation of procured licenses on Keysight License Manager 6, refer to [Keysight License Manager 6 Supporting Documentation](#).

2 Preparing to Take Measurements

Required Equipment and Software / 16
Calibrating the Oscilloscope / 17
Connecting the USB 3.2 Test Fixture / 18
Starting the USB3.2 Test Compliance Application / 21

Before running the automated tests, you need to acquire the required equipment and software, and you should calibrate the oscilloscope. After the oscilloscope has been calibrated, you are ready to start the USB3.2 Test Compliance Application and perform measurements.

Required Equipment and Software

In order to run the USB3.2 Test Compliance Application, you need the following equipment and software:

- D9020USBC USB3.2 Test Compliance Application software and license
- E2688A Serial Data Analysis and Clock Recovery software and license (optional)
- N5401A EZJIT Plus software and license (optional)
- Use one of the following Oscilloscope models:
 - Keysight V-Series Oscilloscopes (13 - 33 GHz)
 - Keysight UXR Oscilloscopes (13 - 33 GHz) or (40 - 100 GHz)

NOTE

Keysight recommends using 13 GHz and higher bandwidth oscilloscope with at least 1M memory depth to run D9020USBC USB3.2 tests. The minimum required Infiniium oscilloscope software version is described in the compliance test application release notes. Keysight also recommends using a second monitor to view the automated test application.

- Matlab Runtime Version R2017b (9.3)
- Clock Switch Analysis for Sigtest Update

NOTE

For more info on the two points above, please see Online Help > **Setting Up the Test Environment** page > **Setting Up Test Information** page > **BLR Mode - System Configuration** section.

- Keyboard, quantity = 1 (provided with Keysight Infiniium oscilloscope).
- Mouse, quantity = 1 (provided with Keysight Infiniium oscilloscope).
- Precision 3.5 mm BNC to SMA male adapter, Keysight p/n 54855-67604, qty = 2 (provided with the Keysight 54855A and 80000B series oscilloscopes)
- 50-ohm Coax Cable with SMA Male Connectors – 24-inch or less RG-316/U or similar, qty = 2, matched length
- 1169A Infiniimax probe, quantity = 2.
- U7242A USB 3.0 test fixture.

NOTE

At least 16 GHz bandwidth is required to run Gen2 tests.

NOTE

USB3.2 Compliance Test Application supports 2 channel scope. In two channel mode, switch matrix is not available.

Calibrating the Oscilloscope

If you have not already calibrated the oscilloscope, refer to the documentation related to Keysight 90000A Series Infiniium Oscilloscopes and its compatible probes to know about the calibration procedures.

NOTE

If the ambient temperature changes more than 5 degrees Celsius from the calibration temperature, internal calibration should be performed again. The delta between the calibration temperature and the present operating temperature is shown in the **Utilities > Calibration** menu.

NOTE

If you switch cables between channels or other oscilloscopes, it is necessary to perform cable and probe calibration again. Keysight recommends that, once calibration is performed, you label the cables with the channel for which they were calibrated.

Connecting the USB 3.2 Test Fixture


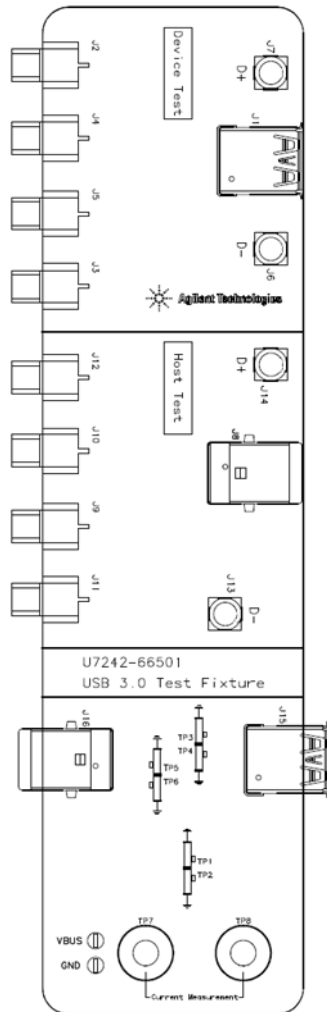


Figure 5 Block Diagram of U7242A USB 3.0 Test Fixture

The U7242A USB 3.0 test fixture is required to perform the USB3.2 electrical compliance test measurements. The fixture helps you to easily access the USB 3.0 test signals.

The connection to this test fixture depends on the type of device under test (DUT):

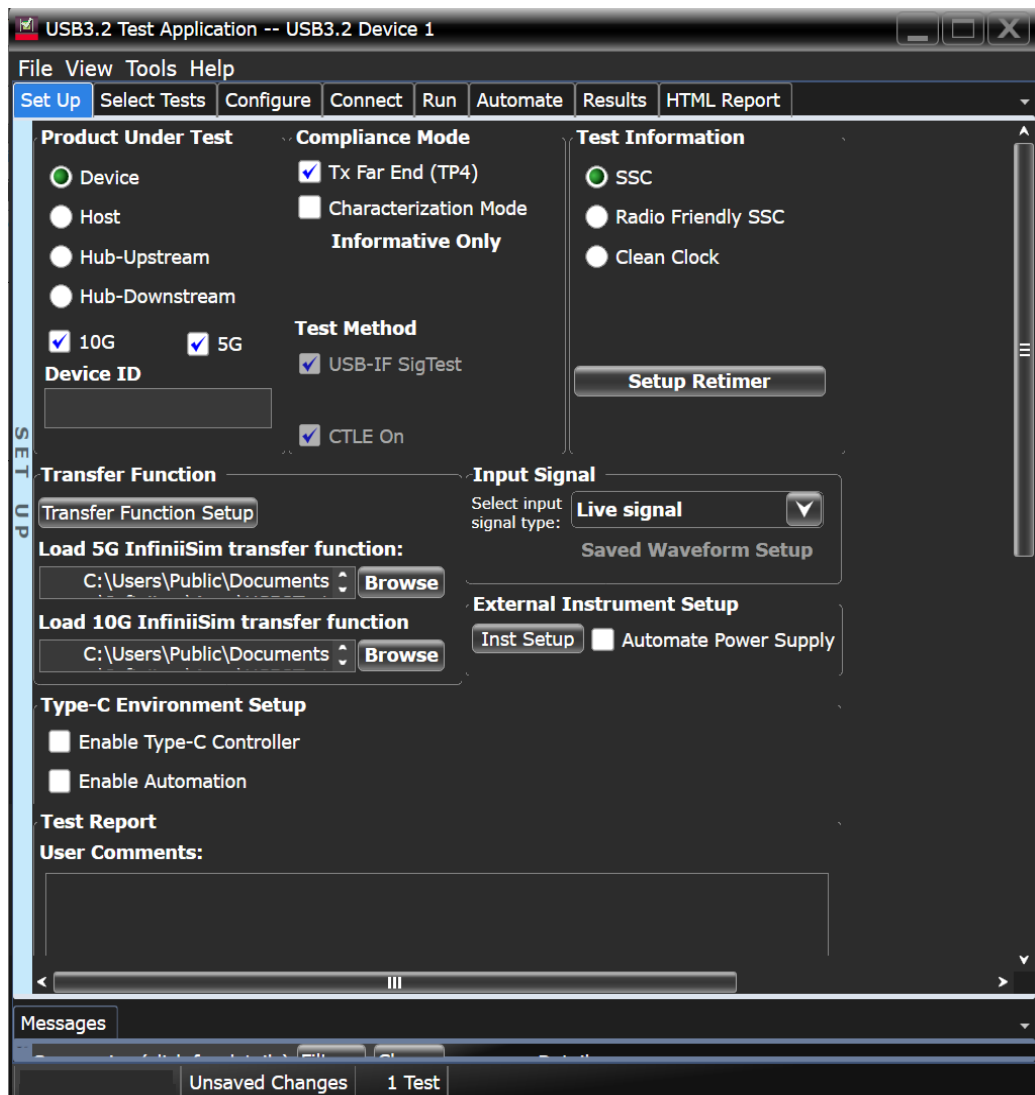

For Device test:

- 1 Connect DUT to J1 by using 4 inches USB 3.0 Standard-A to Standard-B cable.
- 2 Connect J6 and J7 to the oscilloscope to measure USB 2.0 signal.
- 3 Connect J2 and J3 to the oscilloscope to measure the SuperSpeed (USB 3.0) Transmitter signal.
- 4 Connect J4 and J5 to the oscilloscope to measure the SuperSpeed (USB 3.0) Receiver signal.

For Host test:

- 1 Connect DUT to J8 by using 4 inches USB 3.0 Standard-A to Standard-B cable.
- 2 Connect J13 and J14 to the oscilloscope to measure USB 2.0 signal.
- 3 Connect J11 and J12 to the oscilloscope to measure the SuperSpeed (USB 3.0) Transmitter signal.
- 4 Connect J9 and J10 to the oscilloscope to measure the SuperSpeed (USB 3.0) Receiver signal.

For Hub Upstream test:

- 1 Follow the connection as per the Device test.

For Hub Downstream test:

- 1 Follow the connection as per the Host test.

Starting the USB3.2 Test Compliance Application

Ensure that the USB3.2 Device Under Test (DUT) is operating and set to desired test modes.

To start the USB3.2 Test Compliance Application, from the Infiniium Oscilloscope's main menu, select **Analyze > Automated Test Apps > D9020USBC USB3 Test App**.

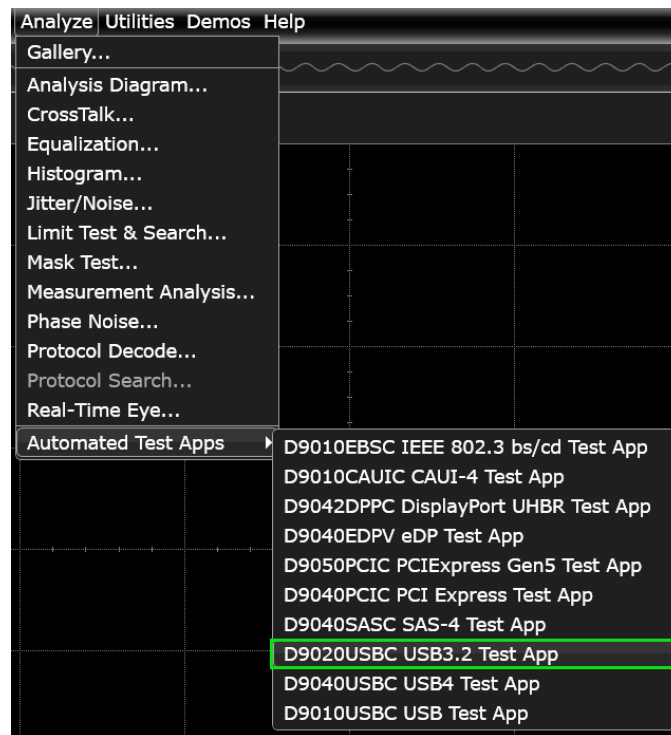


Figure 6 Starting the D9020USBC USB3 Test App

The USB3.2 Test Compliance Application launches with the **Set Up** tab as default.

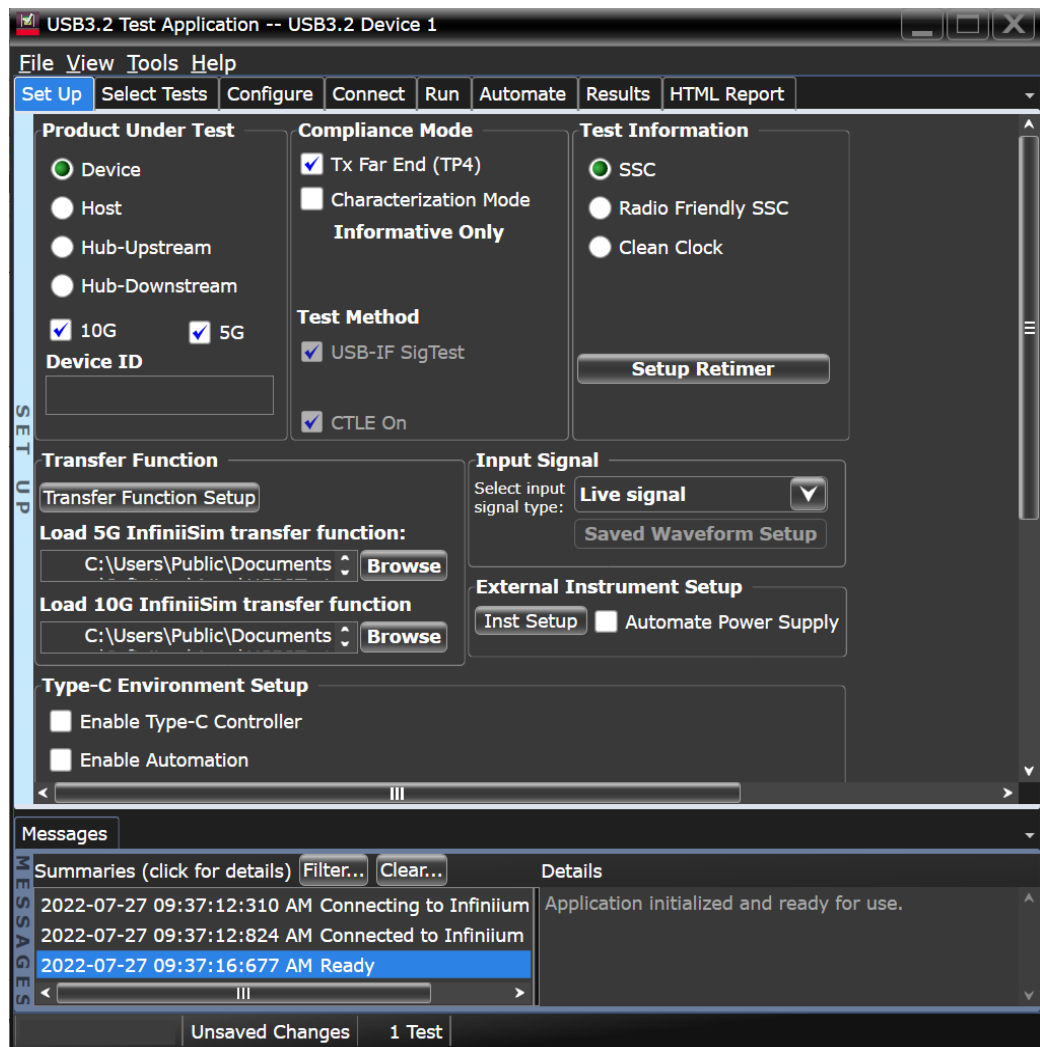


Figure 7 Default window of the USB3.2 test app

Table 1 provides a brief description of the functionality of each tab in the USB 3.2 Test Application:

Table 1 **Functionality of each tab on the USB 3.2 Test App**

Tabs on the Test App	Functionality
Set Up	Lets you identify and set up the test environment, including information about the device under test. The Device ID and Comments are printed in the final HTML report.
Select Tests	Lets you select the tests you want to run. The tests are organized hierarchically so you can select all tests in a group. After tests are run, status indicators show which tests have passed, failed, or not been run, and there are indicators for the test groups.
Configure	Lets you configure test parameters (for example, channels used in test, voltage levels, etc.).
Connect	Shows you how to connect the oscilloscope to the device under test for the tests that are to be run.
Run	Lets you start the automated tests. If the connections to the device under test need to be changed while multiple tests are running, the tests pause, this tab shows you how to change the connection, and the Application waits for you to confirm that the connections have been changed before continuing.
Automate	Lets you construct scripts of commands that drive execution of the Application.
Results	Contains more detailed information about the tests that have been run. You can change the thresholds at which marginal or critical warnings appear.
HTML Report	Shows a compliance test report that can be exported or printed.

Type-C Controller

The usability of the current version of the Keysight D9020USBC USB3.2 Test Compliance Application has been extended to test the signals with the Type-C implementation in USB3.2 devices.

To enable this feature, click **Enable Type-C Controller** in the **Type-C Environment Setup** area of the **Set Up** tab.

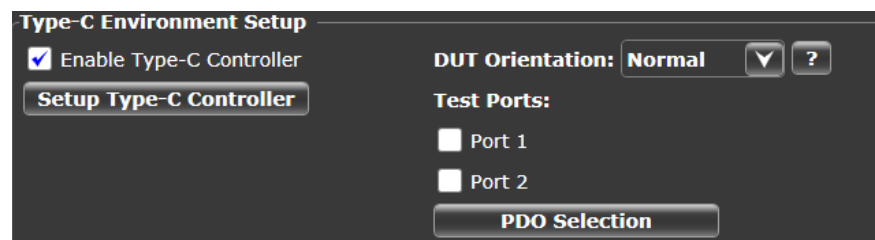


Figure 8 **Enabling Type-C Environment Setup**

For more information on the functionality of the various features of the USB3.2 Test Application along with the Type-C setup, refer to the *Keysight D9020USBC USB 3.2 Test Compliance Application Online Help*.

3 LFPS Tests

Transmitter Low Frequency Periodic Signaling (LFPS) Tests / 26

This chapter describes the LFPS tests available in USB3.2 Compliance Test Application in more detail; it contains information from (and refers to) the *Universal Serial Bus 3.2 Specification, Revision 1.0*, and it describes how the tests are performed.

Transmitter Low Frequency Periodic Signaling (LFPS) Tests

The Transmitter Low Frequency Periodic Signaling Tests include:

- LFPS Peak-Peak Differential Output Voltage Test
- LFPS Period (tPeriod) Test
- LFPS Burst Width (tBurst) Test
- LFPS Repeat Time Interval (tRepeat) Test
- LFPS Rise Time Test
- LFPS Fall Time Test
- LFPS Duty Cycle Test
- LFPS AC Common Mode Voltage

This section provides the Methods of Implementation (MOIs) for 5G Low Frequency Periodic Signaling (LFPS) tests using a Keysight 90000A Series Infiniium oscilloscope, USB 3.0 test fixture, and USB3.2 Test Compliance Application.

Connection Diagram See [Appendix A](#), “Test Connection”.

Test Reference from the Specification Table 6-29 and Table 6-30 of the USB 3.2 Specification, Revision 1.0

Table 6-29. Normative LFPS Electrical Specification

Symbol	Minimum	Typical	Maximum	Units	Comments
tPeriod	20		100	ns	
tPeriod for SuperSpeedPlus	20		80	ns	
V _{CM-AC-LFPS}			V _{TX-CM-AC-PP-ACTIVE}	mV	See Table 6-19
V _{CM-LFPS-Active}			10	mV	
V _{TX-DIFF-PP-LFPS}	800		1200	mV	Peak-peak differential amplitude
V _{TX-DIFF-PP-LFPS-LP}	400		600	mV	Low power peak-peak differential amplitude
tRiseFall2080			4	ns	Measured at TP2, as shown in Figure 6-20.
Duty cycle	40		60	%	Measured at compliance TP2, as shown in Figure 6-20.

Figure 9 Table 6-29 of USB 3.2 Specification Version 1.0

Table 6-30. LFPS Transmitter Timing for SuperSpeed Designs¹

	tBurst				tRepeat		
	Min	Typ	Max	Minimum Number of LFPS Cycles ²	Min	Typ	Max
Polling.LFPS	0.6 μ s	1.0 μ s	1.4 μ s		6 μ s	10 μ s	14 μ s
Ping.LFPS ⁸	40 ns		200 ns	2	160 ms	200 ms	240 ms
Ping.LFPS for SuperSpeedPlus ⁹	40 ns		160ns	2	160 ms	200 ms	240 ms
tReset ³	80 ms	100 ms	120 ms				
U1 Exit ^{4,5}	900 ns ⁷		2 ms				
U2 / Loopback Exit ^{4,5}	80 μ s ⁷		2 ms				
	tBurst				tRepeat		
	Min	Typ	Max	Minimum Number of LFPS Cycles ²	Min	Typ	Max
U3 Wakeup ^{4,5}	80 μ s ⁷		10 ms				

Notes:

1. If the transmission of an LFPS signal does not meet the specification, the receiver behavior is undefined.
2. Only Ping.LFPS has a requirement for minimum number of LFPS cycles.
3. The declaration of Ping.LFPS depends on only the Ping.LFPS burst.
4. Warm Reset, U1/U2/Loopback Exit, and U3 Wakeup are all single burst LFPS signals. tRepeat is not applicable.
5. The minimum duration of an LFPS burst shall be transmitted as specified. The LFPS handshake process and timing are defined in Section 6.9.2.
6. A Port in U2 or U3 is not required to keep its transmitter DC common mode voltage. A port in U2 or U3 is not required to keep its transmitter DC common mode voltage but must not exceed the VTX-CM-IDLE-DELTA spec at TP1. This can be met by either managing the magnitude of the CM shift or the slew rate of the shift. Accordingly, LFPS detectors must tolerate positive and negative CM excursions up to VTX-CM-IDLE-DELTA without false detection. When a port begins U2 exit or U3 wakeup, it may start sending LFPS signal while establishing its transmitter DC common mode voltage. To make sure its link partner receives a proper LFPS signal, a minimum of 80 μ s tBurst shall be transmitted. The same consideration also applies to a port receiving LFPS U2 exit or U3 wakeup signal.
7. A port is still required to detect U1 LFPS exit signal at a minimum of 300ns. The extra 300ns is provided as the guard band for successful U1 LFPS exit handshake.
8. This requirement applies to Gen 1x1 only designs.
9. This requirement applies to Gen 1x2, Gen 2x1 and Gen 2x2 designs.

Figure 10 Table 6-30 of USB 3.2 Specification Version 1.0

Test Conditions

Type of DUT	LFPS Test Mode
Gen 1	False

Test Overview

The purpose of this test is to evaluate the LFPS signal to ensure that the timing variables comply with the specification.

Test Procedure

1. Disconnect the USB 3.0 test fixture from the DUT.
2. Setup horizontal scaling with Reference to Center, Scale of 10us, position at 32us.

- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Setup Function 4 as common mode of Channel 1 and Channel 3.
- 5 Setup the trigger:
 - a Trigger level to 200mV
 - b Trigger mode as Pattern mode
 - c Set trigger Logic as High on trigger channel
 - d Setup trigger condition to range between 3us to 15 us
- 6 Setup the trigger to "Single"
- 7 Setup the Acquisition
 - a Select Real Time mode
 - b Set interpolation to OFF
 - c Acquire points to AUTO
 - d Sample rate to 40GSa/s
 - e Bandwidth to 12GHz
- 8 Verify that the correct waveform has been acquired

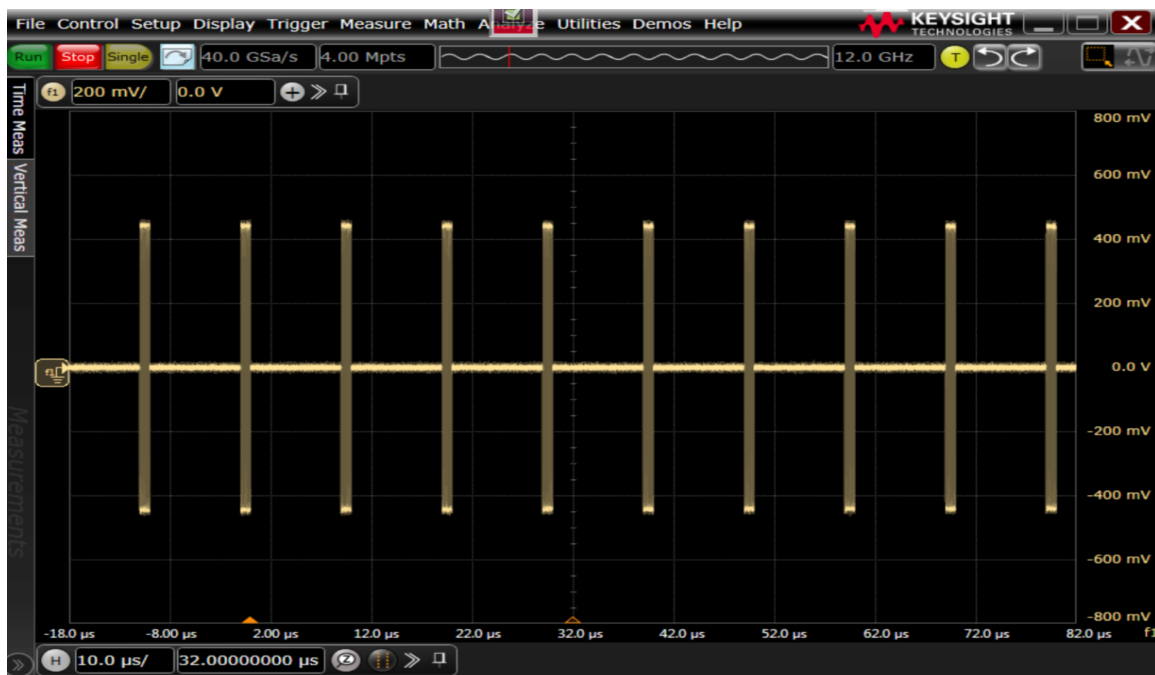


Figure 11 Acquiring the correct waveform

- 9 Set up the parameter measurement:
 - a Get all locations for the Start Burst and the Stop Burst of the LFPS.
 - b Burst Width Measurement is the Start edge – Stop edge of the selected Burst.

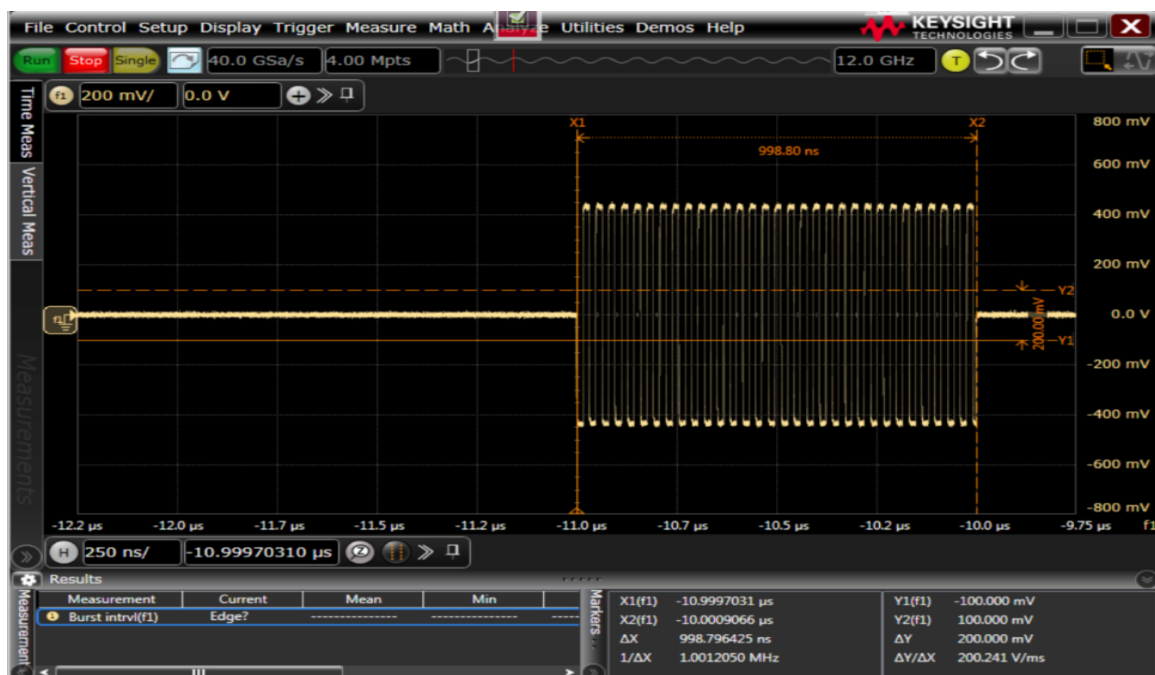


Figure 12 Burst Width Measurement

c Burst Interval is the Start edge of the next burst – Start edge of current Burst.

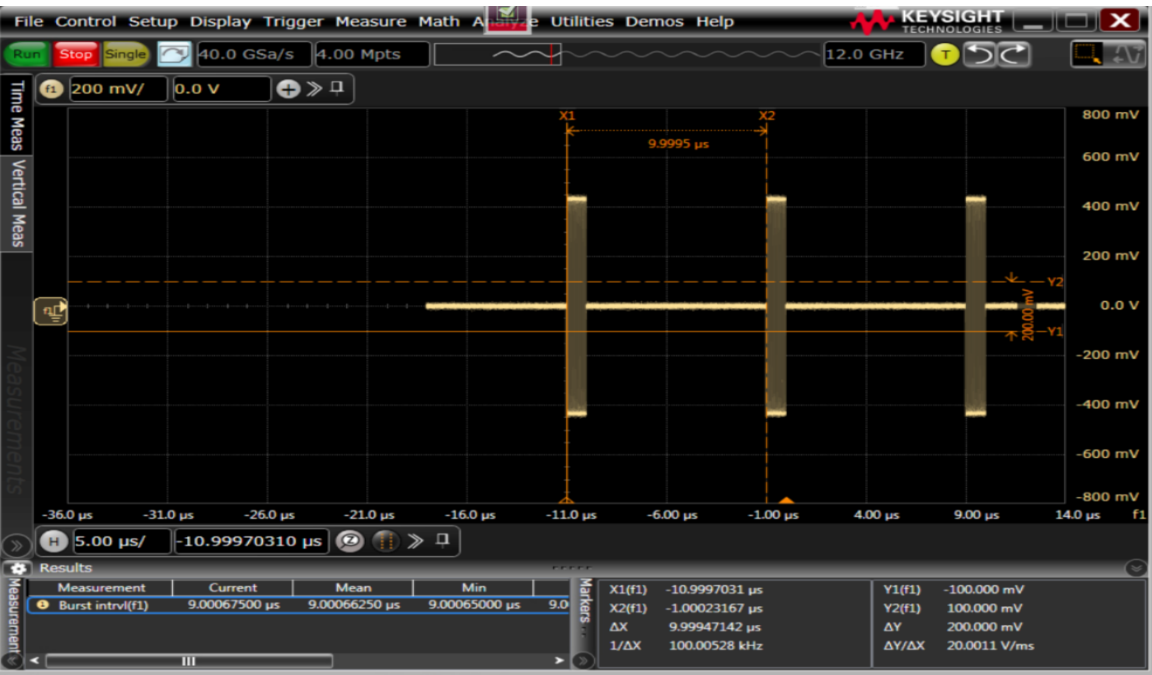


Figure 13 Burst Interval

- d Measure the parameter below on each Burst. The measurement window on each Burst must be set to 100ns after the Burst start and 100ns before the Burst end. This is done to comply with CTS requirements.
- i Differential Voltage
 - ii Period
 - iii Duty Cycle
 - iv Rise Time
 - v Fall Time
 - vi Common Mode Voltage

10 Report the measurement values

**Expected /
Observable Results**

Test Conditions#2

The timing measurement results must be within the conformance limit as specified in the USB 3.2 specification.

Type of DUT	LFPS Test Mode
Gen 1	True

Test Overview

The purpose of this test is to evaluate the LFPS signal to ensure that the timing variables comply with the specification.

Test Procedure

- 1 Disconnect the USB 3.0 test fixture from the DUT.
- 2 Setup horizontal scaling with Reference to Center, Scale of 10us, position at 32us.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Setup Function 4 as common mode of Channel 1 and Channel 3.

- 5 Setup the trigger:
 - a Trigger level to 200mV
 - b Trigger mode as Pattern mode
 - c Set trigger Logic as High on trigger channel
 - d Setup trigger condition to range between 3us to 15 us
- 6 Setup the trigger to "Single"
- 7 Setup the Acquisition
 - a Select Real Time mode
 - b Set interpolation to OFF
 - c Acquire points to AUTO
 - d Sample rate to 40GSa/s
 - e Bandwidth to 12GHz
- 8 Verify that the correct waveform has been acquired.
- 9 Save the waveform in binary format
- 10 Launch the SigTest tool
 - a Ensure that the Test Mode is set to 'CEM'
 - b Ensure that the Technology is set to 'usb_3-5gb'
 - c Ensure that the Template File is set to 'USB_3_LFPS'

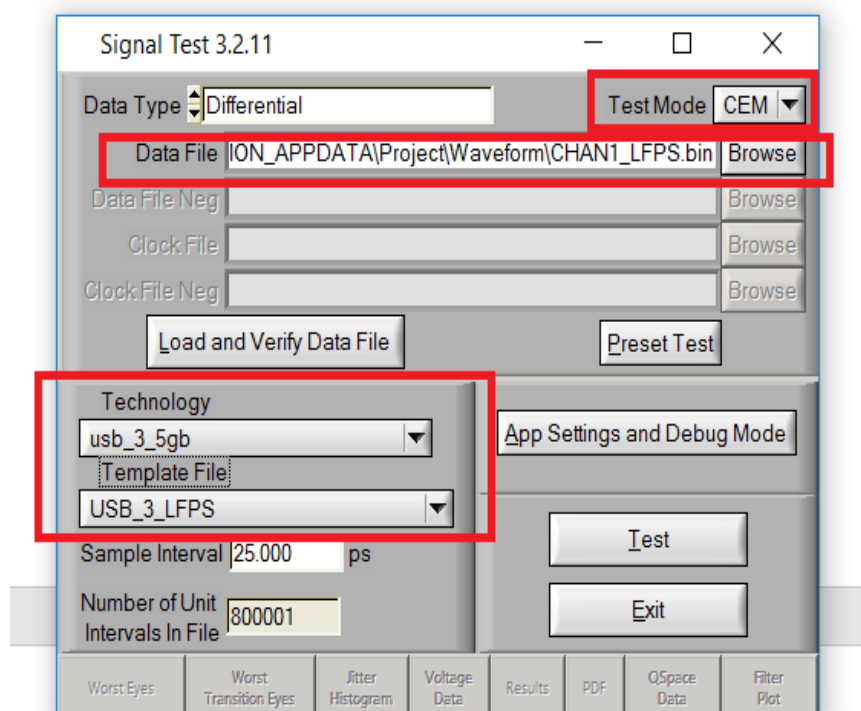


Figure 14 SigTest Tool settings for LFPS tests

- 11 Report Measurement using the report generated by SigTest tool.

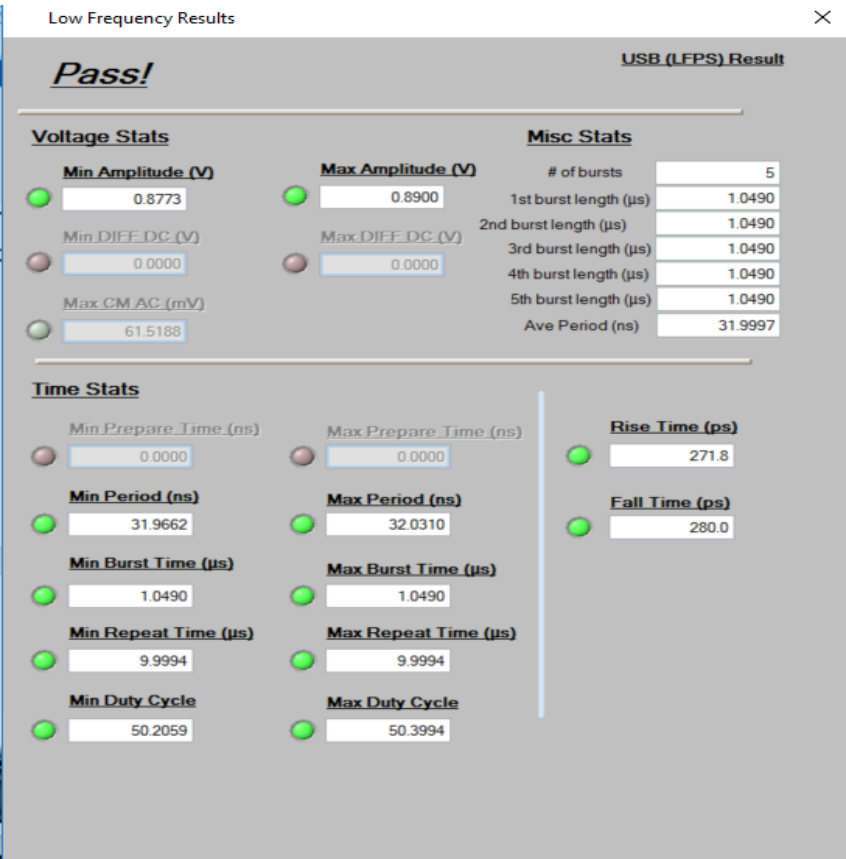


Figure 15 SigTest tool report for LFPS tests

**Expected /
Observable Results**

The timing measurement results must be within the conformance limit as specified in the USB 3.2 specification.

4 5G Tests

5G Transmitter SSC Tests /	34
5G Transmitter Eye Far End (TP4) Tests (USB-IF SigTest) (CTLE ON) Tests /	39
5G Transmitter Eye Short Channel (TP2) Tests /	49
5G Transmitter Eye Near End (TP1) Tests /	57
5G BLR Clock Switch Test /	62
5G Jitter Transfer Function Test /	64
5G Transmitter Voltage Level Tests /	66

This chapter describes the 5G tests that are performed by the USB3.2 Test Compliance Application in more detail; it contains information from (and refers to) the *Universal Serial Bus 3.2 Specification, Revision 1.0*, and it describes how the tests are performed.

5G Transmitter SSC Tests

The 5G Transmitter Spread Spectrum Clocking Tests include:

- Unit Interval Test
- 5G TSSC-Freq-Dev-Trough
- 5G TSSC-Freq-Dev-Peak
- 5G SSC Modulation Rate
- 5G SSC Slew Rate
- 5G SSC df/dt

This section provides the Methods of Implementation (MOIs) for 5G Transmitter SSC tests using a Keysight 90000A Series Infiniium oscilloscope, USB 3.0 test fixture, and USB3.2 Test Compliance Application.

Connection Diagram See [Appendix A](#), “Test Connection”.

Test Reference from the Specification Table 6-17 and Table 6-18 of the USB 3.2 Specification, revision 1.0.

Table 6-17. SSC Parameters

Symbol	Description	Limits		Units	Note
		Min	Max		
tSSC-MOD-RATE	Modulation Rate	30	33	kHz	
tSSC-FREQ-DEVIATION	SSC deviation	+0/-4000 +0/-2000	+0/-5000 +0/-3000	ppm	1, 2, 3 4

Note:

1. The data rate is modulated from 0 ppm to -5000 ppm of the nominal data rate frequency and scales with data rate.
2. This is measured below 2 MHz only.
3. Receiver compliance testing is done under the maximum spread condition.
4. Alternate limits apply to “radio friendly” clock mode which employs a clock whose center frequency is downshifted by 2000ppm.

Figure 16 Table 6-17 of USB 3.2 Specification Version 1.0

Table 6-18. Transmitter Normative Electrical Parameters

Symbol	Parameter	Gen 1 (5.0 GT/s)	Gen 2 (10 GT/s)	Units	Comments
UI	Unit Interval	199.94 (min) 200.06 (max)	99.97 (min) 100.03 (max)	ps	The specified UI is equivalent to a tolerance of ± 300 ppm for each device. Period does not account for SSC induced variations.
		200.34 (min) 200.46 (max)	100.17 (min) 100.23 (max)	ps	Alternate limits apply to "radio friendly" clocking mode which employs a clock whose center frequency is downshifted by 2000ppm. This mode is to be used with a ± 3000 ppm spread.
V _{TX-DIFF-PP}	Differential p-p Tx voltage swing	0.8 (min) 1.2 (max)	0.8 (min) 1.2 (max)	V	Nominal is 1 V p-p
V _{TX-DIFF-PP-LOW}	Low-Power Differential p-p Tx voltage swing	0.4 (min) 1.2 (max)	0.4 (min) 1.2 (max)	V	Refer to Section 6.7.2. There is no de-emphasis requirement in this mode. De-emphasis is implementation specific for this mode.
V _{TX-DE-RATIO}	Tx de-emphasis	3.0 (min) 4.0 (max)	See section 6.7.5.2.	dB	Nominal is 3.5 dB for Gen 1 operation. Gen 2 transmitter equalization requirements are described in section 6.7.5.2.
R _{TX-DIFF-DC}	DC differential impedance	72 (min) 120 (max)	72 (min) 120 (max)	Ω	
V _{TX-RCV-DETECT}	The amount of voltage change allowed during Receiver Detection	0.6 (max)	0.6 (max)	V	Detect voltage transition should be an increase in voltage on the pin looking at the detect signal to avoid a high impedance requirement when an "off" receiver's input goes below ground.
C _{AC-COUPLING}	AC Coupling Capacitor	75 (min) 265 (max)	75 (min) 265 (max)	nF	All Transmitters shall be AC coupled. The AC coupling is required either within the media or within the transmitting component itself.
t _{CDR_SLEW_MAX}	Maximum slew rate	10	Not applicable	ms/s	See the jitter white paper for details on this measurement. This is a df/ft specification; refer to Section 6.5.4 for details.
SSC _{dfdt}	SSC df/dt	1250 (max)	1250 (max)	ppm/ μ s	See note 1.
V _{TX-CM-IDLE-DELTA}	Transmitter idle common-mode voltage change	+600 (max) -600 (min)	+600 (max) -600 (min)	mV	The maximum allowed instantaneous common-mode voltage at TP2 while the transmitter is in U2 or U3 and not actively transmitting LFPS. Note that this is an absolute voltage spec referenced to the receive-side termination ground but serves the purpose of limiting the magnitude and/or slew rate of Tx common mode changes.

Note 1: Measured over a 0.5 μ s interval using CP10. The measurements shall be low pass filtered using a filter with 3 dB cutoff frequency that is 60 times the modulation rate. The filter stopband rejection shall be greater or equal to a second order low-pass of 20 dB per decade. Evaluation of the maximum df/dt is achieved by inspection of the low-pass filtered waveform.

Figure 17 Table 6-18 of USB 3.2 Specification Version 1.0

5G Unit Interval

Test Conditions

Reference Clock

Clean Clock

Test Overview

The purpose of this test is to verify that the SSC of the transmitter complies with the specification.

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Set horizontal scale to 2ns, position at 0.
- 5 Setup the Acquisition
 - a Select Sampling Mode as "Real Time"
 - b Set interpolation to OFF
 - c Sample rate to 40 GSa/s
 - d 8M points
 - e Bandwidth to 12 GHz
- 6 Set Sweep as AUTO
- 7 Ping the DUT until CP1 is attained.
- 8 Setup horizontal scale to 20us, position at 0.
- 9 Stop the acquisition and save the waveform.
- 10 Set 'Unit Interval Measurement' to ON.
- 11 Set 'Measurement Trend' to ON.
- 12 Measure Vmax of the measurement trend.
- 13 Measure Vmin of the measurement trend.
- 14 Measure Vaverage of the measurement trend.
- 15 Record the measurement result.

**Expected /
Observable Results**

The measurement results for Unit Interval must be within the conformance limit as specified in the USB 3.2 specification.

SSC Deviation Test, SSC Modulation Rate Test, SSC Slew Rate Test, and SSC df/dt Test

Test Conditions

Reference Clock
SSC

Test Overview The purpose of this test is to verify that the SSC of the transmitter complies with the specification.

- Test Procedure**
- 1 Set up the stimulus for 2-cycle LFPS ping.
 - 2 Default the scope.
 - 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
 - 4 Set horizontal scale to 2ns, position at 0.
 - 5 Setup the Acquisition
 - a Select Sampling Mode as "Real Time"
 - b Set interpolation to OFF
 - c Sample rate to 40 GSa/s
 - d 8M points
 - e Bandwidth to 12 GHz
 - 6 Set Sweep as AUTO
 - 7 Ping the DUT until CP1 is attained.
 - 8 Setup horizontal scale to 20 us, position at 0.
 - 9 Set 'Unit Interval Measurement' to ON.
 - 10 Set 'Measurement Trend' to ON for function 1.
 - 11 Save the measurement in CSV format.
 - 12 The CSV waveform is processed within a MATLAB script.
 - a Perform a second-order low pass filter. Cut-off frequency is set as 60 times of the modulation rate, 1.98MHz.

- b* Measure the V_{top} and V_{base} for every SSC triangle profile, as shown in Figure 18.

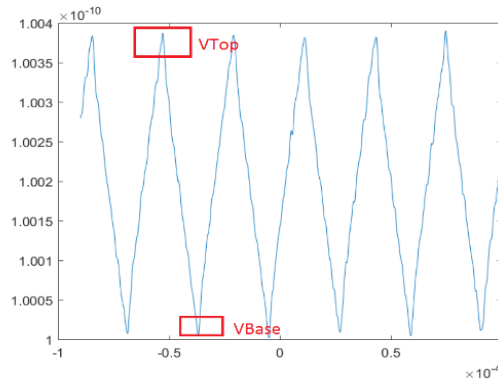


Figure 18 V_{top} and V_{base} measurements on an SCC triangle profile

- c* Measure the modulation rate, modulation rate is $1/t_{cycle}$. t_{cycle} is defined as shown in Figure 19.

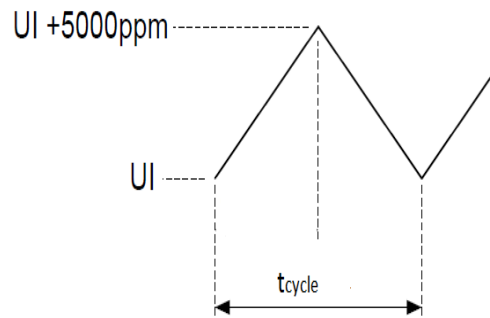


Figure 19 Measuring Modulation Rate

- d* Measure the Slew Rate of the SSC.
e Measure the df/dt of the SSC

For the algorithm to determine the slew rate, refer to white paper USB 3.0 CDR Model White Paper, revision 0.5 available at “www.usb.org”.

13 Record the measurement result.

**Expected /
Observable Results**

The measurement results for SSC must be within the conformance limit as specified in the USB 3.2 specification.

5G Transmitter Eye Far End (TP4) Tests (USB-IF SigTest) (CTLE ON) Tests

The 5G Transmitter Eye Far End (TP4) Tests include:

- 5G Random Jitter (CTLE ON) Test
- 5G Far End Maximum Deterministic Jitter (CTLE ON) Test
- 5G Far End Total Jitter at BER- 12 Test (CTLE ON) Test
- 5G Far End Template Test (CTLE ON) Test
- 5G Far End Differential Output Voltage (CTLE ON) Test

This section provides the Methods of Implementation (MOIs) for 5G Transmitter Eye Far End (TP4) tests using a Keysight Infiniium oscilloscope, USB 3.0 test fixture, and USB3.2 Test Compliance Application.

Connection Diagram See [Appendix A](#), “Test Connection”.

Test Reference from the Specification Table 6-16 and Table 6-20 (ECN for SSP System Jitter Budget) of the USB 3.2 Specification, revision 1.0.

Table 6-16. Informative Jitter Budgeting at the Silicon Pads⁷

Jitter Contribution (ps)	Gen 1 (5 GT/s)			Gen 2 (10 GT/s)		
	Rj ^{1,2}	Dj ³	Tj ⁴ at 10 ⁻¹²	Rj ^{1,2}	Dj ³	Tj ⁴ at 10 ⁻¹²
Tx ⁶	2.42	41	75	1.00	17	31.1
Media ⁵	2.13	45	75	0.00	36	36.0
Rx	2.42	57	91	1.00	27.1	41.2
Total	4.03	143	200	1.41	80.1	100

Notes:

1. Rj is the sigma value assuming a Gaussian distribution.
2. Rj Total is computed as the Root Sum Square of the individual Rj components.
3. Dj budget is using the Dual Dirac method.
4. Tj at a 10⁻¹² BER is calculated as 14.068 * Rj + Dj.
5. The media budget includes the cancellation of ISI from the appropriate Rx equalization function.
6. Tx is measured after application of the JTF.
7. In this table, Tx jitter is defined at TP1, Rx jitter is defined at TP4, and media jitter is defined from TP1 to TP4.

Figure 20 Table 6-16 of USB 3.2 Specification Version 1.0


Table 6-20. Normative Transmitter Eye Mask at Test Point TP4

Signal Characteristic	5GT/s		10GT/s		Units	Note
	Minimum	Maximum	Minimum	Maximum		
Eye Height	100	1200	70	1200	mV	2, 3, 4
Dj		0.43		0.530	UI	1, 2, 3
Rj		0.23		0.141	UI	1, 5, 6
Tj		0.66		0.671	UI	1, 2, 3

Notes:

1. Measured over 10^6 consecutive UI and extrapolated to 10^{-12} BER.
2. Measured after receiver equalization function.
3. Measured at end of reference channel and cables at TP4 in Figure 6-20.
4. The eye height is to be measured at the minimum opening over the range from the center of the eye ± 0.05 UI.
5. The Rj specification is calculated as 14.069 times the RMS random jitter for 10^{-12} BER.
6. Measured at the output of the compliance breakout board without embedding the compliance cable and load board.

Figure 21 Table 6-20 of USB 3.2 Specification Version 1.0

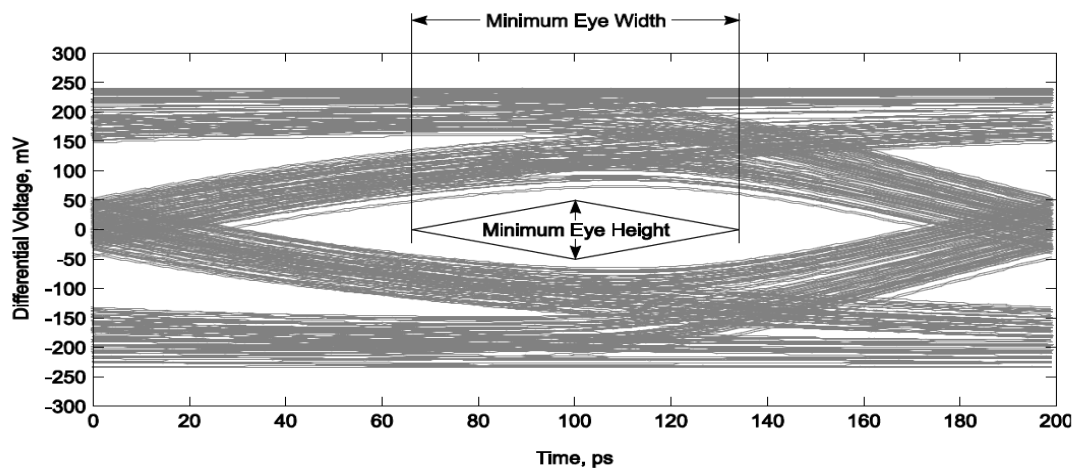

U-023

Gen 1 eye mask

Figure 22 Gen 1 Eye Mask for 5G Transmitter Far End Eye (TP1) tests

5G Random Jitter Test

Test Overview The purpose of this test is to verify that the Random Jitter of the transmitter complies with the specification.

- Test Procedure**
- 1 Set up the stimulus for 2-cycle LFPS ping.
 - 2 Default the scope.
 - 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
 - 4 Set horizontal scale to 2 ns, position at 0.
 - 5 Ping the DUT until CP1 is attained.
 - 6 Setup the Acquisition
 - a Select Sampling Mode as “Real Time”
 - b Set interpolation to OFF
 - c Sample rate to 40 GSa/s
 - d 8M points
 - e Bandwidth to 12 GHz
 - 7 Set Sweep as AUTO.
 - 8 Setup horizontal scale to 20 us, position at 0.
 - 9 Stop the acquisition and save the waveform in binary format.
 - 10 Launch SigTest tool.
 - 11 Load the waveform file. Select the options for Technology and Template File as shown in Figure 23.
 - a Test Mode set to ‘CEM’
 - b Technology set to ‘USB_3_5gb’
 - c Template File set to ‘USB_3_5Gb_CP1’

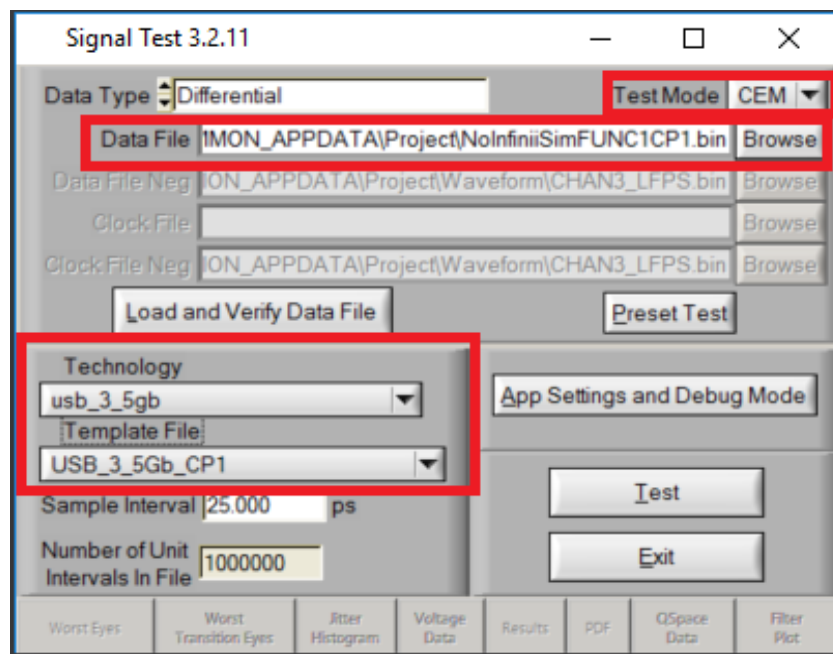


Figure 23 SigTest tool settings for measuring RJ

- 12 Record the measurement result for RJ.

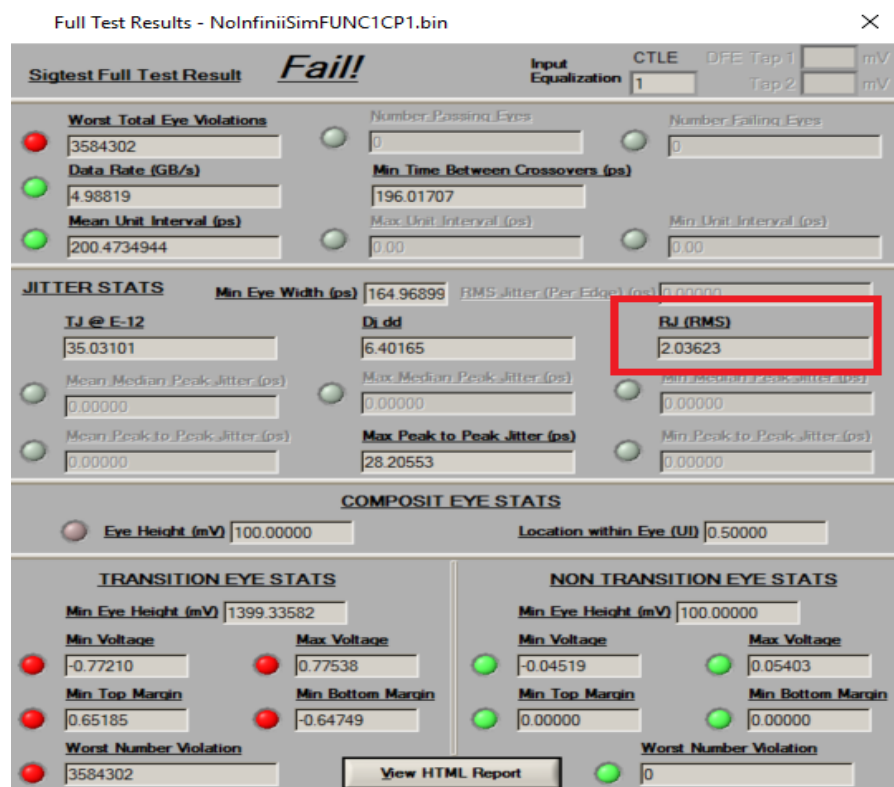


Figure 24 SigTest tool report for RJ measurement

**Expected /
Observable Results**

The measurement results for Random Jitter must be within the conformance limit as specified in the USB 3.2 specification.

Test Condition

Test Method
SDA

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Set horizontal scale to 2ns, position at 0.
- 5 Ping the DUT until CP1 is attained.
- 6 Setup the Acquisition
 - a Select Sampling Mode as "Real Time"
 - b Set interpolation to OFF
 - c Sample rate to 40 GSa/s
 - d 8M points
 - e Bandwidth to 12 GHz
- 7 Set Sweep as AUTO
- 8 Setup horizontal scale to 20us, position at 0.
- 9 Stop the acquisition and save the waveform.

- 10 Setup CTLE:
 - a* # of Poles: 2
 - b* Pole 1 Frequency: 1.95GHz
 - c* Pole 2 Frequency: 5.0GHz
 - d* Zero Frequency: 650MHz
 - e* DC Gain: 0.667
- 11 Setup Clock Recovery:

2nd order PLL, data rate of 5Gbps, loop bandwidth of 4.9MHz, damping factor of 0.707
- 12 Setup EZJIT Complete:
 - a* Set CTLE as source
 - b* Enable Jitter Mode on EZJIT+
 - c* BER Level: 1E-12
 - d* Measurement: TIE (Phase)
 - e* Edges: Both
 - f* RJ Bandwidth: Narrow
 - g* RJ Method: Spectral Only
 - h* Pattern Length: Periodic, Auto
- 13 Obtain RJ reading.

**Expected /
Observable Results**

The measurement results for Random Jitter must be within the conformance limit as specified in the USB 3.2 specification.

5G Far End Maximum Deterministic Jitter, 5G Far End Total Jitter At BER-12, 5G Far End Template Test, and 5G Far End Differential Output Voltage Tests

Test Overview The purpose of this test is to verify that the Far End Maximum Deterministic Jitter, Far End Total Jitter At BER-12, Far End Template Test, and Far End Differential Output Voltage of the transmitter complies with the specification.

Test Condition

Test Method

USB-IF SigTest

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Set horizontal scale to 2ns, position at 0.
- 5 Ping the DUT until CP0 is attained.
- 6 Setup the Acquisition
 - a Select Sampling Mode as "Real Time"
 - b Set interpolation to OFF
 - c Sample rate to 40 GSa/s
 - d 8M points
 - e Bandwidth to 12 GHz
- 7 Setup InfiniiSim. See [Appendix A](#), "InfiniiSim Setup for 5G" for settings.
- 8 Set Sweep as AUTO.
- 9 Setup horizontal scale to 20us, position at 0.
- 10 Stop the acquisition and save the waveform in binary format.
- 11 Launch SigTest tool.
- 12 Load the waveform file. Select the options for Technology and Template File as shown in [Figure 25](#).
 - a Test Mode set to 'CEM'
 - b Technology set to 'USB_3_5gb'
 - c Template File set to 'USB_3_5Gb_CP0_RJIN'
 - d Set Random Jitter

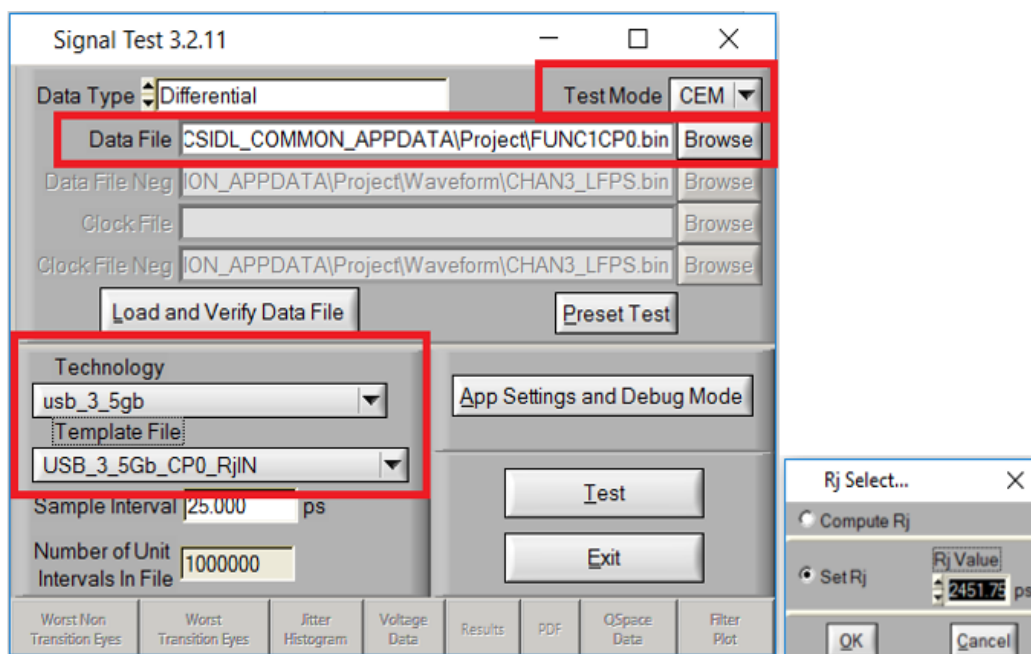


Figure 25 SigTest tool settings for measuring DJ, TJ and Eye Height

13 Record the measurement result for DJ, TJ and Eye Height.

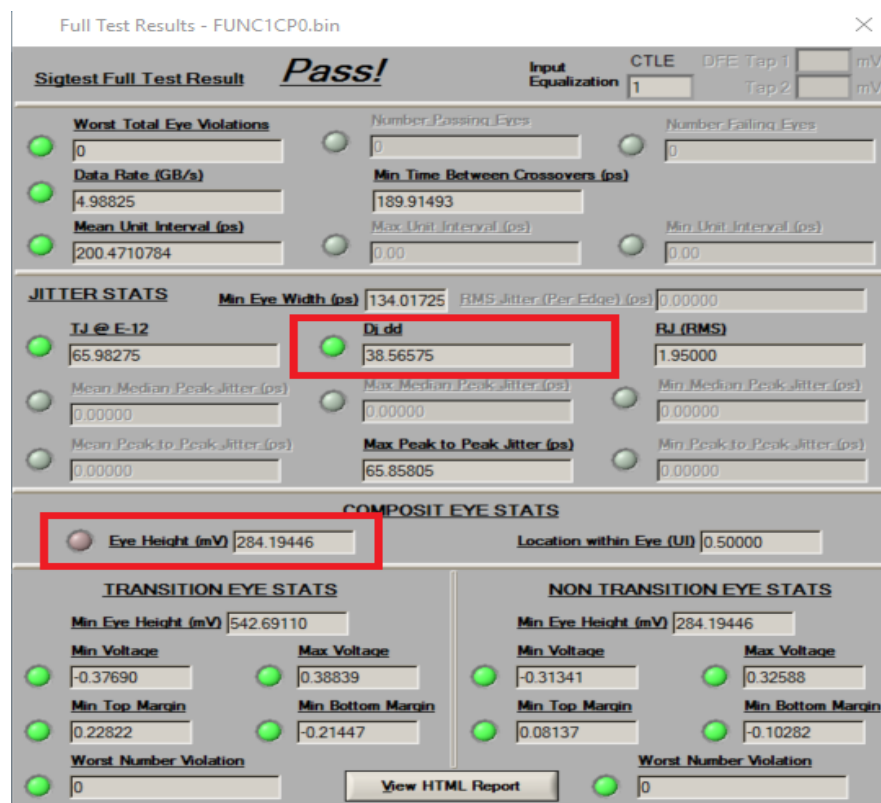


Figure 26 SigTest tool report for DJ, TJ and Eye Height measurement

**Expected /
Observable Results**

The measurement results must be within the conformance limit as specified in the USB 3.2 specification.

5G Far End Maximum Deterministic Jitter and 5G Far End Total Jitter At BER-12 Test

Test Condition**Test Method**

SDA

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Set horizontal scale to 2ns, position at 0.
- 5 Ping the DUT until CP0 is attained.
- 6 Setup the Acquisition
 - a Select Sampling Mode as “Real Time”
 - b Set interpolation to OFF
 - c Sample rate to 40GSa/s
 - d 8M points
- 7 Setup InfiniiSim. See [Appendix A](#), “InfiniiSim Setup for 5G” for settings.
- 8 Set Sweep as AUTO.
- 9 Setup horizontal scale to 20us, position at 0.
- 10 Stop the acquisition and save the waveform in binary format.
- 11 Setup CTLE:
 - a # of Poles: 2
 - b Pole 1 Frequency: 1.95GHz
 - c Pole 2 Frequency: 5.0GHz
 - d Zero Frequency: 650MHz
 - e DC Gain: 0.667
- 12 Setup Clock Recovery:

2nd order PLL, data rate of 5Gbps, loop bandwidth of 4.9MHz, damping factor of 0.707
- 13 Setup EZJIT Complete:
 - a Set CTLE as source
 - b Enable Jitter Mode on EZJIT+
 - c BER Level: 1E-12
 - d Measurement: TIE (Phase)
 - e Edges: Both
 - f RJ Bandwidth: Narrow
 - g RJ Method: Spectral Only
 - h Pattern Length: Arbitrary
 - i ISI Filter Lead: -2
 - j ISI Filter Lag: 18

**Expected /
Observable Results**

The measurement results for Maximum Deterministic Jitter and Total Jitter At BER-12 must be within the conformance limit as specified in the USB 3.2 specification.

5G Far End Template Test and 5G Far End Differential Output Voltage Test

Test Condition**Test Method**

SDA

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Set horizontal scale to 2ns, position at 0.
- 5 Ping the DUT until CP0 is attained.
- 6 Setup the Acquisition
 - a Select Sampling Mode as “Real Time”
 - b Set interpolation to OFF
 - c Sample rate to 40GSa/s
 - d 8M points
- 7 Setup InfiniiSim. See [Appendix A](#), “InfiniiSim Setup for 5G” for settings.
- 8 Set Sweep as AUTO.
- 9 Setup horizontal scale to 20us, position at 0.
- 10 Stop the acquisition and save the waveform.
- 11 Setup CTLE:
 - a # of Poles: 2
 - b Pole 1 Frequency: 1.95GHz
 - c Pole 2 Frequency: 5.0GHz
 - d Zero Frequency: 650MHz
 - e DC Gain: 0.667
- 12 Setup Clock Recovery:

2nd order PLL, data rate of 5Gbps, loop bandwidth of 4.9MHz, damping factor of 0.707
- 13 Enable Mask Test:
 - a Load Mask
 - b Set Source as CTLE
 - c Set Color Grade to ON
 - d Set Infinite Persistent to ON
 - e Set Mask Scaling:
 - Horizontal Scaling: -100ps
 - Delta: 200ps
 - f Set Mask Vertical Scaling:
 - 1 Level: 600mV
 - 0 Level: -600mV
 - g Enable “Bind 1 & 0 Levels”
 - h Enable “Real-Time Eye”
- 14 Run Mask Test.
- 15 Measure Eye Height and Eye Width.

**Expected /
Observable Results**

The signal must pass the Mask Test and the Differential Output Voltage must be within the conformance limits as specified in the USB 3.2 specification.

5G Transmitter Eye Short Channel (TP2) Tests

The 5G Transmitter Eye Short Channel (TP2) Tests include:

- 5G Short Channel Random Jitter
- 5G Short Channel Maximum Deterministic Jitter Test
- 5G Short Channel Total Jitter at BER- 12 Test
- 5G Short Channel Template Test
- 5G Short Channel Differential Output Voltage

This section provides the Methods of Implementation (MOIs) for 5G Transmitter Eye Short Channel tests using a Keysight 90000A Series Infiniium oscilloscope, USB 3.0 test fixture, and USB3.2 Test Compliance Application.

NOTE

5G Transmitter Eye Short Channel (TP2) Tests will not be available if **5G Transfer Function > Channel Settings 5G** is selected as **Tethered**.

Set Up tab > Transfer Function Setup button > Configure Transfer Function dialog box > 5G Transfer Function tab > Channel Settings 5G

Connection Diagram See [Appendix A](#), “Test Connection”.

Test Reference from the Specification Table 6-16 and Table 6-20 (ECN for SSP System Jitter Budget) of the USB 3.2 Specification, revision 1.0.

Table 6-16. Informative Jitter Budgeting at the Silicon Pads⁷

Jitter Contribution (ps)	Gen 1 (5 GT/s)			Gen 2 (10 GT/s)		
	Rj ^{1,2}	Dj ³	Tj ⁴ at 10 ⁻¹²	Rj ^{1,2}	Dj ³	Tj ⁴ at 10 ⁻¹²
Tx ⁶	2.42	41	75	1.00	17	31.1
Media ⁵	2.13	45	75	0.00	36	36.0
Rx	2.42	57	91	1.00	27.1	41.2
Total	4.03	143	200	1.41	80.1	100

Notes:

1. Rj is the sigma value assuming a Gaussian distribution.
2. Rj Total is computed as the Root Sum Square of the individual Rj components.
3. Dj budget is using the Dual Dirac method.
4. Tj at a 10⁻¹² BER is calculated as 14.068 * Rj + Dj.
5. The media budget includes the cancellation of ISI from the appropriate Rx equalization function.
6. Tx is measured after application of the JTF.
7. In this table, Tx jitter is defined at TP1, Rx jitter is defined at TP4, and media jitter is defined from TP1 to TP4.

Figure 27 Table 6-16 of USB 3.2 Specification Version 1.0


Table 6-20. Normative Transmitter Eye Mask at Test Point TP4

Signal Characteristic	5GT/s		10GT/s		Units	Note
	Minimum	Maximum	Minimum	Maximum		
Eye Height	100	1200	70	1200	mV	2, 3, 4
Dj		0.43		0.530	UI	1, 2, 3
Rj		0.23		0.141	UI	1, 5, 6
Tj		0.66		0.671	UI	1, 2, 3

Notes:

1. Measured over 10^6 consecutive UI and extrapolated to 10^{-12} BER.
2. Measured after receiver equalization function.
3. Measured at end of reference channel and cables at TP4 in Figure 6-20.
4. The eye height is to be measured at the minimum opening over the range from the center of the eye ± 0.05 UI.
5. The Rj specification is calculated as 14.069 times the RMS random jitter for 10^{-12} BER.
6. Measured at the output of the compliance breakout board without embedding the compliance cable and load board.

Figure 28 Table 6-20 of USB 3.2 Specification Version 1.0

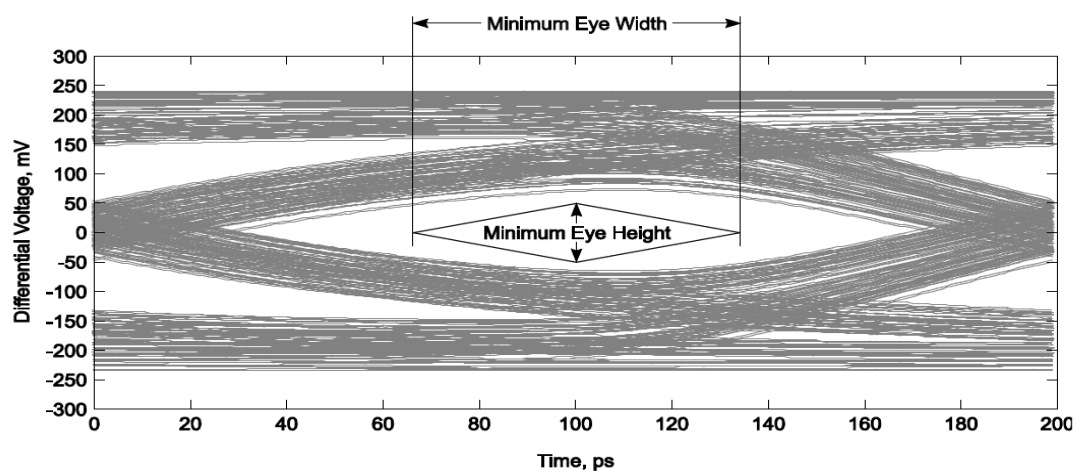

U-023

Gen 1 eye mask

Figure 29 Gen 1 Eye Mask for 5G Transmitter Short Channel tests

5G Short Channel Random Jitter Test

Test Condition**Test Method**

USB-IF SigTest

Test Overview

The purpose of this test is to verify that the Short Channel Random Jitter of the transmitter complies with the specification.

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Set horizontal scale to 2ns, position at 0.
- 5 Ping the DUT until CP1 is attained.
- 6 Setup the Acquisition
 - a Select Sampling Mode as “Real Time”
 - b Set interpolation to OFF
 - c Sample rate to 40GSa/s
 - d 8M points
 - e Bandwidth to 12GHz
- 7 Set Sweep as AUTO.
- 8 Setup horizontal scale to 20us, position at 0.
- 9 Stop the acquisition and save the waveform in binary format.
- 10 Launch SigTest tool.
- 11 Load the waveform file. Select the options for Technology and Template File as shown in **Figure 30**.
 - a Test Mode set to ‘CEM’
 - b Technology set to ‘USB_3_5gb’
 - c Template File set to ‘USB_3_5Gb_CP1_SHORT’

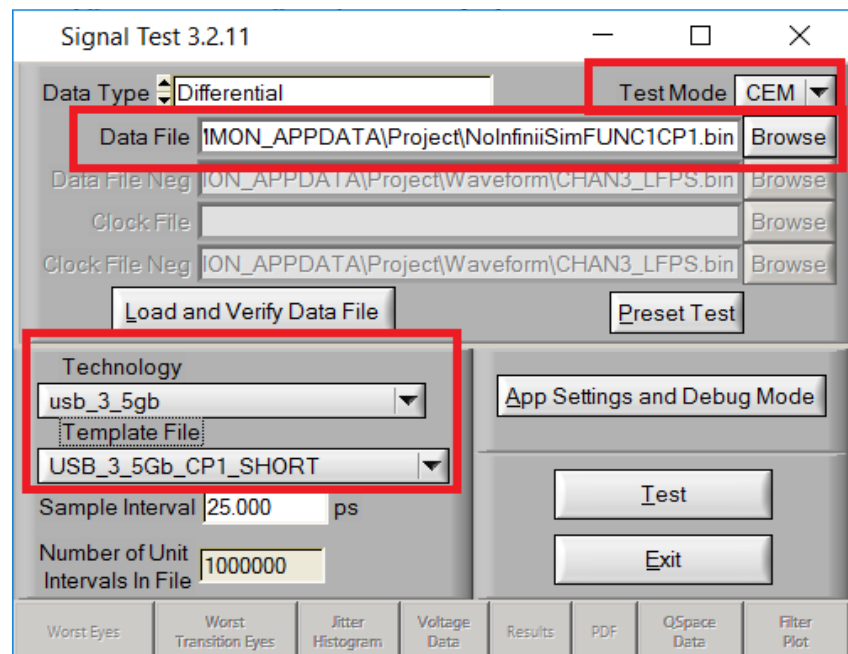


Figure 30 SigTest tool settings for measuring Short Channel RJ

12 Record the measurement result for Short Channel RJ.

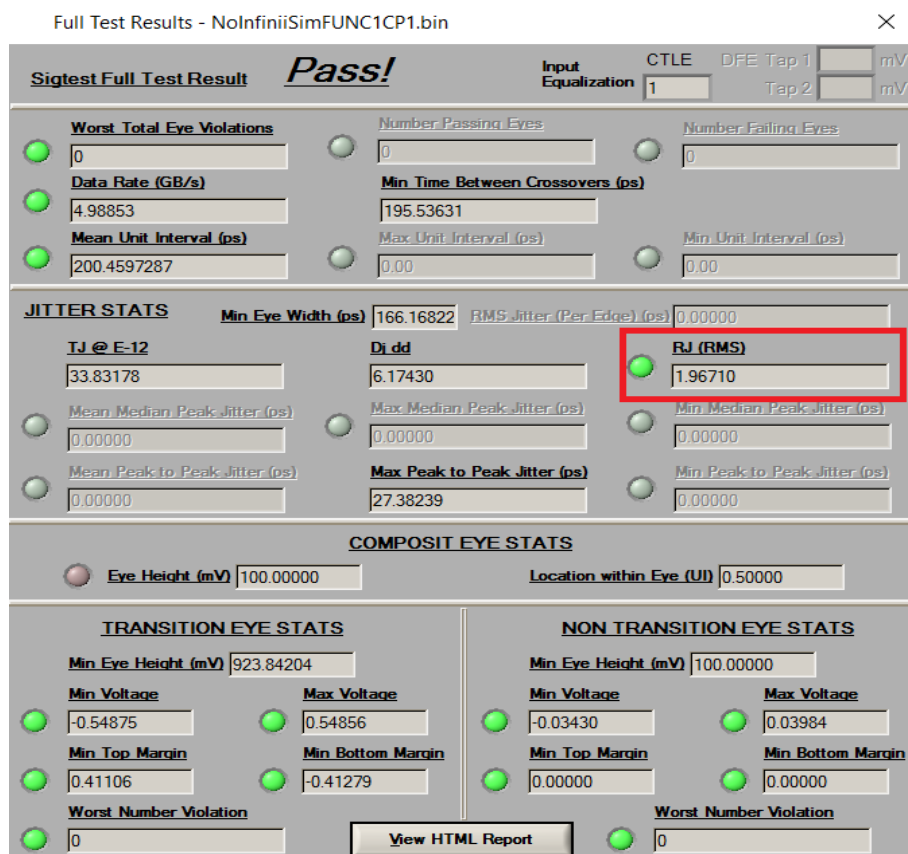


Figure 31 SigTest tool report for Short Channel RJ measurement

**Expected /
Observable Results**

The measurement results for Short Channel Random Jitter must be within the conformance limit as specified in the USB 3.2 specification.

5G Short Channel Maximum Deterministic Jitter, 5G Short Channel Total Jitter At BER- 12, 5G Short Channel Template Test and 5G Short Channel Differential Output Voltage

Test Conditions

Test Method
USB-IF SigTest

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Set horizontal scale to 2ns, position at 0.
- 5 Ping the DUT until CP0 is attained.
- 6 Setup the Acquisition
 - a Select Sampling Mode as “Real Time”
 - b Set interpolation to OFF
 - c Sample rate to 40GSa/s
 - d 8M points
 - e Bandwidth to 12GHz
- 7 Set Sweep as AUTO
- 8 Setup horizontal scale to 20us, position at 0.
- 9 Stop the acquisition and save the waveform in binary format.
- 10 Launch SigTest tool.
- 11 Load the waveform file. Select the options for Technology and Template File as shown in [Figure 32](#).
 - a Test Mode set to ‘CEM’
 - b Technology set to ‘USB_3_5gb’
 - c Template File set to ‘USB_3_5Gb_CP0_RJIN_SHORT’
 - d Set Random Jitter

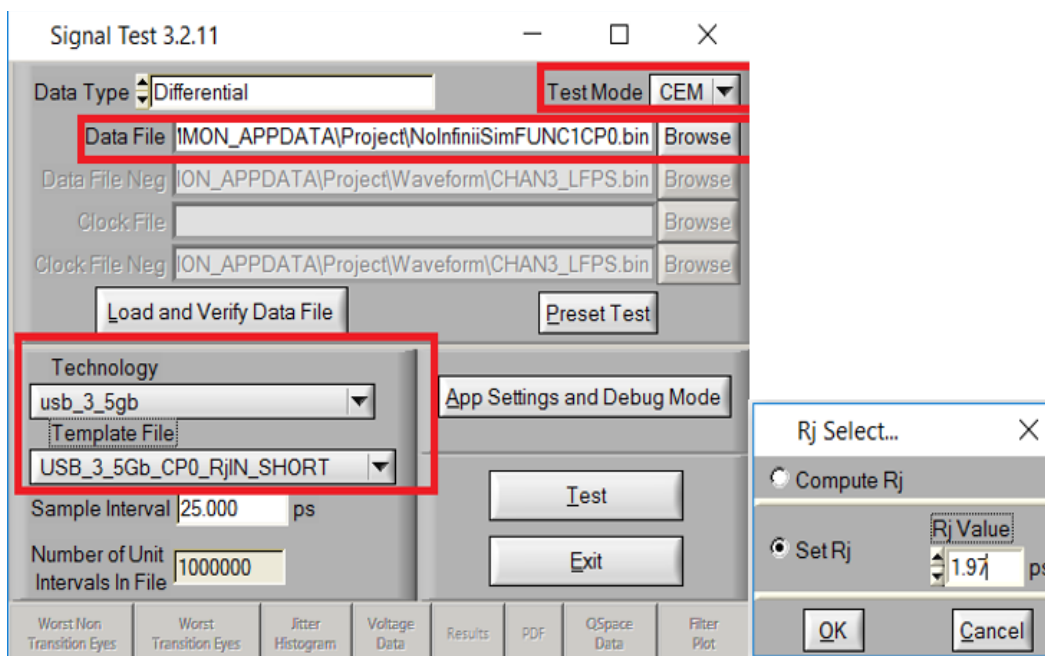


Figure 32 SigTest tool settings for measuring DJ, TJ and Eye Height

12 Record the measurement result for DJ, TJ, and Eye Height.

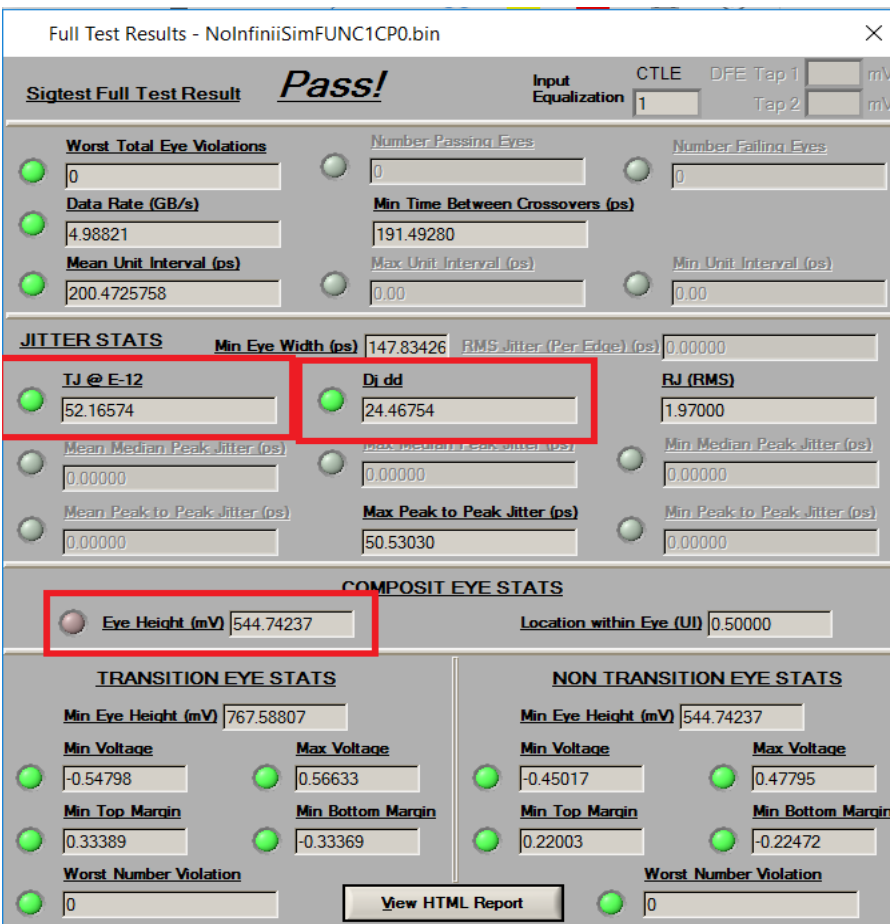


Figure 33 SigTest tool report for Short Channel DJ, TJ and Eye Height measurement

**Expected /
Observable Results**

The measurement results for Short Channel Deterministic Jitter, Total Jitter and Eye Height must be within the conformance limit as specified in the USB 3.2 specification.

5G Transmitter Eye Near End (TP1) Tests

The 5G Transmitter Eye Near End (TP1) Tests include:

- 5G Near End Random Jitter
- 5G Near End Maximum Deterministic Jitter Test
- 5G Near End Total Jitter at BER- 12 Test
- 5G Near End Template Test
- 5G Near End Differential Output Voltage

This section provides the Methods of Implementation (MOIs) for 5G Transmitter Eye Near End tests using a Keysight 90000A Series Infiniium oscilloscope, USB 3.0 test fixture, and USB3.2 Test Compliance Application.

Connection Diagram

See [Appendix A](#), “Test Connection”.

Test Reference from the Specification

Table 6-16 (ECN for SSP System Jitter Budget) of the USB 3.2 Specification, revision 1.0.


Table 6-16. Informative Jitter Budgeting at the Silicon Pads⁷

Jitter Contribution (ps)	Gen 1 (5 GT/s)			Gen 2 (10 GT/s)		
	Rj ^{1,2}	Dj ³	Tj ⁴ at 10 ⁻¹²	Rj ^{1,2}	Dj ³	Tj ⁴ at 10 ⁻¹²
Tx ⁶	2.42	41	75	1.00	17	31.1
Media ⁵	2.13	45	75	0.00	36	36.0
Rx	2.42	57	91	1.00	27.1	41.2
Total	4.03	143	200	1.41	80.1	100

Notes:

1. Rj is the sigma value assuming a Gaussian distribution.
2. Rj Total is computed as the Root Sum Square of the individual Rj components.
3. Dj budget is using the Dual Dirac method.
4. Tj at a 10⁻¹² BER is calculated as 14.068 * Rj + Dj.
5. The media budget includes the cancellation of ISI from the appropriate Rx equalization function.
6. Tx is measured after application of the JTF.
7. In this table, Tx jitter is defined at TP1, Rx jitter is defined at TP4, and media jitter is defined from TP1 to TP4.

Figure 34 Table 6-16 of USB 3.2 Specification Version 1.0

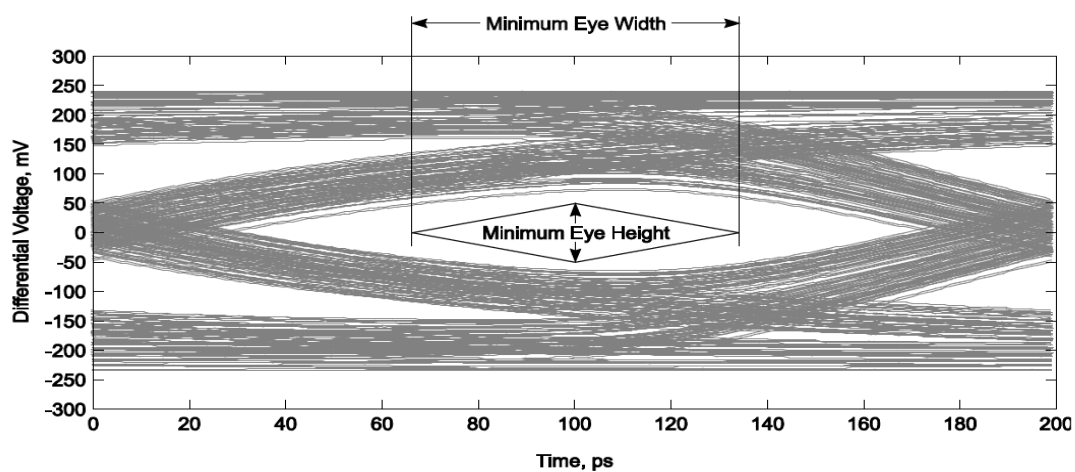

LI-023

Gen 1 eye mask

Figure 35 Gen 1 Eye Mask for 5G Transmitter Near End tests

5G Near End Random Jitter Test

Test Overview The purpose of this test is to verify that the Near End Random Jitter of the transmitter complies with the specification.

Test Condition**Test Method**

SDA

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Set horizontal scale to 2ns, position at 0.
- 5 Ping the DUT until CP1 is attained.
- 6 Setup the Acquisition
 - a Select Sampling Mode as "Real Time"
 - b Set interpolation to OFF
 - c Sample rate to 40GSa/s
 - d 8M points
 - e Bandwidth to 12GHz
- 7 Set Sweep as AUTO
- 8 Setup horizontal scale to 20us, position at 0.
- 9 Stop the acquisition and save the waveform.
- 10 Setup Clock Recovery:

2nd order PLL, data rate of 5Gbps, loop bandwidth of 4.9MHz, damping factor of 0.707
- 11 Setup EZJIT Complete:
 - a Set FUNC1 as source
 - b Enable Jitter Mode on EZJIT+
 - c BER Level: 1E-12
 - d Measurement: TIE (Phase)
 - e Edges: Both
 - f RJ Bandwidth: Narrow
 - g RJ Method: Spectral Only
 - h Pattern Length: Periodic, Auto
- 12 Obtain Near End RJ reading.

Expected / Observable Results The measurement results for Near End Random Jitter must be within the conformance limit as specified in the USB 3.2 specification.

5G Near End Maximum Deterministic Jitter and 5G Near End Total Jitter At BER-6 Test

Test Condition**Test Method**

SDA

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Set horizontal scale to 2ns, position at 0.
- 5 Ping the DUT until CP0 is attained.
- 6 Setup the Acquisition
 - a Select Sampling Mode as "Real Time"
 - b Set interpolation to OFF
 - c Sample rate to 40GSa/s
 - d 8M points
- 7 Set Sweep as AUTO.
- 8 Setup horizontal scale to 20us, position at 0.
- 9 Stop the acquisition and save the waveform.
- 10 Setup Clock Recovery:

2nd order PLL, data rate of 5Gbps, loop bandwidth of 4.9MHz, damping factor of 0.707
- 11 Setup EZJIT Complete:
 - a Set FUNC1 as source
 - b Enable Jitter Mode on EZJIT+
 - c BER Level: 1E-12
 - d Measurement: TIE (Phase)
 - e Edges: Both
 - f RJ Bandwidth: Narrow
 - g RJ Method: Spectral Only
 - h Pattern Length: Arbitrary
 - i ISI Filter Lead: -2
 - j ISI Filter Lag: 18

**Expected /
Observable Results**

The measurement results for Total Jitter, Deterministic Jitter, Eye Width and Eye Height must be within the conformance limit as specified in the USB 3.2 specification.

5G Near End Template Test and 5G Near End Differential Output Voltage Test

Test Condition**Test Method**

SDA

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Set horizontal scale to 2ns, position at 0.
- 5 Ping the DUT until CP0 is attained.
- 6 Setup the Acquisition
 - a Select Sampling Mode as “Real Time”
 - b Set interpolation to OFF
 - c Sample rate to 40GSa/s
 - d 8M points
- 7 Setup InfiniiSim. See [Appendix A](#), “InfiniiSim Setup for 5G” for settings.
- 8 Set Sweep as AUTO.
- 9 Setup horizontal scale to 20us, position at 0.
- 10 Stop the acquisition and save the waveform.
- 11 Setup Clock Recovery:

2nd order PLL, data rate of 5Gbps, loop bandwidth of 4.9MHz, damping factor of 0.707
- 12 Enable Mask Test:
 - a Load Mask
 - b Set Source as FUNC1
 - c Set Color Grade to ON
 - d Set Infinite Persistent to ON
 - e Set Mask Scaling:
 - Horizontal Scaling: -100ps
 - Delta: 200ps
 - f Set Mask Vertical Scaling:
 - 1 Level: 600mV
 - 0 Level: -600mV
 - g Enable “Bind 1 & 0 Levels”
 - h Enable “Real-Time Eye”
- 13 Run Mask Test.
- 14 Measure Eye Height and Eye Width.

**Expected /
Observable Results**

The signal must pass the Mask Test and the Differential Output Voltage must be within the conformance limits as specified in the USB 3.2 specification.

5G BLR Clock Switch Test

The 5G BLR Clock Switch Test includes:

- 5G SSC Clock Switch df/dt

This section provides the Methods of Implementation (MOIs) for Clock Switch test using a Keysight 90000A Series Infiniium oscilloscope, USB 3.0 test fixture, and USB3.2 Compliance Test Application.

Connection Diagram

See [Appendix A](#), "Test Connection".

Test Reference from the Specification

USB 3.2 Specification, Rev 1.0, Section 6.7.1, Table 6-18

Table 6-18. Transmitter Normative Electrical Parameters

Symbol	Parameter	Gen 1 (5.0 GT/s)	Gen 2 (10 GT/s)	Units	Comments
UI	Unit Interval	199.94 (min) 200.06 (max)	99.97 (min) 100.03 (max)	ps	The specified UI is equivalent to a tolerance of ± 300 ppm for each device. Period does not account for SSC induced variations.
		200.34 (min) 200.46 (max)	100.17 (min) 100.23 (max)	ps	Alternate limits apply to "radio friendly" clocking mode which employs a clock whose center frequency is downshifted by 2000ppm. This mode is to be used with a +0/-3000ppm spread.
$V_{TX-DIFF-PF}$	Differential p-p Tx voltage swing	0.8 (min) 1.2 (max)	0.8 (min) 1.2 (max)	V	Nominal is 1 V p-p
$V_{TX-DIFF-PF-LOW}$	Low-Power Differential p-p Tx voltage swing	0.4 (min) 1.2 (max)	0.4 (min) 1.2 (max)	V	Refer to Section 6.7.2. There is no de-emphasis requirement in this mode. De-emphasis is implementation specific for this mode.
$V_{TX-DE-RATIO}$	Tx de-emphasis	3.0 (min) 4.0 (max)	See section 6.7.5.2.	dB	Nominal is 3.5 dB for Gen 1 operation. Gen 2 transmitter equalization requirements are described in section 6.7.5.2.
$R_{TX-DIFF-DC}$	DC differential impedance	72 (min) 120 (max)	72 (min) 120 (max)	Ω	
$V_{TX-RCV-DETECT}$	The amount of voltage change allowed during Receiver Detection	0.6 (max)	0.6 (max)	V	Detect voltage transition should be an increase in voltage on the pin looking at the detect signal to avoid a high impedance requirement when an "off" receiver's input goes below ground.
$C_{AC-COUPLING}$	AC Coupling Capacitor	75 (min) 265 (max)	75 (min) 265 (max)	nF	All Transmitters shall be AC coupled. The AC coupling is required either within the media or within the transmitting component itself.
$t_{CDR-SLEW_MAX}$	Maximum slew rate	10	Not applicable	ms/s	See the jitter white paper for details on this measurement. This is a df/ft specification; refer to Section 6.7.1 for details.
$SSC_{df/dt}$	SSC df/dt	Not applicable	1250 (max)	ppm/ μ s	See note 1.
$V_{TX-CM-IDLE-DELTA}$	Transmitter idle common-mode voltage change	+600 (max) -600 (min)	+600 (max) -600 (min)	mV	The maximum allowed instantaneous common-mode voltage at TP2 while the transmitter is in U2 or U3 and not actively transmitting LFPS. Note that this is an absolute voltage spec referenced to the receive-side termination ground but serves the purpose of limiting the magnitude and/or slew rate of Tx common mode changes.

Note 1: Measured over a 0.5 μ s interval using CP10. The measurements shall be low pass filtered using a filter with 3 dB cutoff frequency that is 60 times the modulation rate. The filter stopband rejection shall be greater or equal to a second order low-pass of 20 dB per decade. Evaluation of the maximum df/dt is achieved by inspection of the low-pass filtered waveform.

Figure 36 Table 6-18 of USB 3.2 Specification Rev 1.0

Test Conditions This test is applicable to only **5G** data rate and **BLR** retimer mode.


Test Overview The purpose of this test is to verify that the measured SSC deviation is within the conformance limits specified in Table 6-18 of the USB 3.2 Specification.

NOTE

Before running the test, please follow the steps mentioned in **BLR Mode - System Configuration** section in the Online Help.

Online Help > **Setting Up the Test Environment** page > **Setting Up Test Information** page > **BLR Mode - System Configuration** section.

- Test Procedure**
- 1 Set up M8020A
 - 2 Set the scope to default setting
 - 3 Setup Function 1 as subtraction of Channel 1 and Channel 3
 - 4 Set horizontal scale to 50 μ s, positioned at -50 μ s
 - 5 Setup the acquisition
 - 6 Setup triggers on channel 4 to detect clock switch event
 - 7 Verify that clock switch event is being captured before clicking **OK** to the prompt. User can load a customized JBERT sequence for the DUT during this prompt.

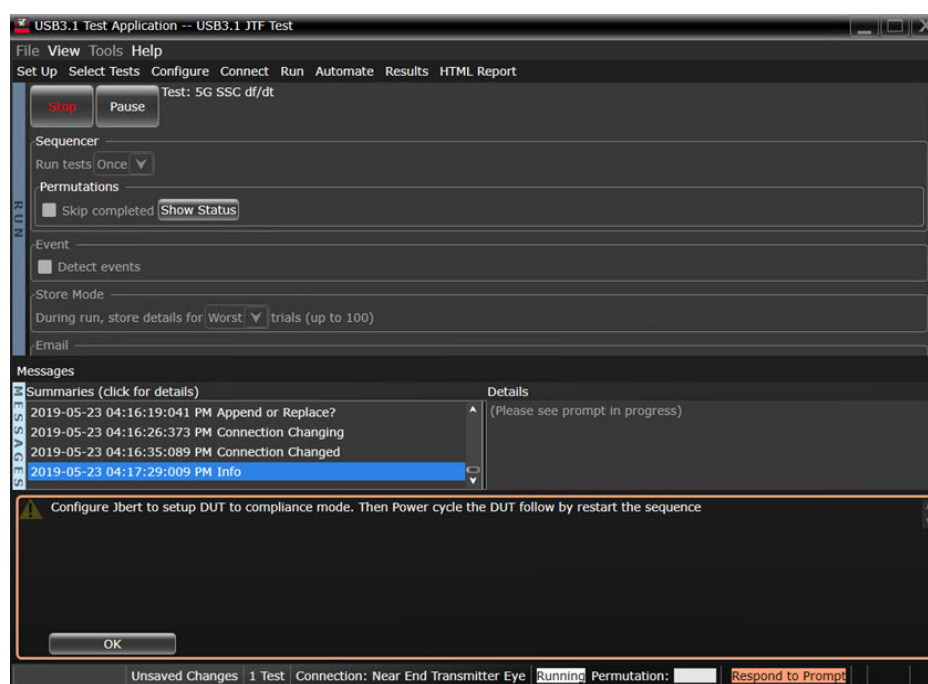

- 8 Click **OK** to proceed with the clock switch test, the application will capture waveform and process by Matlab script.

Expected / Observable Results

The measurement results for 5G SSC Clock Switch df/dt test must be within the conformance limit as specified in the USB 3.2 specification.

5G Jitter Transfer Function Test

The 5G Jitter Transfer Function Test includes:

- 5G JTF

This section provides the Methods of Implementation (MOIs) for 5G Jitter Transfer Function Test using a Keysight 90000A Series Infiniium oscilloscope, USB 3.0 test fixture, and USB3.2 Test Compliance Application.

Connection Diagram

See [Appendix A](#), “Test Connection”.

Test Reference from the Specification

USB 3.2 Specification, Rev 1.0, Appendix E.5, Table E-3

Table E-3. Bit-Level Re-timer Jitter Transfer Function Requirements

Term	Gen 1x1	Notes
<i>Jitter Gain for $f < 500\text{kHz}$</i>	0.1dB (max)	Normative requirement.
<i>Jitter Gain for $f > 500\text{kHz}$</i>	0.0dB (max)	Normative requirement.
Term	Gen 1x1	Notes
<i>JSF 3dB frequency</i>	2MHz (max)	Overall JTF is expected to meet a -20 dB/decade slope above the JSF 3 dB frequency.

Figure 37 Table E-3 of USB 3.2 Specification Revision 1.0


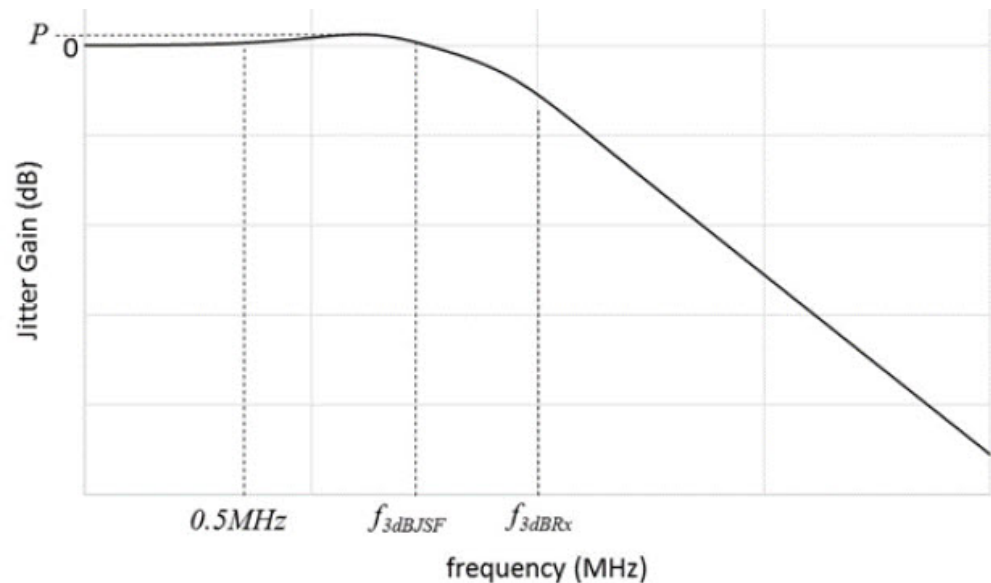


Figure 38 Jitter Transfer Illustration (Figure E-16, USB 3.2 Specification Revision 1.0)

Test Conditions This test is only available for **5G** data rate and **BLR** retimer mode.

Test Overview The purpose of this test is to verify ratio of Pj.

- Test Procedure**
- 1 Set up M8020A
 - 2 Set the scope to default setting
 - 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
 - 4 Set horizontal scale to 50 μ s, position at 0 μ s.
 - 5 Setup the Acquisition
 - 6 Run the test, the following message prompt appears, JBERT will pre-load with a default sequence.

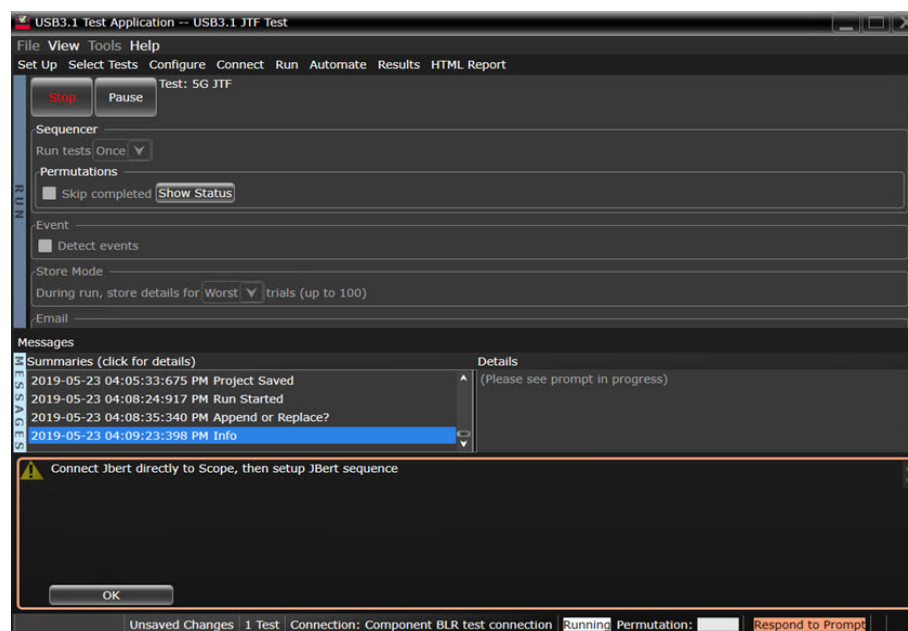

- 7 Measurements are made with direct connection between scope and JBERT
- 8 Click "OK" to continue with the test. The test will sweep across different frequencies to read the jitter measurement using EZJIT plus.

Expected / Observable Results The measurement results for 5G Jitter Transfer Function Test must be within the conformance limit as specified in the USB 3.2 specification.

5G Transmitter Voltage Level Tests

The 5G Transmitter Voltage Level Tests include:

- De-emphasis ratio
- Peak-peak Differential Output Voltage using CP8
- Tx AC Common Mode Voltage Active

This section provides the Methods of Implementation (MOIs) for Voltage Level tests using a Keysight 90000A Series Infiniium oscilloscope, USB 3.0 test fixture, and USB3.2 Test Compliance Application.

Connection Diagram

See [Appendix A](#), “Test Connection”.

Test Reference from the Specification

Table 6-18, Table 6-19, and Table 6-21 of the USB 3.2 Specification, revision 1.0.

Table 6-18. Transmitter Normative Electrical Parameters

Symbol	Parameter	Gen 1 (5.0 GT/s)	Gen 2 (10 GT/s)	Units	Comments
UI	Unit Interval	199.94 (min) 200.06 (max)	99.97 (min) 100.03 (max)	ps	The specified UI is equivalent to a tolerance of ± 300 ppm for each device. Period does not account for SSC induced variations. Alternate limits apply to “radio friendly” clocking mode which employs a clock whose center frequency is downshifted by 2000ppm. This mode is to be used with a +0/-3000ppm spread.
		200.34 (min) 200.46 (max)	100.17 (min) 100.23 (max)	ps	
V _{TX-DIFF-PP}	Differential p-p Tx voltage swing	0.8 (min) 1.2 (max)	0.8 (min) 1.2 (max)	V	Nominal is 1 V p-p
V _{TX-DIFF-PP-LOW}	Low-Power Differential p-p Tx voltage swing	0.4 (min) 1.2 (max)	0.4 (min) 1.2 (max)	V	Refer to Section 6.7.2. There is no de-emphasis requirement in this mode. De-emphasis is implementation specific for this mode.
V _{TX-DE-RATIO}	Tx de-emphasis	3.0 (min) 4.0 (max)	See section 6.7.5.2.	dB	Nominal is 3.5 dB for Gen 1 operation. Gen 2 transmitter equalization requirements are described in section 6.7.5.2.
R _{TX-DIFF-DC}	DC differential impedance	72 (min) 120 (max)	72 (min) 120 (max)	Ω	
V _{TX-RCV-DETECT}	The amount of voltage change allowed during Receiver Detection	0.6 (max)	0.6 (max)	V	Detect voltage transition should be an increase in voltage on the pin looking at the detect signal to avoid a high impedance requirement when an “off” receiver’s input goes below ground.
C _{AC-COUPLING}	AC Coupling Capacitor	75 (min) 265 (max)	75 (min) 265 (max)	nF	All Transmitters shall be AC coupled. The AC coupling is required either within the media or within the transmitting component itself.
t _{CDR_SLEW_MAX}	Maximum slew rate	10	Not applicable	ms/s	See the jitter white paper for details on this measurement. This is a df/ft specification; refer to Section 6.5.4 for details.
SSC _{dfdt}	SSC df/dt	1250 (max)	1250 (max)	ppm/ μ s	See note 1.
V _{TX-CM-IDLE-DELTA}	Transmitter idle common-mode voltage change	+600 (max) -600 (min)	+600 (max) -600 (min)	mV	The maximum allowed instantaneous common-mode voltage at TP2 while the transmitter is in U2 or U3 and not actively transmitting LFPS. Note that this is an absolute voltage spec referenced to the receive-side termination ground but serves the purpose of limiting the magnitude and/or slew rate of Tx common mode changes.

Note 1: Measured over a 0.5 μ s interval using CP10. The measurements shall be low pass filtered using a filter with 3 dB cutoff frequency that is 60 times the modulation rate. The filter stopband rejection shall be greater or equal to a second order low-pass of 20 dB per decade. Evaluation of the maximum df/dt is achieved by inspection of the low-pass filtered waveform.

Figure 39 Table 6-18 of USB 3.2 Specification Version 1.0

Table 6-19. Transmitter Informative Electrical Parameters at TP1 (unless otherwise specified)

Symbol	Parameter	5.0 GT/s	10 GT/s	Units	Comments
$t_{\text{MIN-PULSE-DJ}}$	Deterministic min pulse	0.96	0.96	UI	Tx pulse width variation that is deterministic
$t_{\text{MIN-PULSE-TJ}}$	Tx min pulse	0.90	0.90	UI	Min Tx pulse at 10^{-12} including Dj and Rj
$t_{\text{TX-EYE}}$	Transmitter Eye	0.625 (min)	0.646 (min)	UI	Includes all jitter sources
$t_{\text{TX-DJ-DD}}$	Tx deterministic jitter	0.205 (max)	0.170 (max)	UI	Deterministic jitter only assuming the Dual Dirac distribution
$C_{\text{TX-PARASITIC}}$	Tx input capacitance for return loss	1.25 (max)	1.1 (max)	pf	Parasitic capacitance to ground
$R_{\text{TX-DC}}$	Transmitter DC common mode impedance	18 (min) 30 (max)	18 (min) 30 (max)	Ω	DC impedance limits to guarantee Receiver detect behavior. Measured with respect to AC ground over a voltage of 0-500 mV.
$I_{\text{TX-SHORT}}$	Transmitter short-circuit current limit	60 (max)	60 (max)	mA	The total current Transmitter can supply when shorted to ground.
$V_{\text{TX-DC-CM}}$	Transmitter DC common-mode voltage	0 (min) 2.2 (max)	0 (min) 2.2 (max)	V	The instantaneous allowed DC common-mode voltages at the connector side of the AC coupling capacitors.
$V_{\text{TX-CM-AC-PP-ACTIVE}}$	Tx AC common mode voltage active	100	100 (max)	mV (p-p)	Maximum mismatch from Txp + Txn for both time and amplitude.
$V_{\text{TX-CM-DC-ACTIVE-IDLE-DELTA}}$	Absolute DC Common Mode Voltage between U1 and U0	200 (max)	200 (max)	mV	
$V_{\text{TX-IDLE-DIFF-AC-PP}}$	Electrical Idle Differential Peak -Peak Output Voltage	0 (min) 10 (max)	0 (min) 10 (max)	mV	
$V_{\text{TX-IDLE-DIFF-DC}}$	DC Electrical Idle Differential Output Voltage	0 (min) 10 (max)	0 (min) 10 (max)	mV	Voltage shall be low pass filtered to remove any AC component. This limits the common mode error when resuming U1 to U0.

Figure 40 Table 6-19 of USB 3.2 Specification Version 1.0


Table 6-21. Gen 2 Transmitter Equalization Settings

Parameter	Value	Comments
Preshoot (dB)	2.2 ± 1.0	Normative requirement ¹
De-emphasis (dB)	2.1 (min) and 7.0 (max)	Normative requirement ¹
C ₋₁	-0.083	Informative – for reference only
C ₁	-0.125	Informative – for reference only
Nominal Boost (dB)	4.7	Informative – for reference only
V _a /V _d	0.834	Informative – for reference only
V _b /V _d	0.584	Informative – for reference only
V _c /V _d	0.750	Informative – for reference only

Notes:

1. Measured at the output of the compliance breakout board in Figure 6-24.

Figure 41 Table 6-21 of USB 3.2 Specification Version 1.0

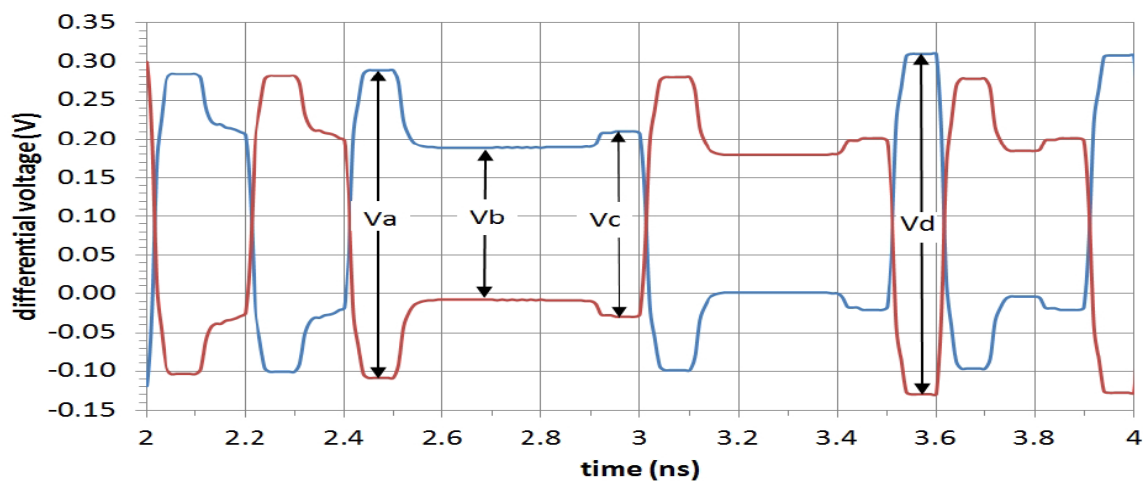

$$\text{Preshoot} = 20\log(V_c/V_b)$$

$$\text{De-emphasis} = 20\log(V_b/V_a)$$

Figure 42 5G Transmitter Voltage Level Test measurement signal

Test Conditions

Characterization Mode	Tx Near End (TP0)
Checked	Checked

Test Overview

The purpose of this test is to evaluate the De-emphasis ratio, differential output voltage and common mode voltage and to ensure that they comply with the specification.

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Set horizontal scale to 2ns, position at 0.
- 5 Set the trigger to "Auto Sweep"

- 6 Setup the Acquisition
- 7 Set interpolation to OFF
- 8 Set Acquire points to AUTO
- 9 Set Sampling rate to 40GSa/s
- 10 Set horizontal scale to 20ns, position at 0.
- 11 Ping the DUT until CP7 is attained.
- 12 The amplitude will be the Top reading – Base reading. See Figure 43, which shows an example for amplitude measurement using Histogram.

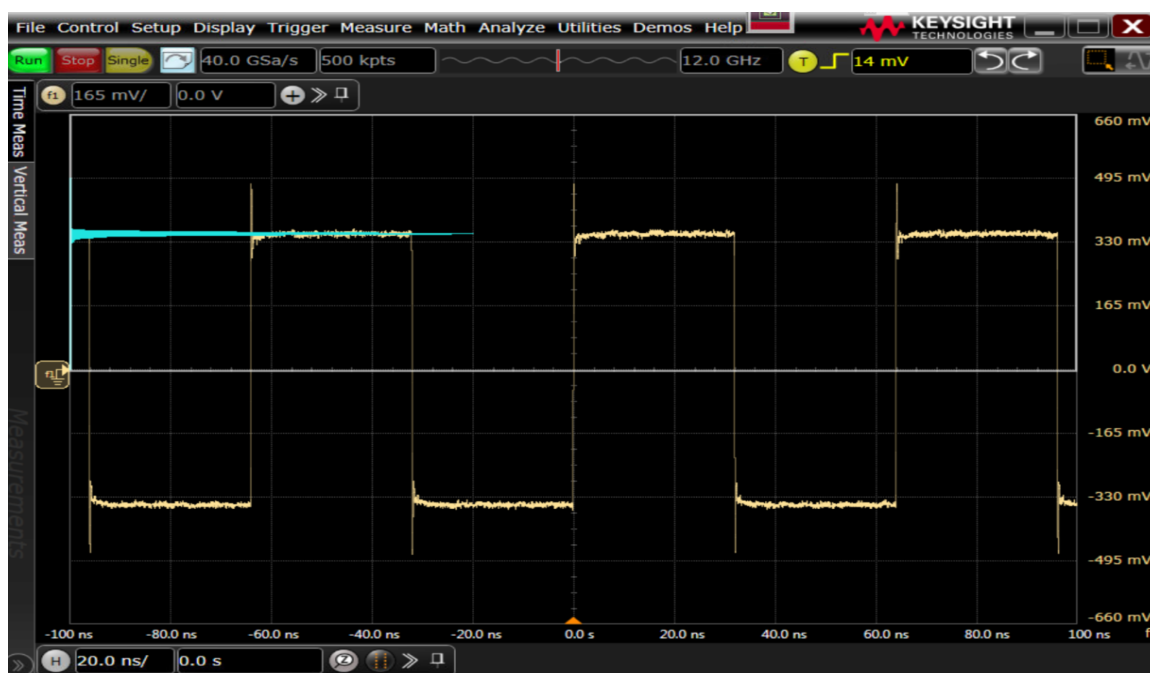


Figure 43 Measuring Amplitude using Histogram

- 13 Ping the DUT until CP8 is attained.
- 14 Repeat step 12 to measure the amplitude.
- 15 Calculate the De-emphasis ratio using the equation:

$$\text{De-emphasis ratio} = 20\log(\text{CP8}/\text{CP7})$$
- 16 Record the measurement for De-emphasis ratio and differential voltage of CP8.
- 17 Ping the DUT until CP0 is attained.
- 18 Setup Function 4 as Common Mode of Channel 1 and Channel 3.
- 19 Measure Vpp of Function 4.
- 20 Record the measurement results.

Expected / Observable Results

The measurement results for De-emphasis, Amplitude of CP8 and Tx Command Mode Voltage must be within the conformance limit as specified in the USB 3.2 specification.

5 10G Tests

10G Skew Measurement for Retimer Test /	72
10G SCD and LBPS Tests /	75
10G Deemphasis and Preshoot Tests /	83
10G Transmitter SSC Tests /	88
10G Eye Measurement Test /	95
10G Transmitter Random Jitter Tests /	97
10G Transmitter Eye Far End (TP4) Tests /	101
10G Transmitter Eye Short Channel (TP2) Tests /	109
10G Transmitter Eye Near End (TP1) Tests /	113

This chapter describes the 10G tests that are performed by the USB3.2 Test Compliance Application in more detail; it contains information from (and refers to) the *Universal Serial Bus 3.2 Specification, Revision 1.0*, and it describes how the tests are performed.

10G Skew Measurement for Retimer Test

The 10G Skew Measurement Retimer Test includes:

- Skew Measurement Test (Information Only)

This section provides the Methods of Implementation (MOIs) for Skew Measurement for Retimer Test using a Keysight 90000A Series Infiniium oscilloscope, USB 3.0 test fixture, and USB3.2 Test Compliance Application.


Connection Diagram See [Appendix A](#), “Test Connection”.


Test Reference from the Specification Not applicable (information only test)

Test Overview The purpose of this test is to measure lane to lane skew.

- Test Procedure**
- 1 Set Scope to Default.
 - 2 Connect your Device Under Test to the test fixture. Apply VBUS to the test fixture by connecting to the USB port on the front panel of the scope.
 - 3 Connect Tx1+ and Tx1- of the test fixture to Oscilloscope Channel 1 and Channel 3 using SMA cables. Connect Tx2+ and Tx2- of the test fixture to Oscilloscope Channel 2 and Channel 4 using SMA cables.
 - 4 Connect Rx+ of the test fixture to the Aux Out of DSO 90000 scopes or Cal Out from DSOX 90000 Scopes.

5 Run Skew Measurement test from the test application

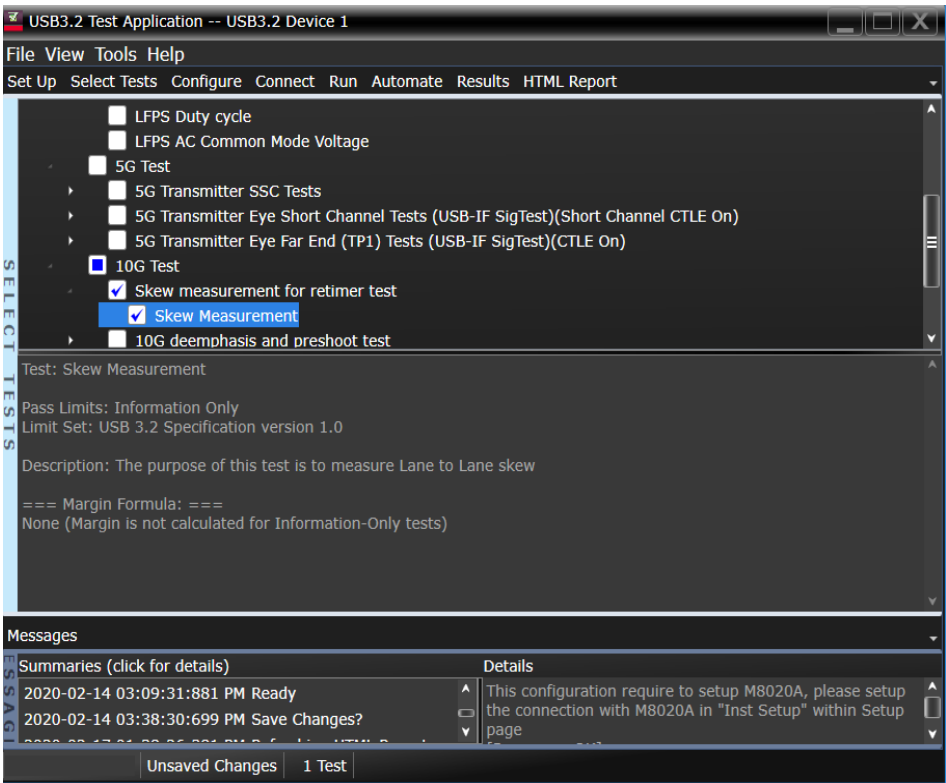

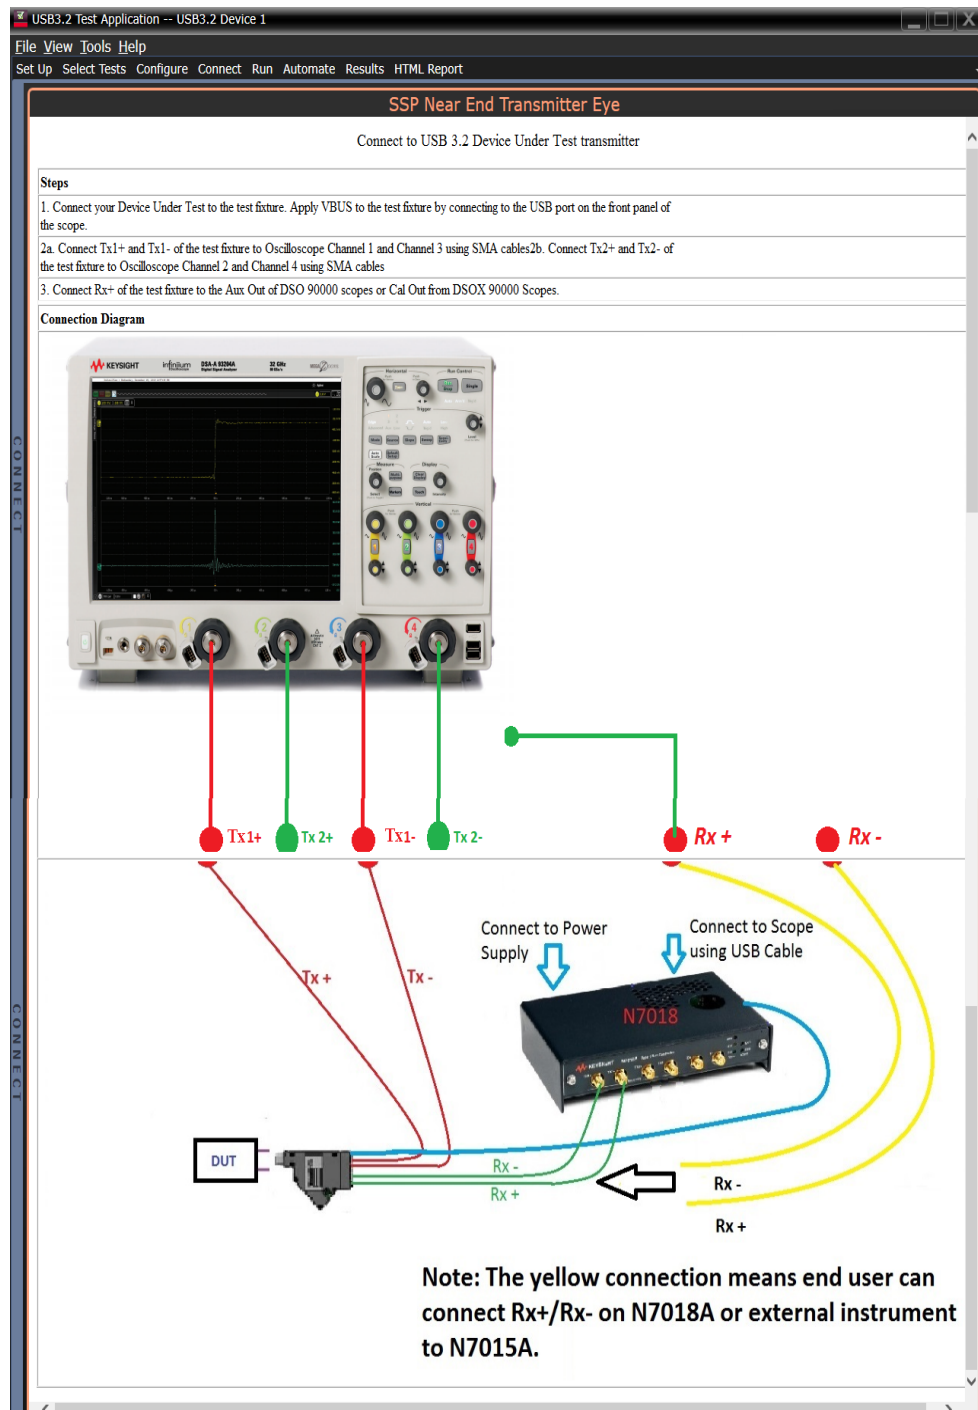

6 After running the test, lane to lane skew measurement value should be available.

Expected / Observable Results

The result of the test includes skew measurement value from lane to lane.

10G SCD and LBPS Tests

The 10G LBPS Tests include:

- 10G LBPS tPWM
- 10G LBPS tLFPS_0
- 10G LBPS tLFPS_1

The 10G SCD Tests include:

- 10G SuperSpeedPlus Capability Declaration (SCD1)
- 10G SuperSpeedPlus Capability Declaration (SCD2)
- 10G SCD Rise Time
- 10G SCD Fall Time
- 10G SCD Duty Cycle
- 10G SCD Period
- 10G SCD tRepeat
- 10G SCD tBurst
- 10G SCD Differential Voltage
- 10G SCD Common Mode Voltage

This section provides the Methods of Implementation (MOIs) for 10G LBPS and 10G SCD tests using a Keysight 90000A Series Infiniium oscilloscope, USB 3.0 test fixture, and USB3.2 Test Compliance Application.

10G LBPS Tests

Connection Diagram See [Appendix A](#), “Test Connection”.

Test Reference from the Specification Table 6-33 of the USB 3.2 Specification, revision 1.0.

Table 6-33. LBPS Transmit and Receive Specification

	Unit	Transmit			Receive		
		Min	TYP	Max	Min	TYP	Max
tPWM	μs	2	2.2	2.4			
tLFPS-0	μs	0.5		0.80	0.45		0.85
tLFPS-1	μs	1.33		1.80	1.28		1.85

Figure 44 Table 6-33 of USB 3.2 Specification Version 1.0

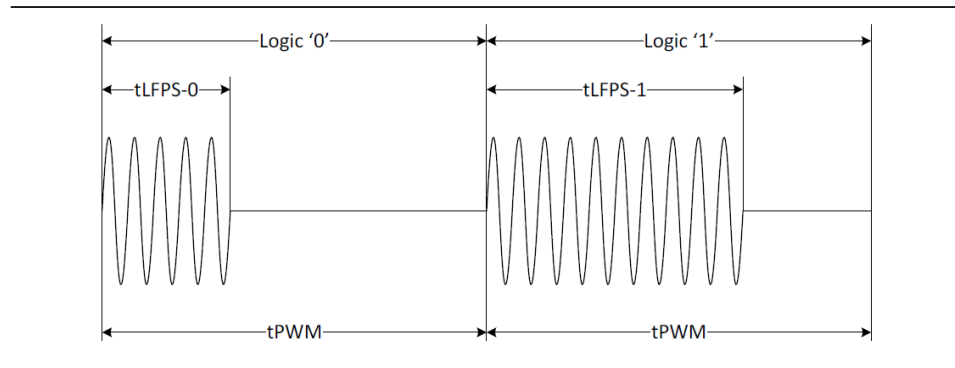


Figure 6-34. Logic Representation of LBPS

Figure 45 Figure 6-34 of USB 3.2 Specification Version 1.0

Test Overview The purpose of this test is to evaluate the LBPS signal to ensure that the timing variables comply with the specification.

- Test Procedure**
- 1 Set up the stimulus connection on the **Set Up** tab.
 - 2 Disconnect the USB 3.0 test fixture from the DUT.
 - 3 Close the HSETT tool.
 - 4 Setup horizontal scaling with Reference to Right, Scale of 30us, position at 200us.
 - 5 Setup Function 1 as subtraction of Channel 1 and Channel 3.
 - 6 Setup Function 4 as common mode of Channel 1 and Channel 3.
 - 7 Setup the trigger:
 - a Trigger level to 200mV
 - b Hold off to 500us
 - c Trigger mode as Pattern mode
 - d Set trigger Logic as Low on trigger channel
 - e Setup trigger condition to range between 2us to 5 us
 - 8 Setup the trigger to “Single”

- 9 Setup the Acquisition
 - a Select Real Time mode
 - b Set interpolation to OFF
 - c Acquire points to AUTO
 - d Sample rate to 1GSa/s
- 10 Set stimulus to ON.
- 11 Verify that the correct waveform has been acquired. The highlighted area in Figure 46 is the LBPS signal.

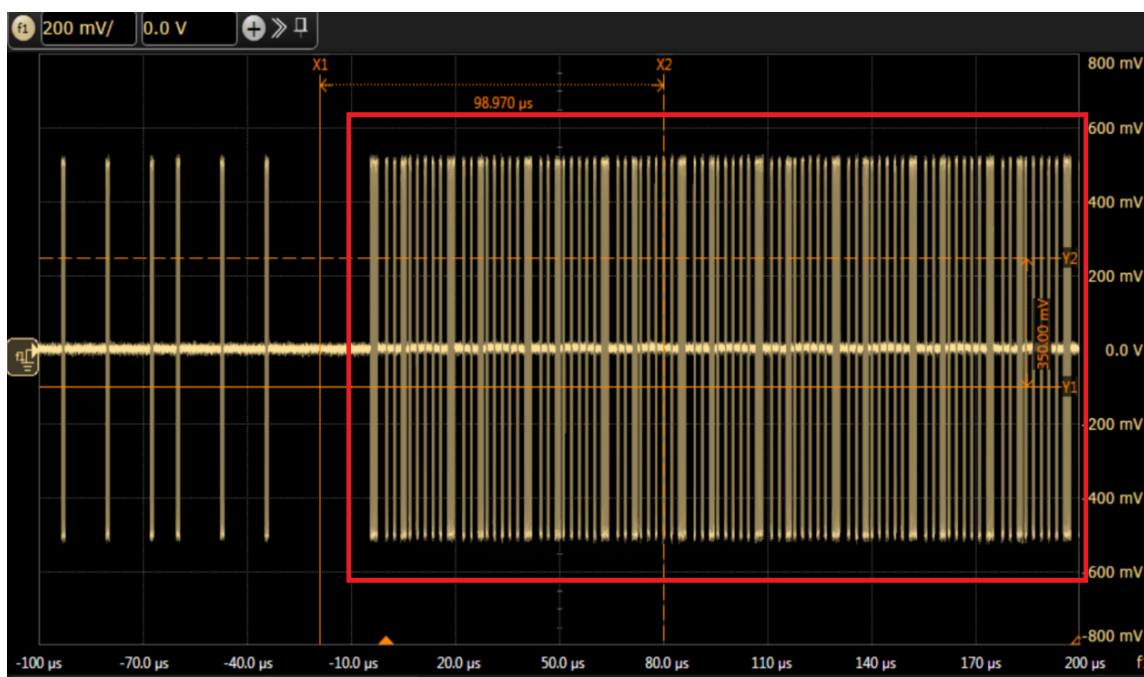


Figure 46 LBPS signal on the acquired waveform in 10G LBPS tests

- 12 Set up the parameter measurement:
 - a Get all locations for the Start Burst and the Stop Burst of the LBPS waveform.
 - b Burst Width Measurement is the Start edge – Stop edge of the selected Burst.
 - c Burst Interval is the Start edge of the next burst – Start edge of current Burst.
 - d Measure the parameter below on the LBPS signal. Refer to *Universal Serial Bus 3.2 Specification, Revision 1.0* for examples pertaining to tPWM, tLFPS_0 and tLFPS_1.
- 13 Report the measurement values.

**Expected /
Observable Results**

The measurement results for tPWM, tLFPS_0 and tLFPS_1 must be within the conformance limit as specified in the USB 3.2 specification.

10G SuperSpeedPlus Capability Declaration (SCD) Tests

Connection Diagram See [Appendix A](#), “Test Connection”.

Test Reference from the Specification Table 6-29, Table 6-30, and Table 6-32 of the USB 3.2 Specification, revision 1.0.

Table 6-29. Normative LFPS Electrical Specification

Symbol	Minimum	Typical	Maximum	Units	Comments
tPeriod	20		100	ns	
tPeriod for SuperSpeedPlus	20		80	ns	
V _{CM-AC-LFPS}			V _{TX-CM-AC-PP-ACTIVE}	mV	See Table 6-19
V _{CM-LFPS-Active}			10	mV	
V _{TX-DIFF-PP-LFPS}	800		1200	mV	Peak-peak differential amplitude
V _{TX-DIFF-PP-LFPS-LP}	400		600	mV	Low power peak-peak differential amplitude
tRiseFall2080			4	ns	Measured at TP2, as shown in Figure 6-20.
Duty cycle	40		60	%	Measured at compliance TP2, as shown in Figure 6-20.

Figure 47 Table 6-29 of USB 3.2 Specification Version 1.0

Table 6-30. LFPS Transmitter Timing for SuperSpeed Designs¹

	tBurst				tRepeat		
	Min	Typ	Max	Minimum Number of LFPS Cycles ²	Min	Typ	Max
Polling.LFPS	0.6 μ s	1.0 μ s	1.4 μ s		6 μ s	10 μ s	14 μ s
Ping.LFPS ⁸	40 ns		200 ns	2	160 ms	200 ms	240 ms
Ping.LFPS for SuperSpeedPlus ⁹	40 ns		160ns	2	160 ms	200 ms	240 ms
tReset ³	80 ms	100 ms	120 ms				
U1 Exit ^{4,5}	900 ns ⁷		2 ms				
U2 / Loopback Exit ^{4,5}	80 μ s ⁷		2 ms				
	tBurst				tRepeat		
	Min	Typ	Max	Minimum Number of LFPS Cycles ²	Min	Typ	Max
U3 Wakeup ^{4,5}	80 μ s ⁷		10 ms				

Notes:

1. If the transmission of an LFPS signal does not meet the specification, the receiver behavior is undefined.
2. Only Ping.LFPS has a requirement for minimum number of LFPS cycles.
3. The declaration of Ping.LFPS depends on only the Ping.LFPS burst.
4. Warm Reset, U1/U2/Loopback Exit, and U3 Wakeup are all single burst LFPS signals. tRepeat is not applicable.
5. The minimum duration of an LFPS burst shall be transmitted as specified. The LFPS handshake process and timing are defined in Section 6.9.2.
6. A Port in U2 or U3 is not required to keep its transmitter DC common mode voltage. A port in U2 or U3 is not required to keep its transmitter DC common mode voltage but must not exceed the VTX-CM-IDLE-DELTA spec at TP1. This can be met by either managing the magnitude of the CM shift or the slew rate of the shift. Accordingly, LFPS detectors must tolerate positive and negative CM excursions up to VTX-CM-IDLE-DELTA without false detection. When a port begins U2 exit or U3 wakeup, it may start sending LFPS signal while establishing its transmitter DC common mode voltage. To make sure its link partner receives a proper LFPS signal, a minimum of 80 μ s tBurst shall be transmitted. The same consideration also applies to a port receiving LFPS U2 exit or U3 wakeup signal.
7. A port is still required to detect U1 LFPS exit signal at a minimum of 300ns. The extra 300ns is provided as the guard band for successful U1 LFPS exit handshake.
8. This requirement applies to Gen 1x1 only designs.
9. This requirement applies to Gen 1x2, Gen 2x1 and Gen 2x2 designs.

Figure 48 Table 6-30 of USB 3.2 Specification Version 1.0

Table 6-32. Binary Representation of Polling.LFPS

tRepeat (us)	Logic value
6~9	'0'
11~14	'1'
9~11	illegal

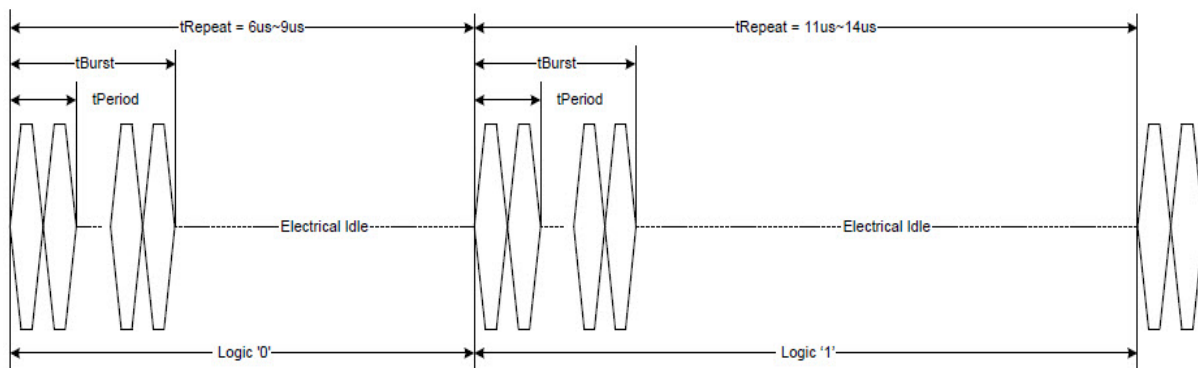
Figure 6-35. Example of Binary Representation based on Polling.LFPS

Figure 49 Table 6-32 and Figure 6-35 of USB 3.2 Specification Version 1.0

Test Overview

The purpose of this test is to evaluate the SCD signal to ensure that the timing variables comply with the specification.

Test Procedure

- 1 Set up the stimulus connection on the **Set Up** tab.
- 2 Disconnect the USB 3.0 test fixture from the DUT.
- 3 Close the HSETT tool.
- 4 Setup horizontal scaling with Reference to Right, Scale of 150us, position at -5us.
- 5 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 6 Setup Function 4 as common mode of Channel 1 and Channel 3.
- 7 Setup the trigger:
 - a Trigger level to 200mV
 - b Hold off to 500us
 - c Trigger mode as Pattern mode
 - d Set trigger Logic as Low on trigger channel
 - e Setup trigger condition to range between 2us to 5 us
- 8 Setup the trigger to "Single"
- 9 Setup the Acquisition
 - a Select Real Time mode
 - b Set interpolation to OFF
 - c Acquire points to AUTO
 - d Sample rate to 40GSa/s
 - e Bandwidth: 12GHz

- 10 Set stimulus to ON.
- 11 Verify that the correct waveform has been acquired. The highlighted area in Figure 50 is the SCD signal.

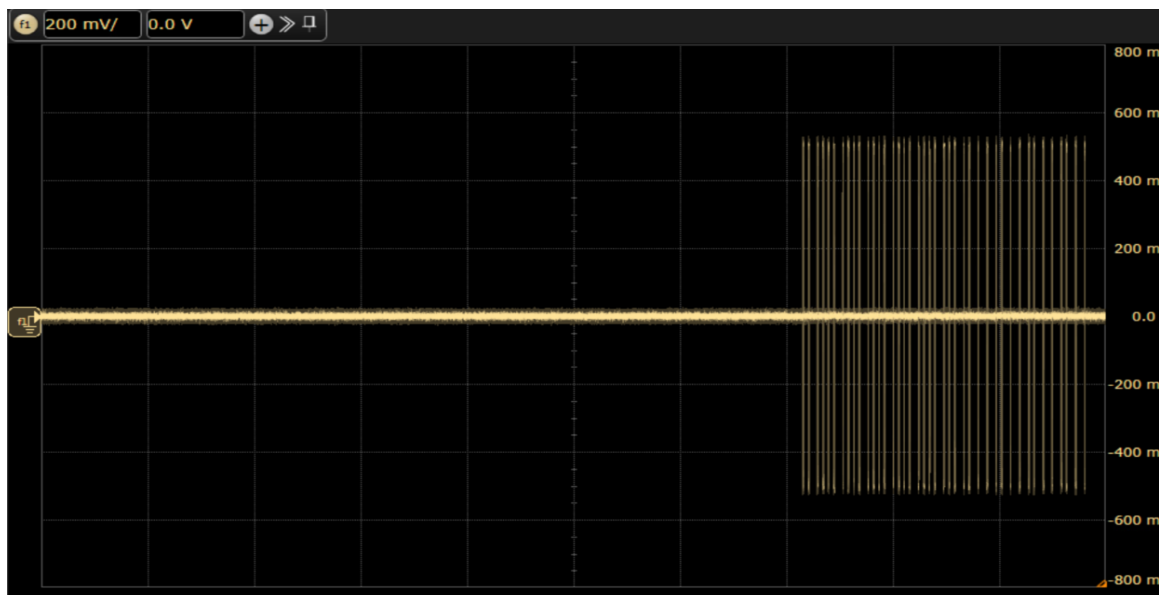


Figure 50 SCD signal on the acquired waveform in 10G SCD tests

- 12 Set up the parameter measurement:
 - a Get all locations for the Start Burst and the Stop Burst of the SCD waveform.
 - b Burst Width Measurement is the Start edge – Stop edge of the selected Burst.
 - c Measure tRepeat, where tRepeat is the Burst Interval (Start edge of the next burst – Start edge of current burst) measurement.
- 13 Decode SCD1 from the waveform.

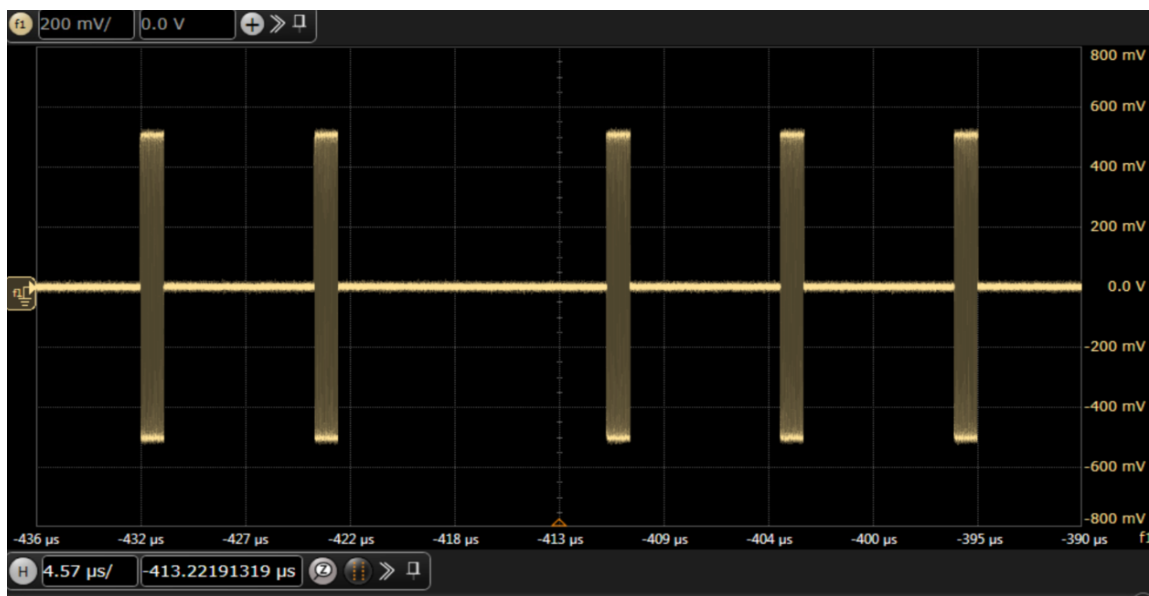


Figure 51 Decoding SCD1

14 Decode SCD2 from the waveform.

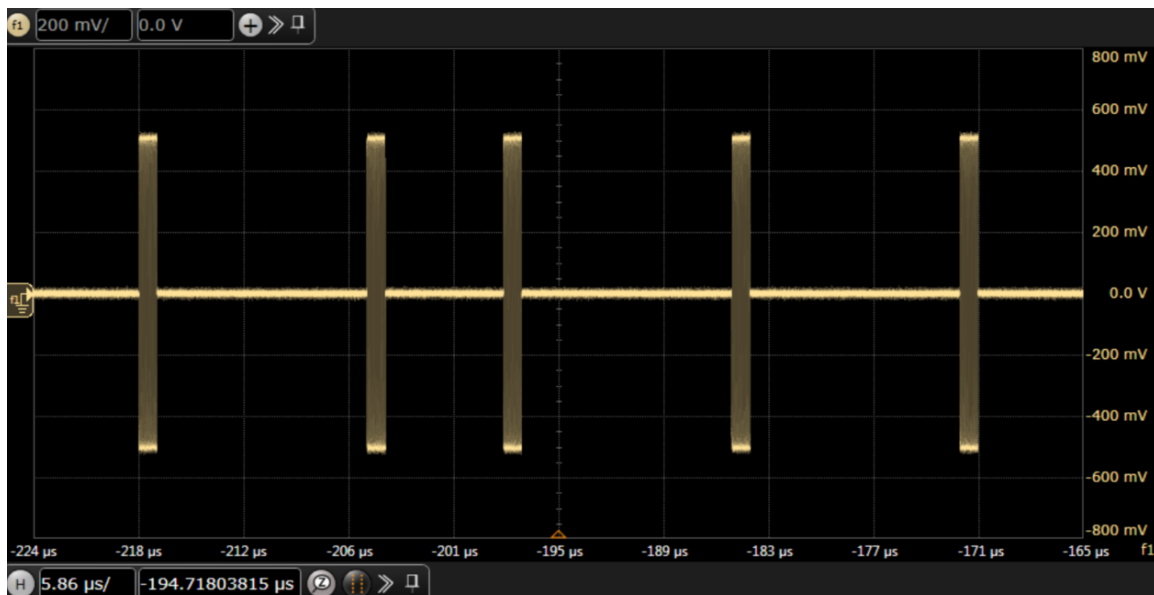


Figure 52 Decoding SCD2

15 Measure the parameters listed below on each Burst. The measurement window on each Burst must be set to 100ns after the Burst start and 100ns before the Burst end. This is done to comply with the CTS requirements.

- a Differential Voltage
- b Period
- c Duty Cycle
- d Rise Time
- e Fall Time
- f Common Mode Voltage

16 Report the measurement values.

**Expected /
Observable Results**

- SCD pattern must be correct. SCD1 pattern is '0010' and SCD2 pattern is '1101'.
- The timing measurement results must be within the conformance limit as specified in the USB 3.2 specification.

10G Deemphasis and Preshoot Tests

The 10G Deemphasis and Preshoot Tests include:

- Deemphasis
- Preshoot

This section provides the Methods of Implementation (MOIs) for Transmitter SSC tests using a Keysight 90000A Series Infiniium oscilloscope, USB 3.0 test fixture, and USB3.2 Test Compliance Application.

Connection Diagram See [Appendix A](#), “Test Connection”.

Test Reference from the Specification Section 6.7.5.2, Table 6-21 of the USB 3.2 Specification, revision 1.0.

USB 3.2 Engineering Change Notice (ECN), Title: TxEQ Equalization Settings

Please note, as per the mentioned ECN, the de-emphasis value (in Table 6-21 of the spec) has been changed to 2.1 (min) and 7.0 (max) from the previous $-3.1 + 1.0$.

Table 6-21. Gen 2 Transmitter Equalization Settings

Parameter	Value	Comments
Preshoot (dB)	2.2 ± 1.0	Normative requirement ¹
De-emphasis (dB)	2.1 (min) and 7.0 (max)	Normative requirement ¹
C ₋₁	-0.083	Informative – for reference only
C ₁	-0.125	Informative – for reference only
Nominal Boost (dB)	4.7	Informative – for reference only
V _a /V _d	0.834	Informative – for reference only
V _b /V _d	0.584	Informative – for reference only
V _c /V _d	0.750	Informative – for reference only

Notes:

1. Measured at the output of the compliance breakout board in Figure 6-24.

Figure 53 Table 6-21 of USB 3.2 Specification Version 1.0

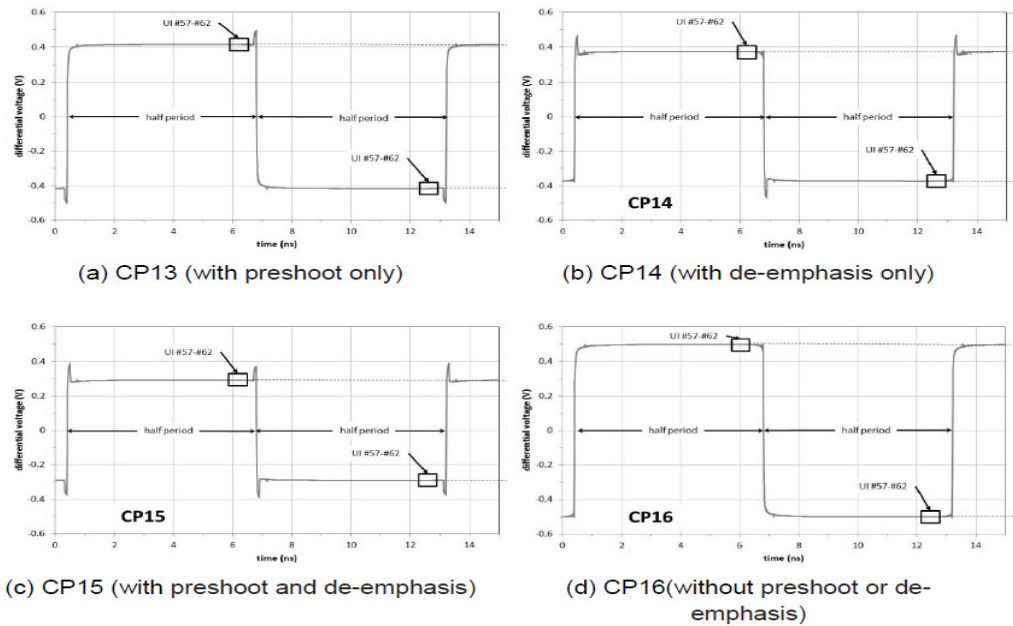
Figure 6-25. Example waveforms for measuring transmitter equalization

Figure 54 Waveforms with and without Deemphasis and Preshoot

Measurement of the preshoot and de-emphasis is done using CP13, CP14 and CP15. V_a , V_c and V_b are obtained using CP13, CP14 and CP15 as shown in Figure 6-23. Preshoot and de-emphasis are calculated using equations (10) and (11).

$$(10) \quad \text{preshoot} = 20 \log_{10} \left(\frac{V_{CP14}}{V_{CP15}} \right) = 20 \log_{10} \left(\frac{-C_{-1} + C_0 + C_1}{C_{-1} + C_0 + C_1} \right)$$

$$(11) \quad \text{deemphasis} = 20 \log_{10} \left(\frac{V_{CP15}}{V_{CP13}} \right) = 20 \log_{10} \left(\frac{C_{-1} + C_0 + C_1}{C_{-1} + C_0 - C_1} \right)$$

Figure 55 Equations for Preshoot and Deemphasis

Test Condition#1

TxEQ Test Mode

True

Test Overview

The purpose of this test is to evaluate Preshoot and Deemphasis and that they comply with the specification, using the SigTest tool.

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Set horizontal scale to 2ns, position at 0.
- 5 Set trigger to AUTO Sweep.

- 6 Setup the Acquisition
 - a Set interpolation to OFF
 - b Set acquire points to Auto
 - c Sample rate to 40GSa/s
 - d Bandwidth to 12GHz
- 7 Ping the DUT until CP13 is attained. Save the waveform in binary format.
- 8 Ping the DUT until CP14 is attained. Save the waveform in binary format.
- 9 Ping the DUT until CP15 is attained. Save the waveform in binary format.
- 10 Launch SigTest tool.
 - a From the drop-down options, select USB 3.2 Tx EQ.

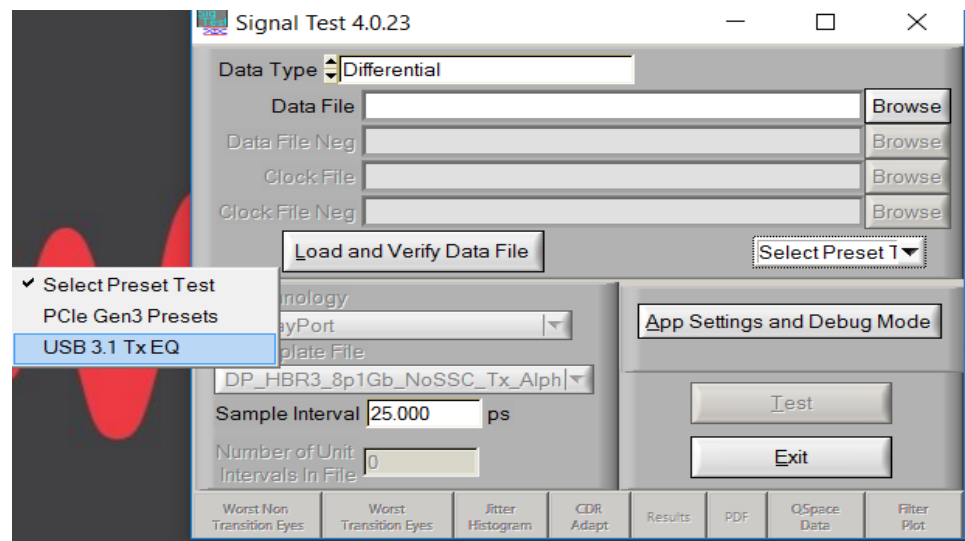


Figure 56 Selecting Preset option in the SigTest tool

- b Place all waveform files (saved in the previous steps) in a common folder.
- c Select "All Files in Folder" option.
- d Browse to the folder that contains all waveform files.

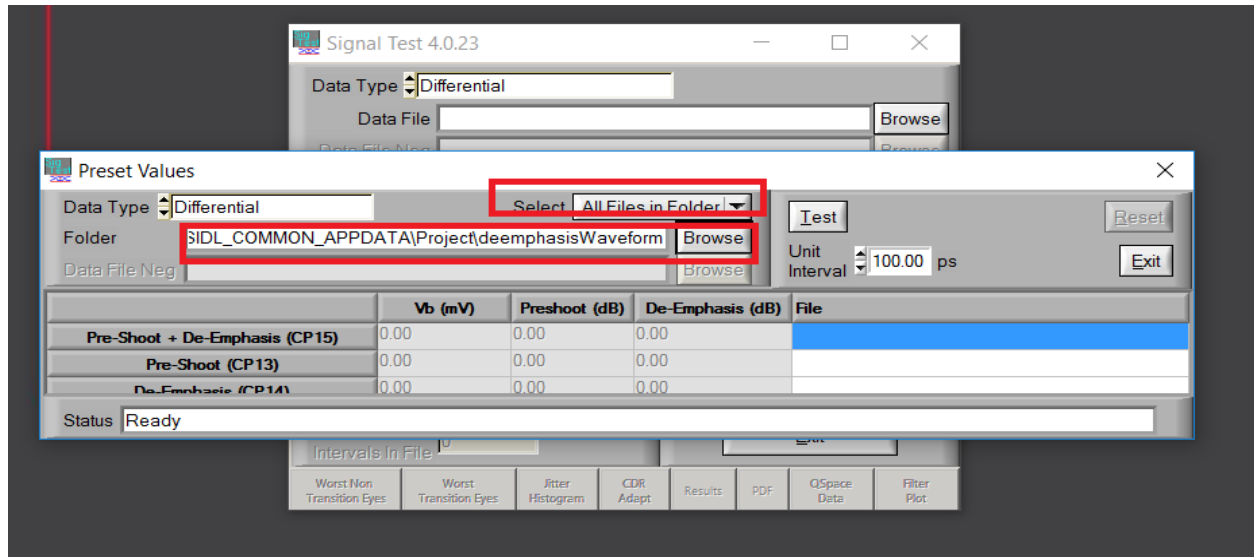


Figure 57 Selecting Waveform Files in the SigTest tool

- e Click the “Test” button.
- f Record the results.

Expected / Observable Results

The measurement results for Preshoot and Deemphasis must be within the conformance limit as specified in the USB 3.2 specification.

Test Condition#2

TxEQ Test Mode
False

Test Procedure

- Set up the stimulus for 2-cycle LFPS ping.
- Default the scope.
- Setup Function 1 as subtraction of Channel 1 and Channel 3.
- Set horizontal scale to 2ns, position at 0.
- Set trigger to AUTO Sweep.
- Setup the Acquisition
 - Set interpolation to OFF
 - Set acquire points to Auto
 - Sample rate to 40 GSa/s
- Ping the DUT until CP13 is attained.
- The top is measured between UI#57 to UI#62.
- The base is measured between UI#57 to UI#62.
- The amplitude is measured as Top reading - Base reading. Refer to [Figure 54](#) (or Figure 6-23 of USB 3.2 Specification, revision 1.0).
- Ping the DUT until CP14 is attained.
- Repeat steps from [step 8](#) to [step 10](#).
- Ping the DUT until CP15 is attained.
- Repeat steps from [step 8](#) to [step 10](#).
- Calculate Preshoot and Deemphasis using equations shown in [Figure 55](#).

16 Record the measurement result.

**Expected /
Observable Results**

The measurement results for Preshoot and Deemphasis must be within the conformance limit as specified in the USB 3.2 specification.

10G Transmitter SSC Tests

The 10G Transmitter Spread Spectrum Clocking (SSC) Tests include:

- Unit Interval (with SSC) Test
- SSC Deviation Test
- SSC Modulation Rate Test
- SSC df/dt Test

This section provides the Methods of Implementation (MOIs) for 5G Transmitter SSC tests using a Keysight 90000A Series Infiniium oscilloscope, USB 3.0 test fixture, and USB3.2 Test Compliance Application.

Connection Diagram See [Appendix A](#), “Test Connection”.

Test Reference from the Specification Table 6-17 and Table 6-18 of the USB 3.2 Specification, revision 1.0.

Table 6-17. SSC Parameters

Symbol	Description	Limits		Units	Note
		Min	Max		
$t_{SSC-MOD-RATE}$	Modulation Rate	30	33	kHz	
$t_{SSC-FREQ-DEVIATION}$	SSC deviation	+0/-4000 +0/-2000	+0/-5000 +0/-3000	ppm	1, 2, 3 4

Note:

1. The data rate is modulated from 0 ppm to -5000 ppm of the nominal data rate frequency and scales with data rate.
2. This is measured below 2 MHz only.
3. Receiver compliance testing is done under the maximum spread condition.
4. Alternate limits apply to “radio friendly” clock mode which employs a clock whose center frequency is downshifted by 2000ppm.

Figure 58 Table 6-17 of USB 3.2 Specification Version 1.0

Table 6-18. Transmitter Normative Electrical Parameters

Symbol	Parameter	Gen 1 (5.0 GT/s)	Gen 2 (10 GT/s)	Units	Comments
UI	Unit Interval	199.94 (min) 200.06 (max)	99.97 (min) 100.03 (max)	ps	The specified UI is equivalent to a tolerance of ± 300 ppm for each device. Period does not account for SSC induced variations. Alternate limits apply to "radio friendly" clocking mode which employs a clock whose center frequency is downshifted by 2000ppm. This mode is to be used with a $\pm 0/-3000$ ppm spread.
		200.34 (min) 200.46 (max)	100.17 (min) 100.23 (max)	ps	
$V_{TX-DIFF-PP}$	Differential p-p Tx voltage swing	0.8 (min) 1.2 (max)	0.8 (min) 1.2 (max)	V	Nominal is 1 V p-p
$V_{TX-DIFF-PP-LOW}$	Low-Power Differential p-p Tx voltage swing	0.4 (min) 1.2 (max)	0.4 (min) 1.2 (max)	V	Refer to Section 6.7.2. There is no de-emphasis requirement in this mode. De-emphasis is implementation specific for this mode.
$V_{TX-DE-RATIO}$	Tx de-emphasis	3.0 (min) 4.0 (max)	See section 6.7.5.2.	dB	Nominal is 3.5 dB for Gen 1 operation. Gen 2 transmitter equalization requirements are described in section 6.7.5.2.
$R_{TX-DIFF-DC}$	DC differential impedance	72 (min) 120 (max)	72 (min) 120 (max)	Ω	
$V_{TX-RCV-DETECT}$	The amount of voltage change allowed during Receiver Detection	0.6 (max)	0.6 (max)	V	Detect voltage transition should be an increase in voltage on the pin looking at the detect signal to avoid a high impedance requirement when an "off" receiver's input goes below ground.
$C_{AC-COUPLING}$	AC Coupling Capacitor	75 (min) 265 (max)	75 (min) 265 (max)	nF	All Transmitters shall be AC coupled. The AC coupling is required either within the media or within the transmitting component itself.
$t_{CDR-SLEW-MAX}$	Maximum slew rate	10	Not applicable	ms/s	See the jitter white paper for details on this measurement. This is a df/ft specification; refer to Section 6.5.4 for details.
SSC_{dfdt}	SSC df/dt	1250 (max)	1250 (max)	ppm/ μ s	See note 1.
$V_{TX-CM-IDLE-DELTA}$	Transmitter idle common-mode voltage change	+600 (max) -600 (min)	+600 (max) -600 (min)	mV	The maximum allowed instantaneous common-mode voltage at TP2 while the transmitter is in U2 or U3 and not actively transmitting LFPS. Note that this is an absolute voltage spec referenced to the receive-side termination ground but serves the purpose of limiting the magnitude and/or slew rate of Tx common mode changes.

Note 1: Measured over a 0.5 μ s interval using CP10. The measurements shall be low pass filtered using a filter with 3 dB cutoff frequency that is 60 times the modulation rate. The filter stopband rejection shall be greater or equal to a second order low-pass of 20 dB per decade. Evaluation of the maximum df/dt is achieved by inspection of the low-pass filtered waveform.

Figure 59 Table 6-18 of USB 3.2 Specification Version 1.0

Unit Interval (with SSC) Test

Test Conditions

Reference Clock

Clean Clock

Test Overview

The purpose of this test is to verify that the SSC of the transmitter complies with the specification.

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Set horizontal scale to 2ns, position at 0.
- 5 Setup the Acquisition
 - a Select Sampling Mode as "Real Time"
 - b Set interpolation to OFF
 - c Sample rate to 80GSa/s
 - d 16M points
 - e Bandwidth to 25GHz
- 6 Set Sweep as AUTO
- 7 Ping the DUT until CP10 is attained.
- 8 Setup horizontal scale to 20us, position at 0.
- 9 Stop the acquisition and save the waveform.
- 10 Set 'Unit Interval Measurement' to ON.
- 11 Set 'Measurement Trend' to ON.
- 12 Measure Vmax of the measurement trend.
- 13 Measure Vmin of the measurement trend.
- 14 Measure Vaverage of the measurement trend.
- 15 Record the measurement result.

**Expected /
Observable Results**

The measurement results for Unit Interval must be within the conformance limit as specified in the USB 3.2 specification.

SSC Deviation Test, SSC Modulation Rate Test, SSC df/dt Test

Test Conditions#1

Reference Clock	SSC Test Mode
SSC	True

Test Overview The purpose of this test is to verify that the SSC of the transmitter complies with the specification.

- Test Procedure**
- 1 Set up the stimulus for 2-cycle LFPS ping.
 - 2 Default the scope.
 - 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
 - 4 Set horizontal scale to 2ns, position at 0.
 - 5 Setup the Acquisition
 - a Select Sampling Mode as "Real Time"
 - b Set interpolation to OFF
 - c Sample rate to 80GSa/s
 - d 16M points
 - e Bandwidth to 25GHz
 - 6 Set Sweep as AUTO
 - 7 Ping the DUT until CP10 is attained.
 - 8 Setup horizontal scale to 20us, position at 0.
 - 9 Stop the acquisition and save the waveform in binary format.

- 10 Launch SigTest tool.
 - a Load the waveform file.
 - b Ensure that SSC template is selected. See Figure 60.

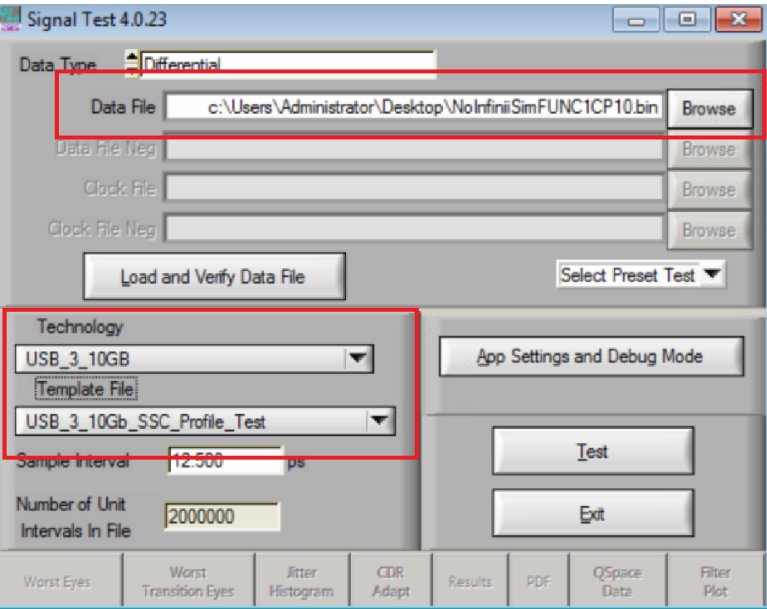


Figure 60 Selecting the SSC Template File on the SigTest tool

- 11 Record the measurement result.

Test Conditions#2

Reference Clock	SSC Test Mode
SSC	False

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Set horizontal scale to 2ns, position at 0.
- 5 Setup the Acquisition
 - a Select Sampling Mode as “Real Time”
 - b Set interpolation to OFF
 - c Sample rate to 80GSa/s
 - d 16M points
 - e Bandwidth to 25GHz
- 6 Set Sweep as AUTO
- 7 Ping the DUT until CP10 is attained.
- 8 Setup horizontal scale to 20us, position at 0.
- 9 Stop the acquisition.
- 10 Set ‘Unit Interval Measurement’ to ON.
- 11 Set ‘Measurement Trend’ to ON for function 1.
- 12 Save the measurement in CSV format.

- 13 The CSV waveform is processed within a MATLAB script.
- Perform a second-order low pass filter. Cut-off frequency is set as 60 times of the modulation rate, 1.98MHz.
 - Measure the V_{top} and V_{base} for every SSC triangle profile, as shown in Figure 61.

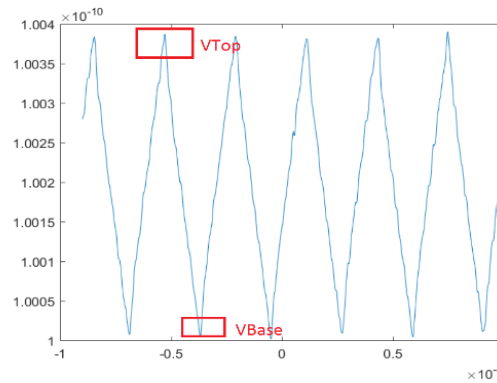


Figure 61 V_{top} and V_{base} measurements on an SSC triangle profile

- Measure the modulation rate, modulation rate is $1/t_{cycle}$. t_{cycle} is defined as shown in Figure 62.

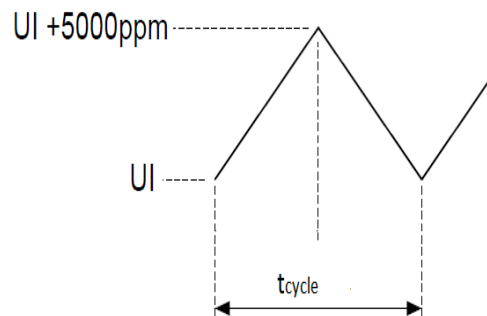


Figure 62 Measuring Modulation Rate

d Measure the rate of change over 0.5us interval. Convert the resulting value's unit to ppm/us.

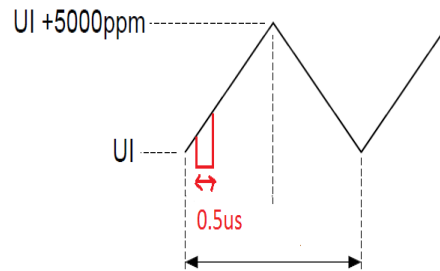


Figure 63 Measuring Rate of change

14 Record the measurement result.

**Expected /
Observable Results**

The measurement results for SSC must be within the conformance limit as specified in the USB 3.2 specification.

10G Eye Measurement Test

The 10G Eye Measurement Test includes:

- CTLE_Adc Selection

This section provides the Methods of Implementation (MOIs) for 10G Eye Measurement test using a Keysight 90000A Series Infiniium oscilloscope, USB 3.0 test fixture, and USB3.2 Test Compliance Application.

Connection Diagram

See [Appendix A](#), “Test Connection”.

Test Reference from the Specification

ECN CTLE of the USB 3.2 Specification, revision 1.0.

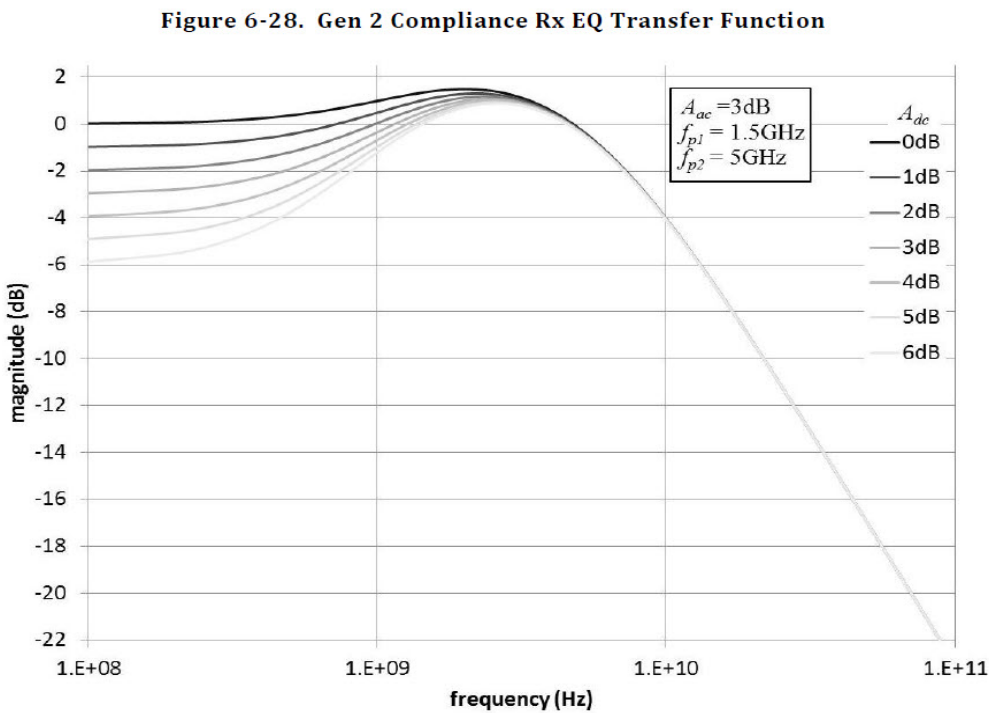


Figure 64 Figure 6-28 of USB 3.2 Specification Version 1.0

Test Condition	Test Method
	SDA
Test Overview	The purpose of this test is to obtain the DC Gain that yields the best Eye opening, which complies with the specification.
Test Procedure	<ol style="list-style-type: none">1 Set up the stimulus for 2-cycle LFPS ping.2 Default the scope.3 Setup Function 1 as subtraction of Channel 1 and Channel 3.4 Set horizontal scale to 2ns, position at 0.5 Ping the DUT until CP10 is attained.

- 6 Setup the Acquisition
 - a Select Sampling Mode as “Real Time”
 - b Set interpolation to OFF
 - c Sample rate to 80GSa/s
 - d 16M points
 - e Bandwidth to 25GHz
- 7 Set Sweep as AUTO.
- 8 Setup horizontal scale to 20us, position at 0.
- 9 Stop the acquisition and save the waveform.
- 10 Setup Clock Recovery:

2nd order PLL, Nominal data rate of 10Gbps, loop bandwidth of 7.5MHz, damping factor of 0.707
- 11 Setup CTLE:
 - a # of Poles: USB3.2
 - b Pole 1 Frequency: 1.5GHz
 - c Pole 2 Frequency: 5.0GHz
 - d AC Gain: 1.413
 - e DC Gain: $10^{(DC/20)}$, where the default value of DC is 0dB
- 12 Enable Mask Test:
 - a Load Mask
 - b Set Source as CTLE
 - c Set Color Grade to ON
 - d Set Infinite Persistent to ON
 - e Set Mask Scaling:
 - Horizontal Scaling: -50ps
 - Delta: 100ps
 - f Set Mask Vertical Scaling:
 - 1 Level: 600mV
 - 0 Level: -600mV
 - g Enable “Bind 1 & 0 Levels”
 - h Enable “Real-Time Eye”
- 13 Repeat steps from **step 11** to **step 12** after changing the value of DC from 0dB to -6dB.
- 14 Record the value of DC that yields the best Eye opening.

**Expected /
Observable Results**

The DC Gain must yield the best Eye opening, which must conform to the USB 3.2 specification.

10G Transmitter Random Jitter Tests

The 10G Transmitter Random Jitter Test includes:

- 10G Random Jitter

This section provides the Methods of Implementation (MOIs) for 10G Transmitter Random Jitter test using a Keysight 90000A Series Infiniium oscilloscope, USB 3.0 test fixture, and USB3.2 Test Compliance Application.

Connection Diagram See [Appendix A](#), “Test Connection”.

Test Reference from the Specification Table 6-16 and Table 6-20 of the USB 3.2 Specification, revision 1.0.

Table 6-16. Informative Jitter Budgeting at the Silicon Pads⁷

Jitter Contribution (ps)	Gen 1 (5 GT/s)			Gen 2 (10 GT/s)		
	Rj ^{1,2}	Dj ³	Tj ⁴ at 10 ⁻¹²	Rj ^{1,2}	Dj ³	Tj ⁴ at 10 ⁻¹²
Tx ⁶	2.42	41	75	1.00	17	31.1
Media ⁵	2.13	45	75	0.00	36	36.0
Rx	2.42	57	91	1.00	27.1	41.2
Total	4.03	143	200	1.41	80.1	100

Notes:

1. Rj is the sigma value assuming a Gaussian distribution.
2. Rj Total is computed as the Root Sum Square of the individual Rj components.
3. Dj budget is using the Dual Dirac method.
4. Tj at a 10⁻¹² BER is calculated as $14.068 * Rj + Dj$.
5. The media budget includes the cancellation of ISI from the appropriate Rx equalization function.
6. Tx is measured after application of the JTF.
7. In this table, Tx jitter is defined at TP1, Rx jitter is defined at TP4, and media jitter is defined from TP1 to TP4.

Figure 65 Table 6-16 of USB 3.2 Specification Version 1.0

10G Random Jitter Test

Test Condition#1

Test Method
USB-IF SigTest

Test Overview

The purpose of this test is to verify that the Short Channel Random Jitter of the transmitter complies with the specification.

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Set horizontal scale to 2ns, position at 0.
- 5 Ping the DUT until CP10 is attained.
- 6 Setup the Acquisition
 - a Select Sampling Mode as “Real Time”
 - b Set interpolation to OFF
 - c Sample rate to 80GSa/s
 - d 16M points
 - e Bandwidth to 25GHz
- 7 Set Sweep as AUTO.
- 8 Setup horizontal scale to 20us, position at 0.
- 9 Stop the acquisition and save the waveform in binary format.
- 10 Launch SigTest tool.
- 11 Load the waveform file. Select the options for Technology and Template File as shown in Figure 66.
 - a Technology set to ‘USB_3_10GB’
 - b Template File set to ‘USB_3_10Gb_CP10_Tx_Rj_Test’

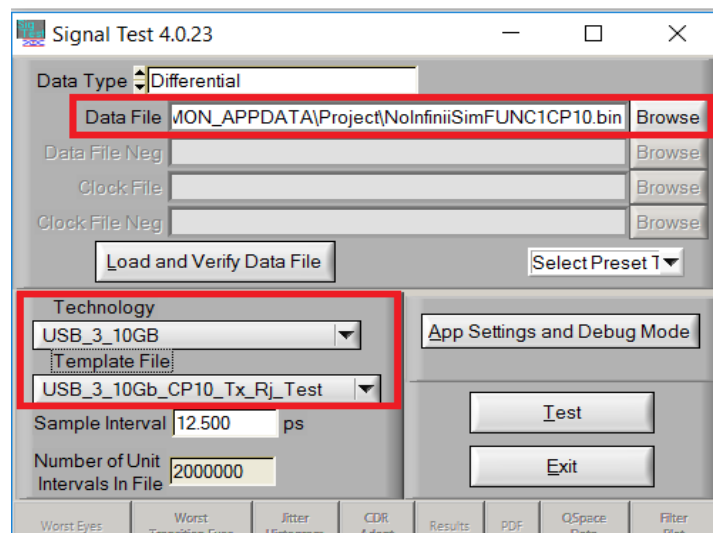


Figure 66 SigTest tool settings for measuring 10G RJ

- 12 Record the measurement result for the 10G RJ.

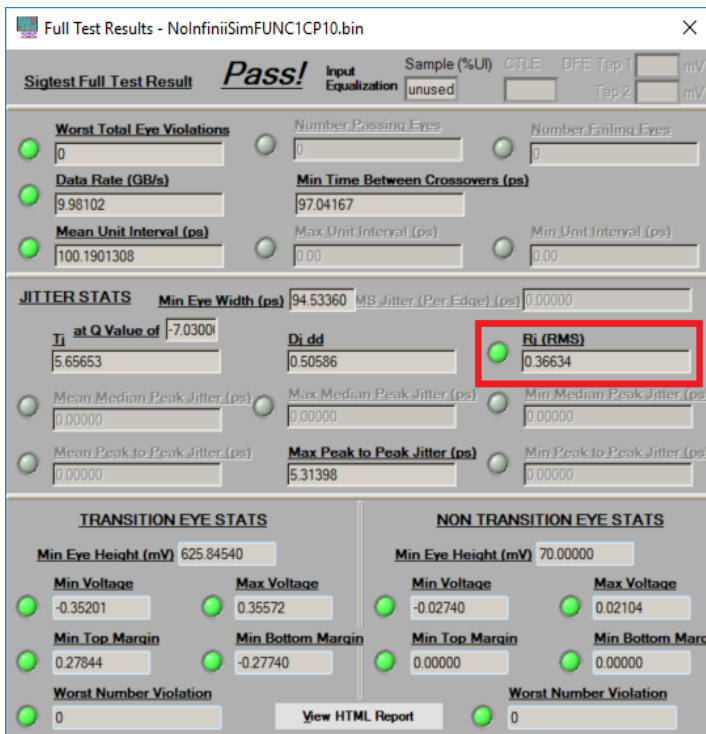


Figure 67 SigTest tool report for 10G RJ measurement

**Expected /
Observable Results**

Test Condition#2

The measurement results for 10G Random Jitter must be within the conformance limit as specified in the USB 3.2 specification.

Test Procedure

Test Method	
SDA	
Test Procedure	1 Set up the stimulus for 2-cycle LFPS ping.
	2 Default the scope.
	3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
	4 Set horizontal scale to 2ns, position at 0.
	5 Ping the DUT until CP10 is attained.
	6 Setup the Acquisition
	a Select Sampling Mode as “Real Time”
	b Set interpolation to OFF
	c Sample rate to 80GSa/s
	d 16M points
	e Bandwidth to 25GHz
	7 Set Sweep as AUTO.
	8 Setup horizontal scale to 20us, position at 0.
	9 Stop the acquisition and save the waveform.

- 10 Setup CTLE:
 - a # of Poles: USB3.2
 - b Pole 1 Frequency: 1.5GHz
 - c Pole 2 Frequency: 5.0GHz
 - d AC Gain: 1.413
 - e DC Gain: $10^{(DC/20)}$ (See "10G Eye Measurement Test" on page 95 for the optimum value of DC)
- 11 Setup Clock Recovery:
 - 2nd order PLL, data rate of 10Gbps, loop bandwidth of 7.5MHz, damping factor of 0.707
- 12 Setup EZJIT Complete:
 - a Set CTLE as source
 - b Enable Jitter Mode on EZJIT+
 - c BER Level: 1E-6
 - d Measurement: TIE (Phase)
 - e Edges: Both
 - f RJ Bandwidth: Narrow
 - g RJ Method: Spectral Only
 - h Pattern Length: Periodic, Auto
- 13 Obtain RJ reading.

**Expected /
Observable Results**

The measurement results for 10G Random Jitter must be within the conformance limit as specified in the USB 3.2 specification.

10G Transmitter Eye Far End (TP4) Tests

The 10G Transmitter Eye Far End (TP4) Tests include:

- 10G Far End Maximum Deterministic Jitter Test
- 10G Far End Total Jitter at BER- 6 Test
- 10G Far End Template Test
- 10G Far End Differential Output Voltage
- Extrapolated Eye Height
- Minimum Eye Width

This section provides the Methods of Implementation (MOIs) for 10G Transmitter Eye Far End (TP4) tests using a Keysight 90000A Series Infiniium oscilloscope, USB 3.0 test fixture, and USB3.2 Test Compliance Application.

Connection Diagram See [Appendix A](#), “Test Connection”.

Test Reference from the Specification Table 6-16 and Table 6-20 (ECN for SSP System Jitter Budget) of the USB 3.2 Specification, revision 1.0.

Table 6-20. Normative Transmitter Eye Mask at Test Point TP4

Signal Characteristic	5GT/s		10GT/s		Units	Note
	Minimum	Maximum	Minimum	Maximum		
Eye Height	100	1200	70	1200	mV	2, 3, 4
Dj		0.43		0.530	UI	1, 2, 3
Rj		0.23		0.141	UI	1, 5, 6
Tj		0.66		0.671	UI	1, 2, 3

Notes:

1. Measured over 10^6 consecutive UI and extrapolated to 10^{-12} BER.
2. Measured after receiver equalization function.
3. Measured at end of reference channel and cables at TP4 in [Figure 6-20](#).
4. The eye height is to be measured at the minimum opening over the range from the center of the eye ± 0.05 UI.
5. The Rj specification is calculated as 14.069 times the RMS random jitter for 10^{-12} BER.
6. Measured at the output of the compliance breakout board without embedding the compliance cable and load board.

Figure 68 Table 6-20 of USB 3.2 Specification Version 1.0

NOTE

According to the USB 3.2 Specification, Version 1.0 CTS, the Eye Width and the Extrapolated Eye Height measurement requires computing the Data Eye using CP9 using Rj as input from the CP10 waveform and compare it against requirements for a 70mV Eye Height and a 48.0ps Eye Width both at 10^{-6} BER.

6.8.2.2.2 Reference DFE

In addition to the 1st order CTLE, a one-tap reference DFE is used in transmitter compliance testing. The DFE behavior is described by equation (15) and Figure 6-29. The limits on d_1 are 0 to 50mV.

$$(15) \quad y_k = x_k - d_1 \operatorname{sgn}(y_{k-1})$$

where y_k is the DFE differential output voltage

y_k^* is the decision function output voltage, $|y_k^*| = 1$

x_k is the DFE differential input voltage

d_1 is the DFE feedback coefficient

k is the sample index in UI

Figure 69 Equation for Reference DFE

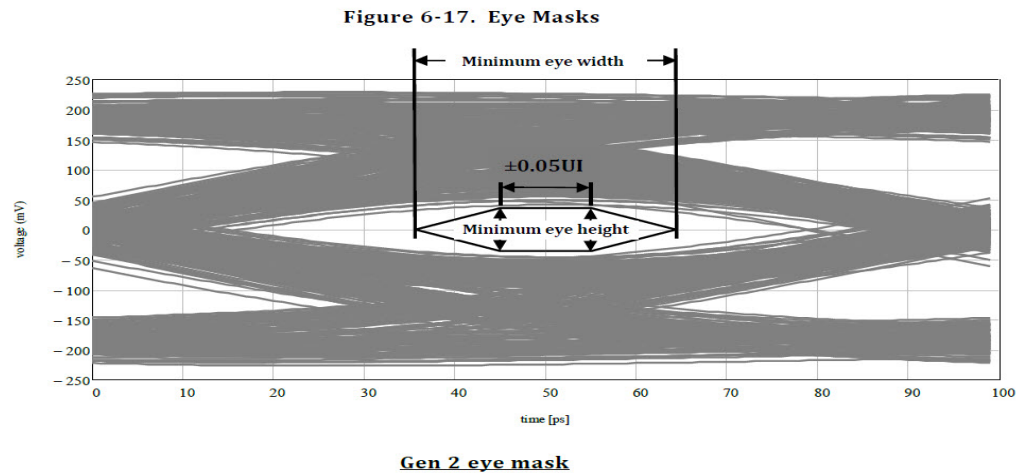


Figure 70 Gen 2 Eye Mask for 10G Transmitter Eye Far End (TP1) tests

10G Far End Maximum Deterministic Jitter, 10G Far End Total Jitter At BER-6, 10G Far End Template Test, Extrapolated Eye Height, Minimum Eye Width

Test Overview The purpose of this test is to verify that the measured Deterministic Jitter and Total Jitter comply with the specification.

Test Condition

Test Method

USB-IF SigTest

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Set horizontal scale to 2ns, position at 0.
- 5 Ping the DUT until CP9 is attained.
- 6 Setup the Acquisition
 - a Select Sampling Mode as “Real Time”
 - b Set interpolation to OFF
 - c Sample rate to 80GSa/s
 - d 16M points
 - e Bandwidth to 25GHz
- 7 Setup InfiniiSim. See [Appendix A](#), “InfiniiSim Setup for 10G” for settings.
- 8 Set Sweep as AUTO.
- 9 Setup horizontal scale to 20us, position at 0.
- 10 Stop the acquisition and save the waveform in binary format.
- 11 Launch SigTest tool.
- 12 Load the waveform file. Select the options for Technology and Template File as shown in [Figure 71](#).
 - a Technology set to ‘USB_3_10GB’
 - b Template File set to ‘USB_3_10Gb_CP9_Tx’
 - c Set Random Jitter

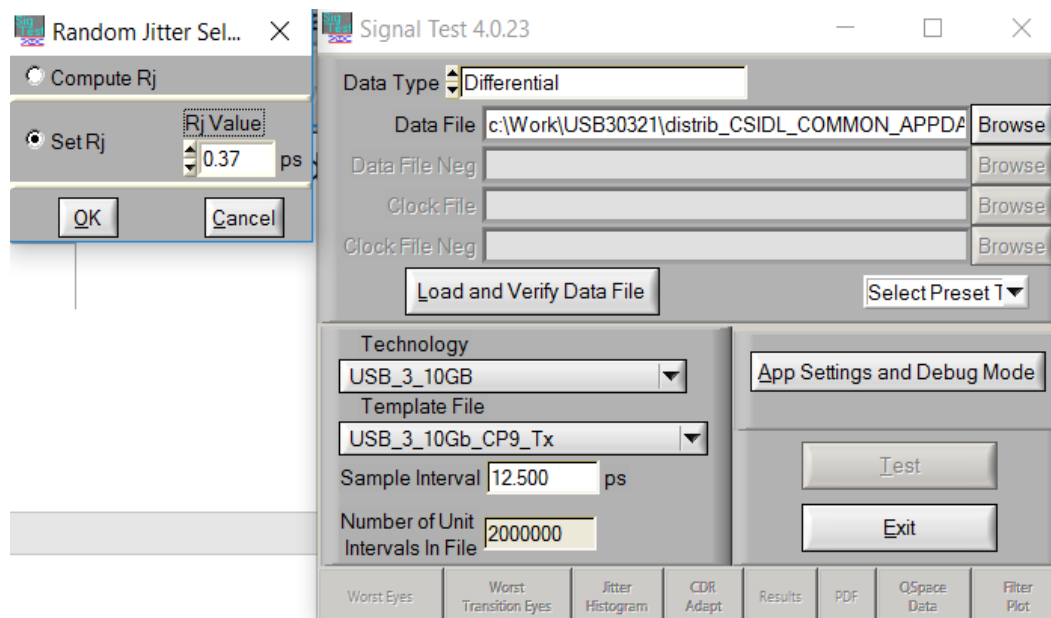


Figure 71 SigTest tool settings for measuring DJ, TJ, Eye Width and Extrapolated Eye Height

13 Record the measurement result for DJ, TJ, Eye Width and Extrapolated Eye Height.

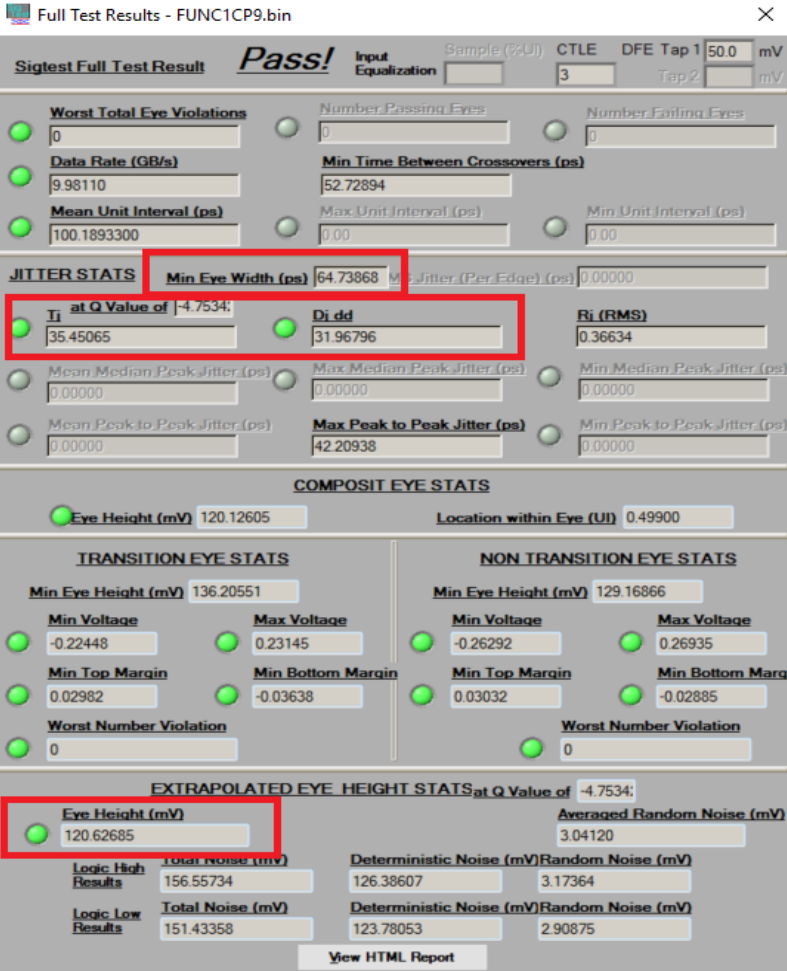


Figure 72 SigTest tool report for DJ, TJ, Eye Width and Eye Height measurement

Expected / Observable Results The measurement results for Deterministic Jitter, Total Jitter, Eye Width and Extrapolated Eye Height must be within the conformance limit as specified in the USB 3.2 specification.

10G Far End Maximum Deterministic Jitter and 10G Far End Total Jitter At BER-6 Test

Test Condition**Test Method**

SDA

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Set horizontal scale to 2ns, position at 0.
- 5 Ping the DUT until CP9 is attained.
- 6 Setup the Acquisition
 - a Select Sampling Mode as “Real Time”
 - b Set interpolation to OFF
 - c Sample rate to 80GSa/s
 - d 16M points
- 7 Setup InfiniiSim. See [Appendix A](#), “InfiniiSim Setup for 10G” for settings.
- 8 Set Sweep as AUTO.
- 9 Setup horizontal scale to 20us, position at 0.
- 10 Stop the acquisition and save the waveform.
- 11 Setup CTLE:
 - a # of Poles: USB3.2
 - b Pole 1 Frequency: 1.55GHz
 - c Pole 2 Frequency: 5.0GHz
 - d AC Gain: 1.413
 - e DC Gain: $10^{(DC/20)}$ (See [“10G Eye Measurement Test”](#) on page 95 for the optimum value of DC)
- 12 Setup Clock Recovery:

2nd order PLL, data rate of 10Gbps, loop bandwidth of 7.5MHz, damping factor of 0.707
- 13 Setup EZJIT Complete:
 - a Set CTLE as source
 - b Enable Jitter Mode on EZJIT+
 - c BER Level: 1E-6
 - d Measurement: TIE (Phase)
 - e Edges: Both
 - f RJ Bandwidth: Narrow
 - g RJ Method: Spectral Only
 - h Pattern Length: Arbitrary
 - i ISI Filter Lead: -2
 - j ISI Filter Lag: 18

**Expected /
Observable Results**

The measurement results for Total Jitter, Deterministic Jitter, Eye Width and Extrapolated Eye Height must be within the conformance limit as specified in the USB 3.2 specification.

10G Far End Template Test and 10G Far End Differential Output Voltage Test

Test Condition**Test Method**

SDA

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Set horizontal scale to 2ns, position at 0.
- 5 Ping the DUT until CP9 is attained.
- 6 Setup the Acquisition
 - a Select Sampling Mode as “Real Time”
 - b Set interpolation to OFF
 - c Sample rate to 80GSa/s
 - d 16M points
- 7 Setup InfiniiSim. See [Appendix A](#), “InfiniiSim Setup for 10G” for settings.
- 8 Set Sweep as AUTO.
- 9 Setup horizontal scale to 20us, position at 0.
- 10 Stop the acquisition and save the waveform.
- 11 Setup CTLE:
 - a # of Poles: USB3.2
 - b Pole 1 Frequency: 1.5GHz
 - c Pole 2 Frequency: 5.0GHz
 - d AC Gain: 1.413
 - e DC Gain: $10^{(DC/20)}$ (See [“10G Eye Measurement Test”](#) on page 95 for the optimum value of DC)
- 12 Setup Clock Recovery:

2nd order PLL, data rate of 10Gbps, loop bandwidth of 7.5MHz, damping factor of 0.707
- 13 Enable Mask Test:
 - a Load Mask
 - b Set Source as CTLE
 - c Set Color Grade to ON
 - d Set Infinite Persistent to ON
 - e Set Mask Scaling:
 - Horizontal Scaling: -50ps
 - Delta: 100ps
 - f Set Mask Vertical Scaling:
 - 1 Level: 600mV
 - 0 Level: -600mV
 - g Enable “Bind 1 & 0 Levels”
 - h Enable “Real-Time Eye”

- 14 For DFE setup, click the DFE tab:
- a Set CTLE as the source
 - b # of DFE taps: 1
 - c Gain: 1
 - d Upper Target & Lower Target = $\pm 25\text{mV}$
 - e In the Auto Set section, set Max Tap Value = 1.0
 - f Set Min Tap value = 0.0
 - g Set Tap 1 value = 1
 - h Select to check Enable DFE
 - i Fill in the Delay to adjust the position of the waveform
 - j Note the following acronyms:
 - i T = Unit-less Tap value
 - ii U = Upper target
 - iii L = Lower target
 - iv A = Amplitude
 - v O = Offset
 - vi $A = (U-L)/2$
 - vii $O = (U+L)/2$
 - viii U & L = $\pm 50\text{mV}$; Tap = 1 is equal to U & L = ± 1 ; Tap = 0.5

Bit (0-1)	V
1	$V = O + A * (T1 * 1)$
0	$V = O + A * (T1 * -1)$

- 15 Run Mask Test.
- 16 Measure Eye Height and Eye Width.

**Expected /
Observable Results**

The signal must pass the Mask Test and the Differential Output Voltage must be within the conformance limits as specified in the USB 3.2 specification.

10G Transmitter Eye Short Channel (TP2) Tests

The 10G Transmitter Eye Short Channel (TP2) Tests include:

- 10G Short Channel Template Test
- 10G Short Channel Differential Output Voltage
- 10G Short Channel Extrapolated Eye Height Test
- 10G Short Channel Minimum Eye Width Test

This section provides the Methods of Implementation (MOIs) for 10G Transmitter Eye Short Channel tests using a Keysight 90000A Series Infiniium oscilloscope, USB 3.0 test fixture, and USB3.2 Test Compliance Application.

NOTE

10G Transmitter Eye Short Channel (TP2) Tests will not be available if **10G Transfer Function > Channel Setting 10G** is selected as **Captive Device**.

Set Up tab > Transfer Function Setup button > Configure Transfer Function dialog box > 10G Transfer Function tab > Channel Settings 10G

Connection Diagram See [Appendix A](#), “Test Connection”.

Test Reference from the Specification Table 6-16 and Table 6-20 of the USB 3.2 Specification, revision 1.0.

Table 6-20. Normative Transmitter Eye Mask at Test Point TP4

Signal Characteristic	5GT/s		10GT/s		Units	Note
	Minimum	Maximum	Minimum	Maximum		
Eye Height	100	1200	70	1200	mV	2, 3, 4
Dj		0.43		0.530	UI	1, 2, 3
Rj		0.23		0.141	UI	1, 5, 6
Tj		0.66		0.671	UI	1, 2, 3

Notes:

1. Measured over 10^6 consecutive UI and extrapolated to 10^{-12} BER.
2. Measured after receiver equalization function.
3. Measured at end of reference channel and cables at TP4 in [Figure 6-20](#).
4. The eye height is to be measured at the minimum opening over the range from the center of the eye ± 0.05 UI.
5. The Rj specification is calculated as 14.069 times the RMS random jitter for 10^{-12} BER.
6. Measured at the output of the compliance breakout board without embedding the compliance cable and load board.

Figure 73 Table 6-20 of USB 3.2 Specification Version 1.0

NOTE

According to the USB 3.2 Specification, Version 1.0 CTS, the Eye Width and the Extrapolated Eye Height measurement requires computing the Data Eye using CP9 using Rj as input from the CP10 waveform and compare it against requirements for a 70mV Eye Height and a 48.Ops Eye Width both at $10E-6$ BER.

6.8.2.2.2 Reference DFE


In addition to the 1st order CTLE, a one-tap reference DFE is used in transmitter compliance testing. The DFE behavior is described by equation (15) and Figure 6-29. The limits on d_1 are 0 to 50mV.

$$(15) \quad y_k = x_k - d_1 \operatorname{sgn}(y_{k-1}^*)$$

where y_k is the DFE differential output voltage
 y_k^* is the decision function output voltage, $|y_k^*| = 1$
 x_k is the DFE differential input voltage
 d_1 is the DFE feedback coefficient
 k is the sample index in UI

Figure 74 Equation for Reference DFE

Figure 6-17. Eye Masks

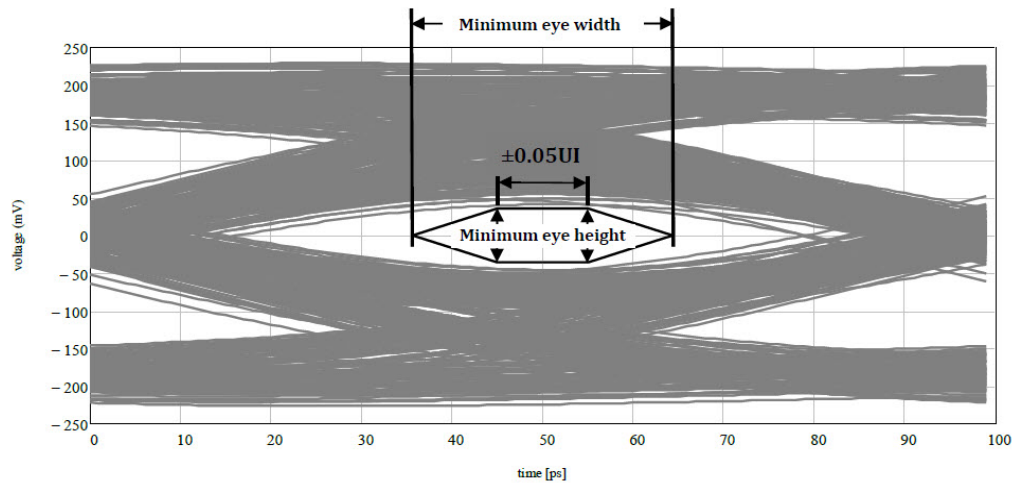

Gen 2 eye mask

Figure 75 Gen 2 Eye Mask for 10G Transmitter Short Channel tests

10G Short Channel Template Test, 10G Short Channel Differential Output Voltage, 10G Short Channel Extrapolated Eye Height and 10G Short Channel Minimum Eye Width

Test Conditions

Test Method

USB-IF SigTest

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Set horizontal scale to 2ns, position at 0.
- 5 Ping the DUT until CP9 is attained.
- 6 Setup the Acquisition
 - a Select Sampling Mode as “Real Time”
 - b Set interpolation to OFF
 - c Sample rate to 80GSa/s
 - d 16M points
 - e Bandwidth to 25GHz
- 7 Set Sweep as AUTO
- 8 Setup horizontal scale to 20us, position at 0.
- 9 Stop the acquisition and save the waveform.
- 10 Launch SigTest tool.
- 11 Load the waveform file. Select the options for Technology and Template File as shown in Figure 76.
 - a Technology set to ‘USB_3_10GB’
 - b Template File set to ‘USB_3_10Gb_CP9_Tx_Short’
 - c Set Random Jitter

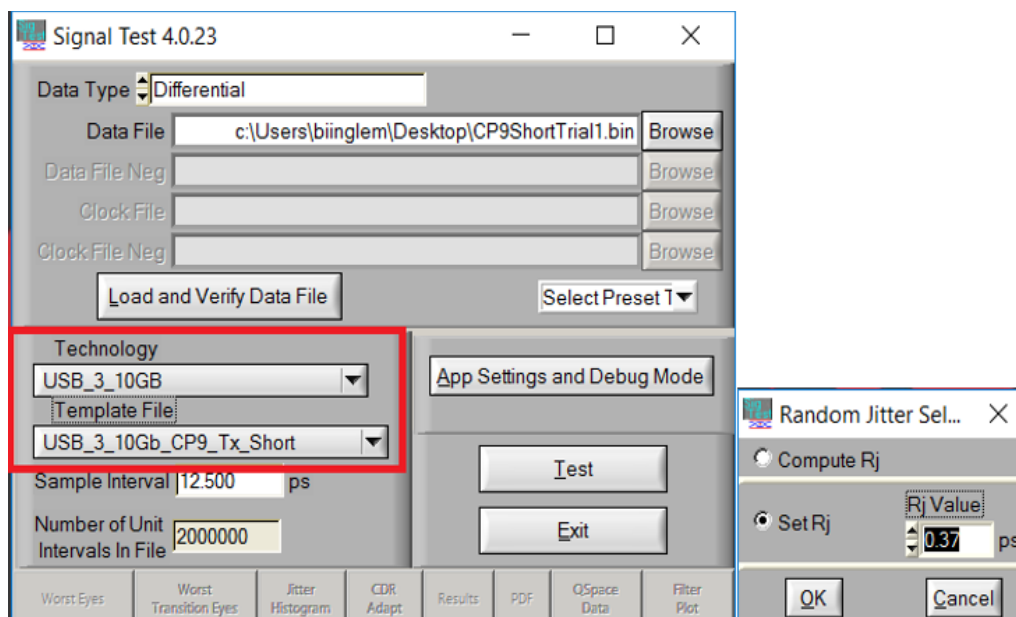


Figure 76 SigTest tool settings for measuring Eye Width and Extrapolated Eye Height

12 Record the measurement result for Eye Width and Extrapolated Eye Height.

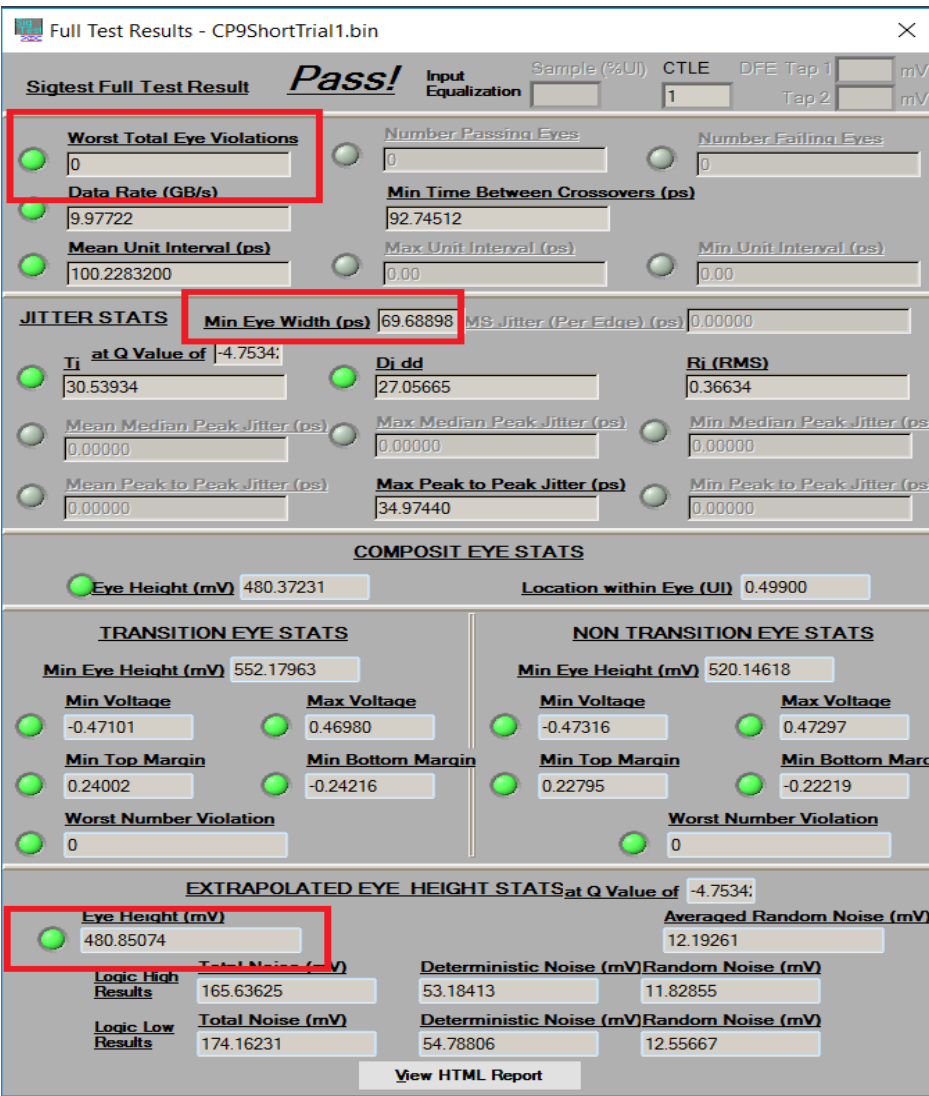


Figure 77 SigTest tool report for Short Channel Eye Width and Extrapolated Eye Height measurement

**Expected /
Observable Results**

The measurement results for Short Channel Eye Width and Extrapolated Eye Height must be within the conformance limit as specified in the USB 3.2 specification.

10G Transmitter Eye Near End (TP1) Tests

The 10G Transmitter Eye Near End (TP1) Tests include:

- 10G Near End Random Jitter
- 10G Near End Maximum Deterministic Jitter Test
- 10G Near End Total Jitter at BER- 6 Test
- 10G Near End Template Test
- 10G Near End Differential Output Voltage

This section provides the Methods of Implementation (MOIs) for 10G Transmitter Eye Near End (TP1) tests using a Keysight 90000A Series Infiniium oscilloscope, USB 3.0 test fixture, and USB3.2 Test Compliance Application.

Connection Diagram

See [Appendix A](#), “Test Connection”.

Test Reference from the Specification

Table 6-16 of the USB 3.2 Specification, revision 1.0.

Table 6-16. Informative Jitter Budgeting at the Silicon Pads⁷

Jitter Contribution (ps)	Gen 1 (5 GT/s)			Gen 2 (10 GT/s)		
	Rj ^{1,2}	Dj ³	Tj ⁴ at 10 ⁻¹²	Rj ^{1,2}	Dj ³	Tj ⁴ at 10 ⁻¹²
Tx ⁶	2.42	41	75	1.00	17	31.1
Media ⁵	2.13	45	75	0.00	36	36.0
Rx	2.42	57	91	1.00	27.1	41.2
Total	4.03	143	200	1.41	80.1	100

Notes:

1. Rj is the sigma value assuming a Gaussian distribution.
2. Rj Total is computed as the Root Sum Square of the individual Rj components.
3. Dj budget is using the Dual Dirac method.
4. Tj at a 10⁻¹² BER is calculated as 14.068 * Rj + Dj.
5. The media budget includes the cancellation of ISI from the appropriate Rx equalization function.
6. Tx is measured after application of the JTF.
7. In this table, Tx jitter is defined at TP1, Rx jitter is defined at TP4, and media jitter is defined from TP1 to TP4.

Figure 78 Table 6-16 of USB 3.2 Specification Version 1.0

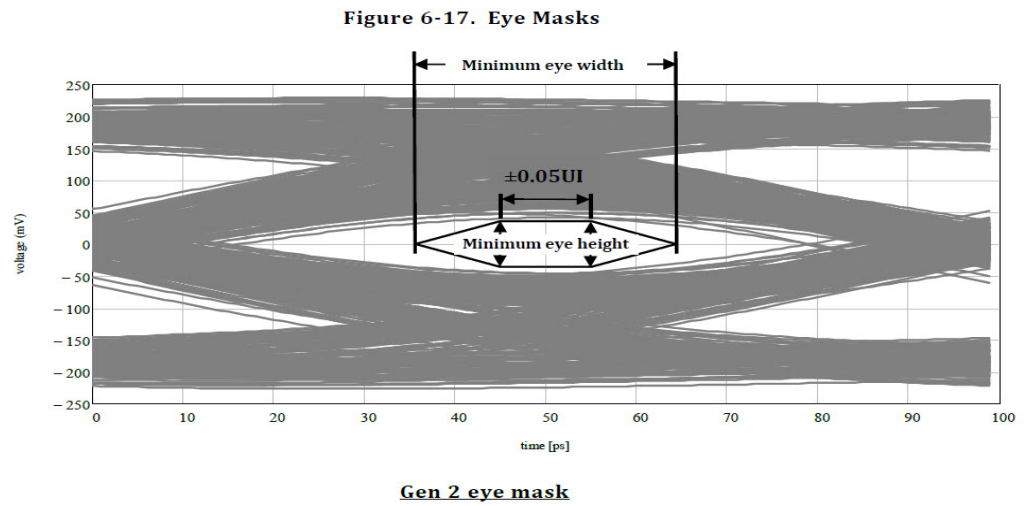


Figure 79 Gen 2 Eye Mask for 10G Transmitter Eye Near End (TP0) tests

10G Near End Random Jitter Test

Test Overview The purpose of this test is to verify that the Near End Random Jitter of the transmitter complies with the specification.

Test Condition

Test Method

SDA

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Set horizontal scale to 2ns, position at 0.
- 5 Ping the DUT until CP10 is attained.
- 6 Setup the Acquisition
 - a Select Sampling Mode as "Real Time"
 - b Set interpolation to OFF
 - c Sample rate to 80GSa/s
 - d 16M points
 - e Bandwidth to 25GHz
- 7 Set Sweep as AUTO
- 8 Setup horizontal scale to 20us, position at 0.
- 9 Stop the acquisition and save the waveform.
- 10 Setup Clock Recovery:

2nd order PLL, data rate of 10Gbps, loop bandwidth of 7.5MHz, damping factor of 0.707
- 11 Setup EZJIT Complete:
 - a Set FUNC1 as source
 - b Enable Jitter Mode on EZJIT+
 - c BER Level: 1E-6
 - d Measurement: TIE (Phase)
 - e Edges: Both
 - f RJ Bandwidth: Narrow
 - g RJ Method: Spectral Only
 - h Pattern Length: Periodic, Auto
- 12 Obtain Near End RJ reading.

Expected / Observable Results The measurement results for Near End Random Jitter must be within the conformance limit as specified in the USB 3.2 specification.

10G Near End Maximum Deterministic Jitter and 10G Near End Total Jitter At BER-6 Test

Test Condition

Test Method

SDA

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.

- 4 Set horizontal scale to 2ns, position at 0.
- 5 Ping the DUT until CP9 is attained.
- 6 Setup the Acquisition
 - a Select Sampling Mode as "Real Time"
 - b Set interpolation to OFF
 - c Sample rate to 80GSa/s
 - d 16M points
- 7 Set Sweep as AUTO.
- 8 Setup horizontal scale to 20us, position at 0.
- 9 Stop the acquisition and save the waveform.
- 10 Setup Clock Recovery:

2nd order PLL, data rate of 10Gbps, loop bandwidth of 7.5MHz, damping factor of 0.707
- 11 Setup EZJIT Complete:
 - a Set FUNC1 as source
 - b Enable Jitter Mode on EZJIT+
 - c BER Level: 1E-6
 - d Measurement: TIE (Phase)
 - e Edges: Both
 - f RJ Bandwidth: Narrow
 - g RJ Method: Spectral Only
 - h Pattern Length: Arbitrary
 - i ISI Filter Lead: -2
 - j ISI Filter Lag: 18

**Expected /
Observable Results**

The measurement results for Total Jitter and Deterministic Jitter must be within the conformance limit as specified in the USB 3.2 specification.

10G Near End Template Test and 10G Near End Differential Output Voltage Test

Test Condition**Test Method**

SDA

Test Procedure

- 1 Set up the stimulus for 2-cycle LFPS ping.
- 2 Default the scope.
- 3 Setup Function 1 as subtraction of Channel 1 and Channel 3.
- 4 Set horizontal scale to 2ns, position at 0.
- 5 Ping the DUT until CP9 is attained.
- 6 Setup the Acquisition
 - a Select Sampling Mode as "Real Time"
 - b Set interpolation to OFF
 - c Sample rate to 80GSa/s
 - d 16M points
- 7 Set Sweep as AUTO.
- 8 Setup horizontal scale to 20us, position at 0.
- 9 Stop the acquisition and save the waveform.
- 10 Setup Clock Recovery:
 - 2nd order PLL, data rate of 10Gbps, loop bandwidth of 7.5MHz, damping factor of 0.707
- 11 Enable Mask Test:
 - a Load Mask
 - b Set Source as FUNC1
 - c Set Color Grade to ON
 - d Set Infinite Persistent to ON
 - e Set Mask Scaling:
 - Horizontal Scaling: -50ps
 - Delta: 100ps
 - f Set Mask Vertical Scaling:
 - 1 Level: 600mV
 - 0 Level: -600mV
 - g Enable "Bind 1 & 0 Levels"
 - h Enable "Real-Time Eye"
- 12 Run Mask Test.
- 13 Measure Eye Height and Eye Width.

**Expected /
Observable Results**

The signal must pass the Mask Test and the Differential Output Voltage must be within the conformance limits as specified in the USB 3.2 specification.

A Appendix

Test Connection /	120
Compliance Pattern used in USB3 Tx Tests /	121
Mask Template /	128
InfiniiSim Setup for 5G /	129
InfiniiSim Setup for 10G /	130

Test Connection

When performing compliance tests, the USB3.2 Test Compliance Application prompts you for proper connections. The connections may appear similar to the diagram showed in [Figure 80](#). Refer to the Connect tab in USB3.2 Test Compliance Application for more details.

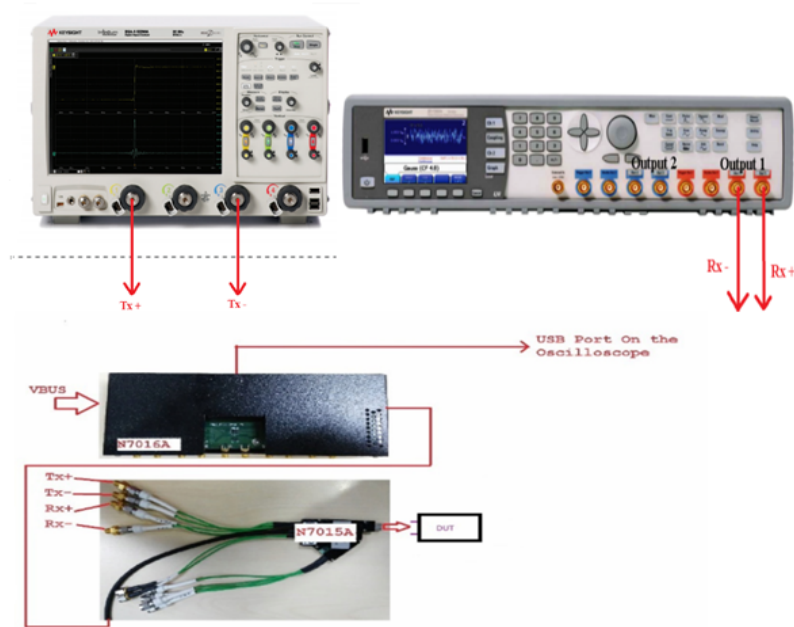


Figure 80 Connection Diagram for various USB 3.2 Compliance Tests


Required fixture for connections

Keysight recommends using the N7015A/N7016A Type-C Test Kit for connections. For more information about this fixture kit, refer to the [Keysight N7015A/16A Type-C Test Kit User Guide](#).


Compliance Pattern used in USB3 Tx Tests

Following images display the compliance patterns acquired or attained during USB3 Tx Tests:


LFPS Pattern in 5G Tests

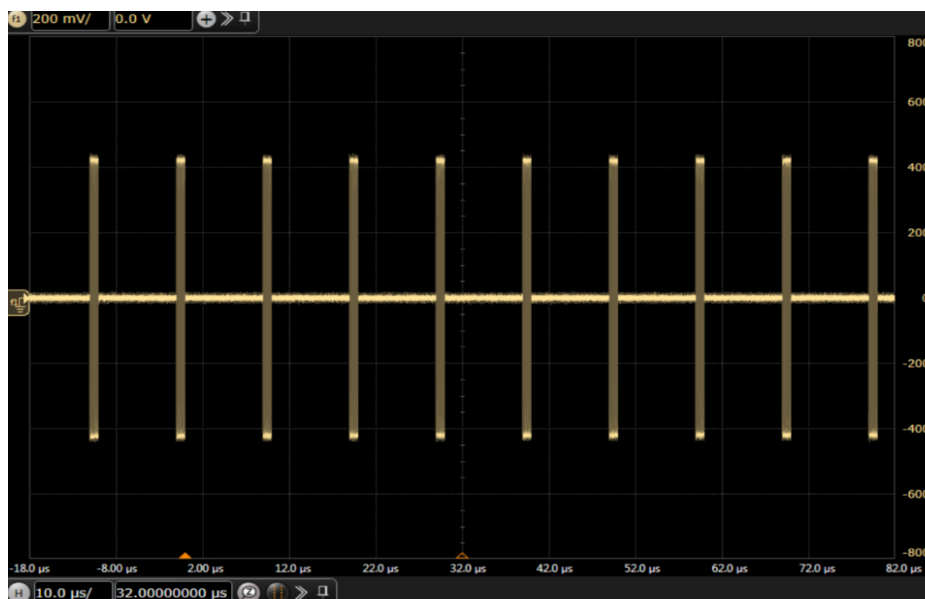


LFPS Pattern in 10G Tests

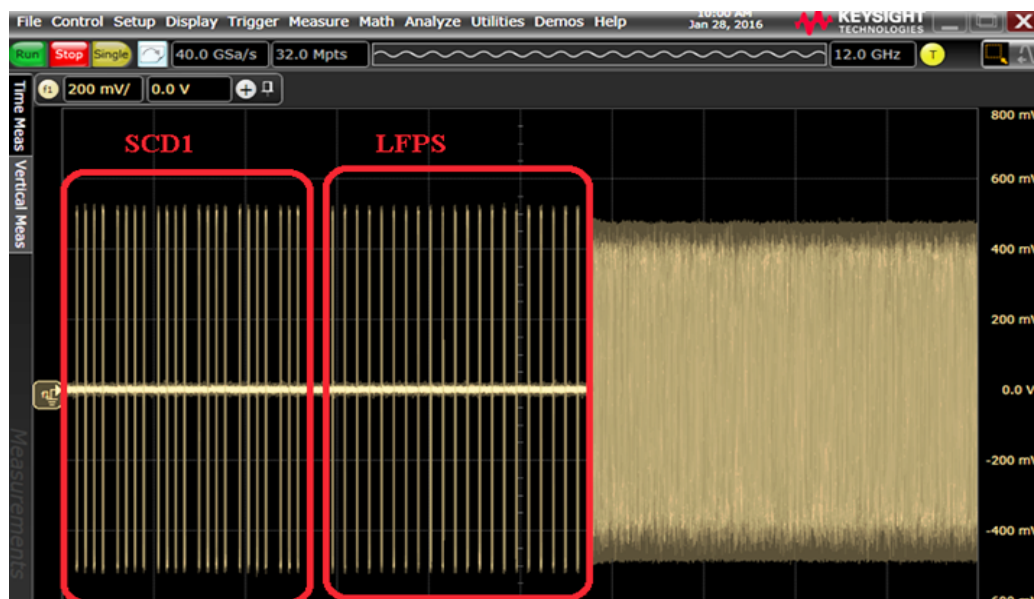

CP0 Pattern

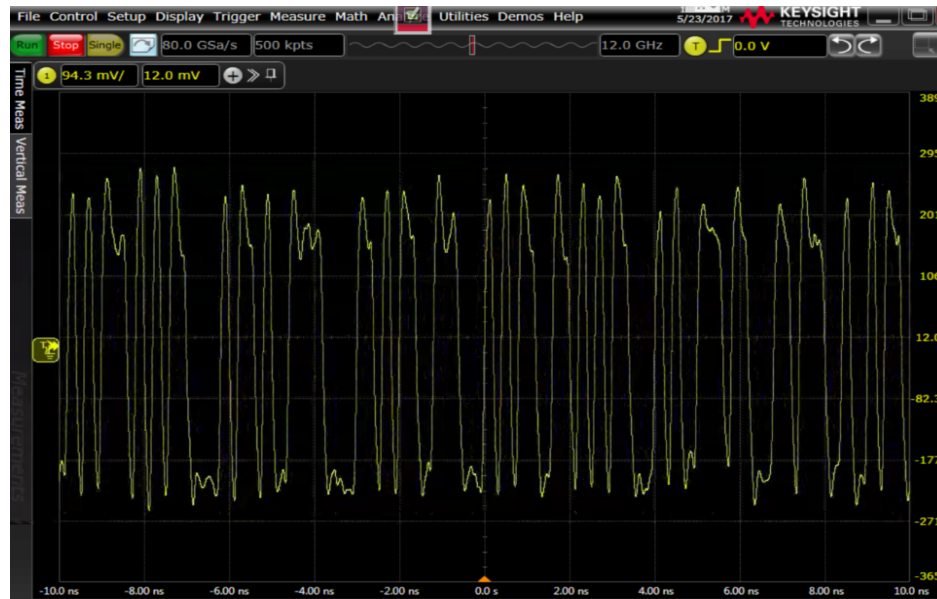


CP1 Pattern

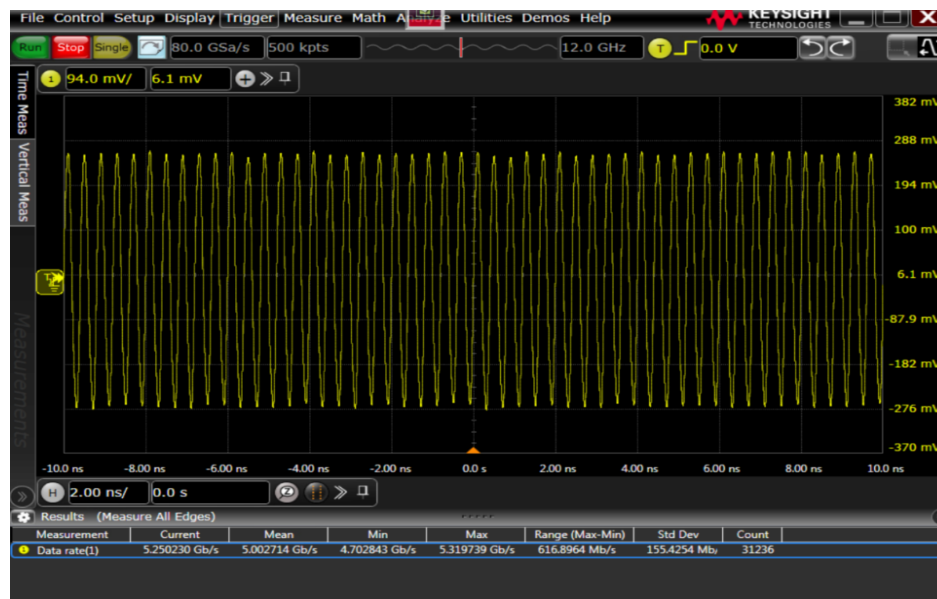

CP7 Pattern



CP8 Pattern

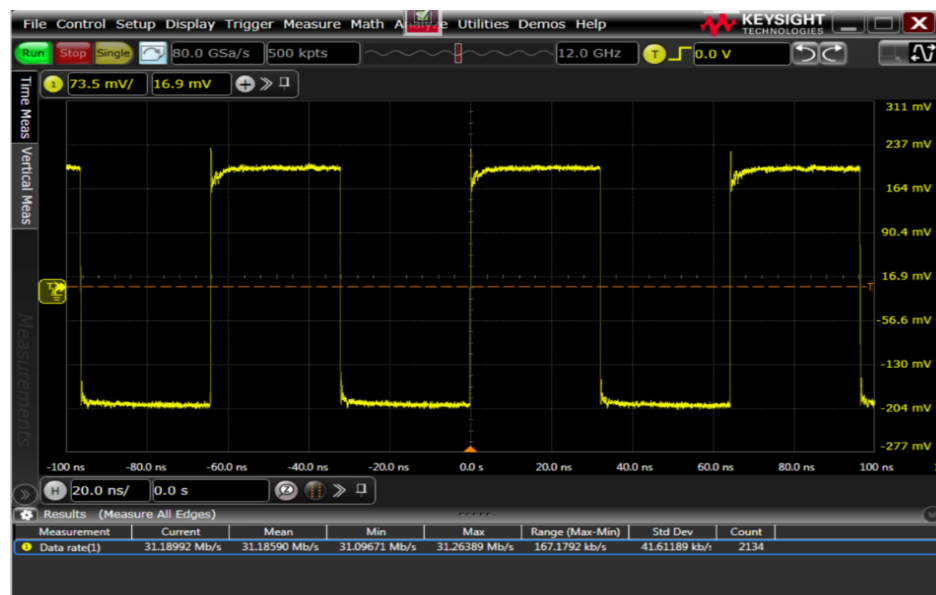

CP9 Pattern



CP10 Pattern



CP13 Pattern




CP14 Pattern



CP15 Pattern



SCD and LBPM Pattern

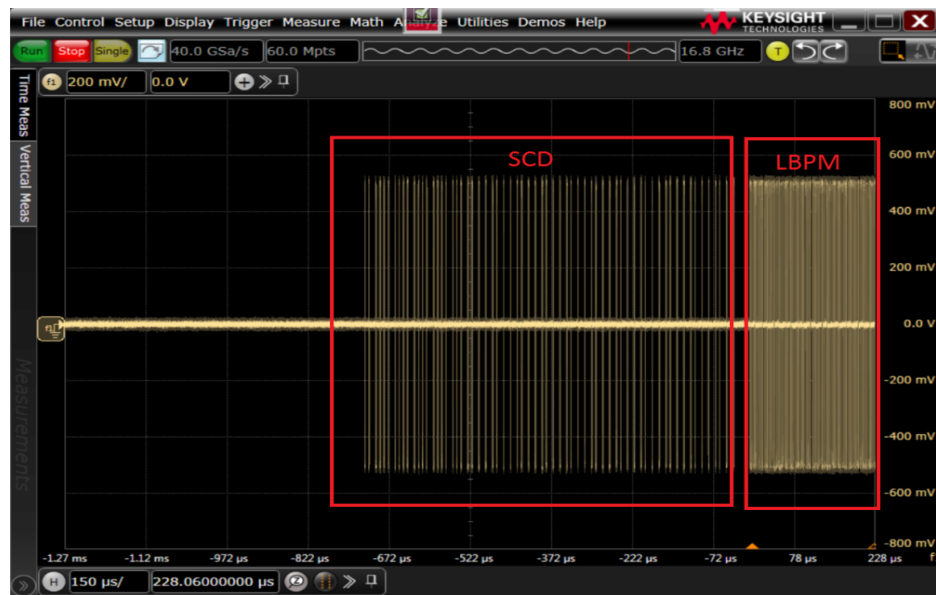

Compliance Pattern Sequence

Refer to the Table 6-13 of the USB 3.2 Specification, Revision 1.0.

Table 6-13. Compliance Pattern Sequences

Compliance Pattern	Value	Description
CP0	D0.0 scrambled	A pseudo-random data pattern that is exactly the same as logical idle (refer to Chapter 7) but does not include SKP sequences.
CP1	D10.2	Nyquist frequency
CP2	D24.3	Nyquist/2
CP3	K28.5	COM pattern
CP4	LFPS	The low frequency periodic signaling pattern
CP5	K28.7	With de-emphasis
CP6	K28.7	Without de-emphasis
CP7	50-250 1's and 0's	With de-emphasis. Repeating 50-250 1's and then 50-250 0's.
CP8	50-250 1's and 0's	Without de-emphasis. Repeating 50-250 1's and then 50-250 0's.
CP9		Pseudo-random data pattern (see section 6.4.4.1)
CP10	AAh	Nyquist pattern at 10Gb/s. This is not 128b132b encoded.
CP11	CCh	Nyquist/2 at 10Gb/s. This is not 128b132b encoded.
CP12	LFSR15	Uncoded LFSR15 for PHY level testing and fault isolation. This is not 128b132b encoded. The polynomial is $x^{15}+x^{14}+1$.
CP13	64 1's and 0's	With pre-shoot defined in section 6.7.5.2 (no de-emphasis). Repeating 64 1's and then 64 0's at 10Gb/s. This is not 128b132b encoded.
CP14	64 1's and 0's	With de-emphasis defined in section 6.7.5.2 (no pre-shoot). Repeating 64 1's and then 64 0's at 10Gb/s. This is not 128b132b encoded.
CP15	64 1's and 0's	With pre-shoot and de-emphasis defined in section 6.7.5.2. Repeating 64 1's and then 64 0's at 10Gb/s. This is not 128b132b encoded.
CP16	64 1's and 0's	No de-emphasis or pre-shoot. Repeating 64 1's and then 64 0's at 10Gb/s. This is not 128b132b encoded.

Note: Unless otherwise noted, scrambling is disabled for compliance patterns.

Mask Template

The mask template can be located within the folders specified below:

C:\Program Files\Keysight\Infiniium\Apps\USB3Test\app\template

- 1 USB3 Gen 1 Far End Mask Template
USB3_0_Template_FarEnd.dat
- 2 USB3 Gen 1 Near End Mask Template
USB3_0_Template_NearEnd.dat
- 3 USB3 Gen 2 Far End Mask Template
USB3_SSP_Template_FarEnd.dat
- 4 USB3 Gen 2 Near End Mask Template
USB3_SSP_Template_NearEnd.dat

InfiniiSim Setup for 5G

Transfer function files can be located within the folders specified below:

C:\Users\Public\Documents\Infiniium\Apps\USB3Test\TransferFunctions

- 1 De-embed keysight fixture (N7015A)
 - a Channel Setting: C to C
N7015A_Deembed__13p5dbLossAt2p5GHz_Embed.tf4
 - b Channel Setting: Captive Device
N7015A_Deembed__6p5dbLossAt2p5GHz_Embed.tf4

- 2 De-embed Keysight fixture (U7242A)

Device Mode

- a Channel Setting: Std A to Std B
U7242A_Deembed__USB3_TX_Device_Channel.tf4
- b Channel Setting: Std A to Micro B
U7242A_Deembed__USB3_MicroB_Channel.tf4
- c Channel Setting: Tethered
U7242A_Deembed__USB3_Tethered_Channel.tf4

Host Mode

- a Channel Setting: Std A to Std B
U7242A_Deembed__USB3_TX_Host_Channel.tf4
- b Channel Setting: Micro AB
U7242A_Deembed__USB3_MicroAB_Channel.tf4

- 3 De-embed USBIF fixture
 - a Std A to Std B
USB3_TX_Device_Channel.tf4
 - b Std A to Micro B
USB3_MicroB_Channel.tf4
 - c Tethered
USB3_Tethered_Channel.tf4
 - d Micro AB
USB3_MicroAB_Channel.tf4
 - e C to C
SSGen1_TxComp12p7dB_Embedding.tf4
 - f Captive Device
SSGen1_TxComp6p5dB_Embedding.tf4

InfiniiSim Setup for 10G

Transfer function files can be located within the folders specified below:

C:\Users\Public\Documents\Infiniium\Apps\USB3Test\TransferFunctions

- 1 De-embed keysight fixture (N7015A)
 - a Channel Setting: C to C
N7015A_Deembed__TypC_TypC_14p1dbAt5GHz_Embed.tf4
 - b Channel Setting: Captive Device
Device Mode
N7015A_Deembed__Mock_Device_Cascaded_Model_8p5dB_rspl.tf4
Host Mode
N7015A_Deembed__Mock_Host_Cascaded_Model_8p5dB_rspl.tf4
- 2 De-embed USBIF fixture
 - a Std A to Std B
SSGen2_TxComp12p2dB_Embedding.tf4
 - b Std A to Micro B
SSGen2_TxComp12p2dB_Embedding.tf4
 - c Std A to C
SSGen2_TxComp12p2dB_Embedding.tf4
 - d C to Std B
SSGen2_TxComp12p2dB_Embedding.tf4
 - e C to Micro B
SSGen2_TxComp12p2dB_Embedding.tf4
 - f C to C
SSGen2_TxComp12p2dB_Embedding.tf4
 - g Captive Device
Device Mode
Mock_Device_Cascaded_Model_8p5dB_rspl.tf4
Host Mode
Mock_Host_Cascaded_Model_8p5dB_rspl.tf4

Index

A

ambient temperature change, [16](#), [17](#)

C

cable change, [17](#)

calibrating the oscilloscope, [17](#)

E

equipment required, [16](#)

G

glossary, [119](#)

I

installation, [9](#)

L

LFPS tests, [26](#), [62](#), [66](#), [75](#)

LFPS tests, connection, [26](#), [34](#), [39](#), [49](#),
[57](#), [62](#), [64](#), [66](#), [72](#), [76](#), [78](#), [83](#), [88](#), [95](#),
[97](#), [101](#), [109](#), [113](#)

license key, installing, [11](#)

N

notices, [3](#)

R

required equipment and software, [16](#)

S

software installation, [10](#)

software required, [16](#)

SSC deviation, [37](#), [86](#), [91](#)

starting the PCI Express automated
test application, [11](#)

T

tests, about the, [25](#), [33](#)

transmitter eye far end (TP1) tests, [39](#),
[49](#), [57](#), [95](#), [97](#), [101](#), [109](#), [113](#)

transmitter SSC tests, [34](#), [83](#), [88](#)

U

U7243C USB3.1 compliance test
application, [3](#)

Unit Interval (with SSC), [36](#), [41](#), [44](#), [47](#),
[48](#), [51](#), [59](#), [60](#), [61](#), [90](#), [98](#), [103](#), [106](#),
[107](#), [115](#), [117](#)

Universal Serial Bus (USB) 3.0
Specification revision 1.0, [3](#)

USB 3.0 automated testing, [3](#)

