

N9910X-888 FieldFox Series Hands-Free Harness Kit

Congratulations, with this instrument you will achieve fast, accurate results with confidence.

CAUTION

- Please use ESD precautions when handling and operating.
- The FieldFox Hands-Free Harness is not approved for use with the A-Series FieldFox models.

— Learn more or for questions: Download the Online Help from keysight.com for your instrument.

— See also www.keysight.com/find/fieldfox

Step 1 Insert FieldFox into its harness glove.



- Access hardkeys and softkeys
- Sunshade for glare reduction (optional)
- Fan opening for cooling
- Optional: kickstand can be outside the glove



Step 2 Adjust straps as needed and install the Fieldfox into the harness glove.

- Put on harness.
- Attach harness glove using clips.
- Adjust straps to fit.

2b. Attach harness bottom strap clips to the D-rings on the glove. Attach top strap clips of harness to the pins on the FieldFox "ears" by first slipping the strap clips through the glove loops.

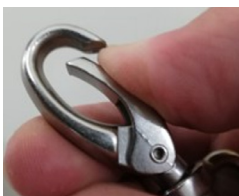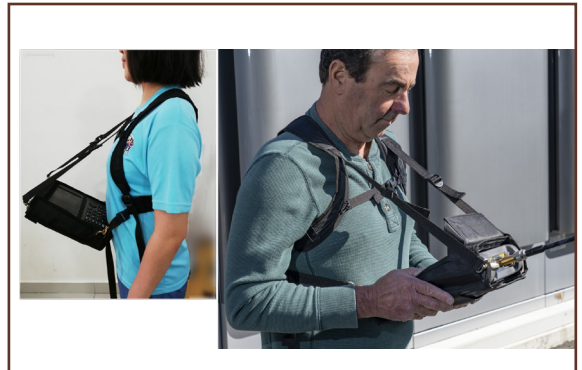

FieldFox features are easily accessible from both sides.



Step 3 Reverse steps 1 and 2 to remove the harness glove assembly (N9953-80001).



Find a Manual · Register Your Instrument
Browse Application Notes
Request Repair or Calibration
View Discussion Forums · Updates

keysight.com



[www.keysight.com/
find/fieldfox](http://www.keysight.com/find/fieldfox)

