


DOCKING PLATE KIT

KEYSIGHT PART NUMBER E5092-60101

QTY.	CONTENTS	PART NO.
2...	DOCKING PLATE ASSEMBLY.....	E5092-60102
2...	TRIM-FR FR SIDE.....	E5052-25121
2...	TRIM-FR FR SIDE.....	5041-9174

CAUTION
 This Docking Plate kit
 is available to use
 with the following condition
 Upper Unit \leq 21 kgf
 Lower Unit \leq 11 kgf

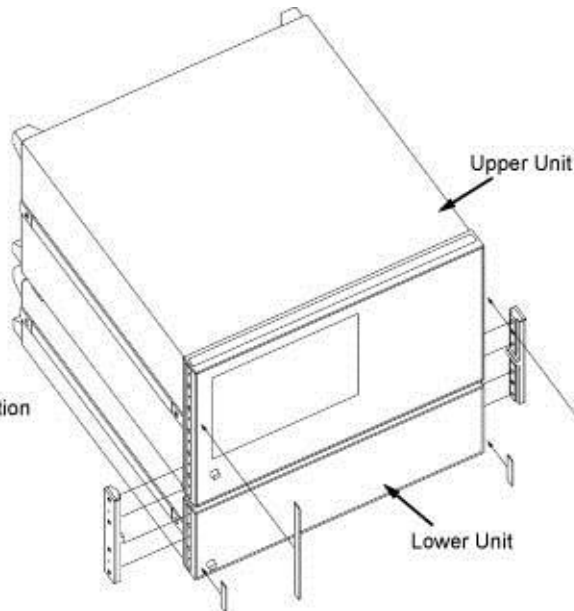

WARNING



DO NOT ATTEMPT TO DOCKING PLATE SEPARATELY WITH HARDWARE PROVIDED.
 LIFT BOTH PRODUCTS AT THE SAME TIME AFTER APPLYING THIS KIT.

INSTRUCTIONS

1. REMOVE SIDE TRIM STRIPS OF BOTH UNITS (UPPER&LOWER).
2. ATTACH DOCKING ASS'Y WITH 4 SCREWS PER SIDE.
3. PASTE THE NEW SIDE TRIM STRIPS TO BOTH UNITS AS ABOVE INSTRUCTION.

INSTRUCTION SHEET NO.E5092-90001

E5092-60101

